

SPECIFICATIONS FOR 8.0" OPEN FRAME MONITOR

PART NUMBER: DATE:

AOM080S5R AUG 26, 2008

1. Introduction:

1.1 About the Product

AOM080S5R 8.0" Open Frame Monitor series are rugged, high performance Industrial LCD Monitors, designed for commercial and industrial applications, such as kiosks, arcade games, ATM Machines aviation simulators, military, medical, marine, security, industrial equipment, and instrumentation equipment. This product can provide high brightness and contrast to achieve better viewing effect.

1.2 Features

8.0 inch SVGA Active Matrix Color TFT LCD Monitor
High Contrast 500:1 Typical
Recommend resolution:800×600(SVGA)
OSD controls: Allow on-screen adjustments of Brightness, Contrast, RGB Auto Color Balance,
H-Position, V position
Multi system Video Input
Quick and easy integrations for Client solutions
Universal AC Power input and auto detection video system.
PMMA (Poly Methyl MethAcrylate) protection (option)
Touch screen (option)

2. Contents

Contents Index	Page
1. Introduction	1
1.1 About the product	1
1.2 Features	1
2. Contents	2
3. Specifications	3
4. Ordering Information	4
5. VGA Input Format	5
6. Mechanical Drawing	6-11
6.1 AOM080S03-000R	6
6.2 AOM080S5U-000R	7
6.3 AOM080S5R-000R	8
6.4 AOM080S03-010R	9
6.5 AOM080S5U-010R	10
6.6 AOM080S5R-010R	11
7. Packing List	12
8. Installing the Monitor	13
8.1 Power Cable Connection	13
8.2 VGA Signal Cable Connection	13
8.3 Video / S-Video Cable Connection	13
8.4 Switch On The Power	13
9. OSD Control	14-
9.1 Menu Operation	14-15
9.2 Operations	16
10. Trouble Shooting	17

3. Specifications

Parameter	Specifications	Unit	Remark
Model Name	AOM080S5R		
Screen Size	8.0" (diagonal)	inch	
Display Format	800 x (R.G.B) x 600	dot	
TFT-LCD Active Area	162 (H) x 121.5 (V)	mm	
Pixel Pitch	0.2025 (H) x 0.2025 (V)	mm	
Contrast Ratio	500:1(Тур.)		
Brightness	350(Тур.)	Cd/m ²	
Viewing Angle	-70~70(H); -70~50(V)(Typ.)	deg	
Outline Dimension	225(W) x 161(H) x 32.6(D)	mm	
	Video and S-video /		
Input/Output Interface	D-Sub 15 pin female for VGA /		
	USB or RS-232 (DB9 Female) for Touch Screen Driver (Option)		
Power Source	100-240V _{AC} 50-60Hz, Universal / +12V _{DC} @ 3A		
Power Consumption	< 7W		
Touch Screen Controller	5 wire Resistive Driver USB/ RS232 (Option)		
Operating Temperature	-10~60	•	
Storage Temperature	-20~70	•	
LED Life Time	20000(Min.)	hr	
Weight	1.2	Kg	

4. Ordering Information

Parameter	AOM080S03-00	0R		AOM080S5U-000R	AOM080S5R-000R
CVBS	1	1	1		
S-Video	1	1	1		
VGA	SVGA (800x	600)		SVGA (800x600)	SVGA (800x600)
Touch Panel Type	-			5W Resistive	5W Resistive
Touch Screen Interface	-	USB			RS-232
РММА	Ø			-	-


Parameter	AOM080S5U-010R	AOM080S5U-010R	AOM080S5R-010R
CVBS			
S-Video			
VGA	SVGA (800x600)	SVGA (800x600)	SVGA (800x600)
Touch Panel Type	-	5W Resistive	5W Resistive
Touch Screen Interface	- USB		RS-232
РММА	Ø	-	-

5. VGA Input Format

	Mode	Family	Family Resolution H-Free		H-Freq. (KHz)		KHz)
1	Mode 1	PC	720x350	31.47	(+)	70.1	(-)
2	Mode 2	PC	720x400	31.47	(-)	70.1	(+)
3	Mode 3	PC	640x480	31.47	(-)	59.9	(-)
4	Mode 4	VESA	640x480	37.86	(-)	72.8	(-)
5	Mode 5	VESA	640x480	37.50	(-)	75.0	(-)
6	Mode 6	VESA	800x600	35.16	(+)	56.3	(+)
7	Mode 7	VESA	800x600	37.88	(+)	60.3	(+)
8	Mode 8	VESA	800x600	48.08	(+)	72.2	(+)
9	Mode 9	VESA	800x600	46.88	(+)	75.0	(+)
10	Mode 10	VESA	1024x768	48.36	(-)	60.0	(-)
11	Mode 11	VESA	1024x768	56.48	(-)	70.1	(-)
12	Mode 12	VESA	1024x768	60.02	(+)	75.0	(+)
13	Mode 13	VESA	1280x1024	63.98	(+)	60.0	(+)
14	Mode 14	VESA	1280x1024	79.98	(+)	75.0	(+)

6. Mechanical Drawing

6.1 AOM080S03-000R

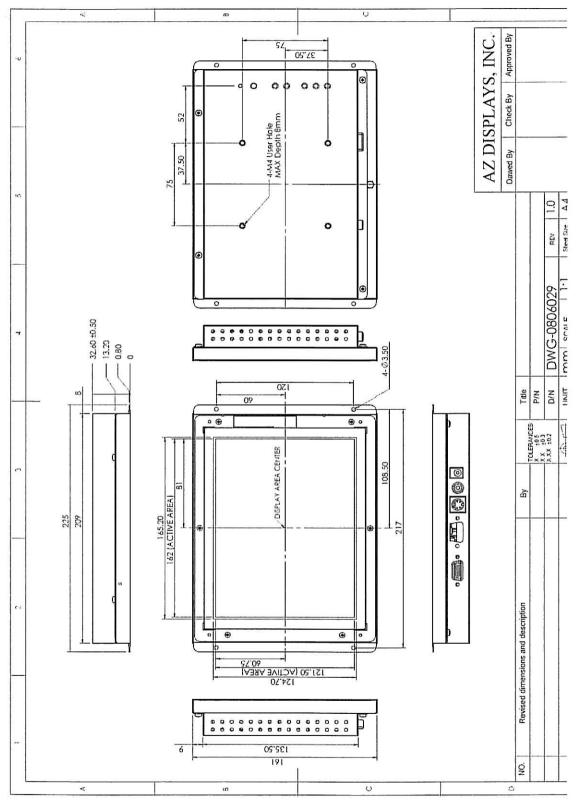


14

AZ DISPLAYS, INC.

PAGE 07 OF 18

مىن بىر مەرىخى

6.1 AOM080S5U-000R

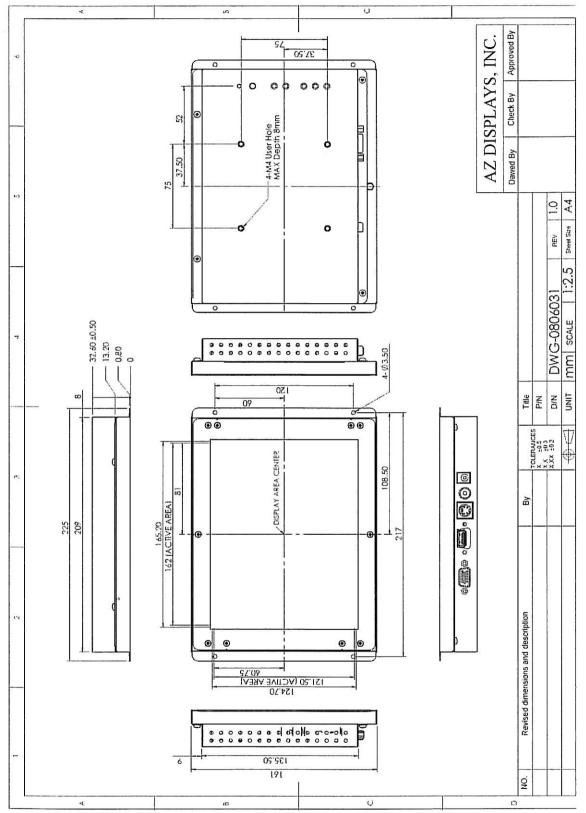


12

AZ DISPLAYS, INC.

هم ز مع

6.3 AOM080S5R-000R

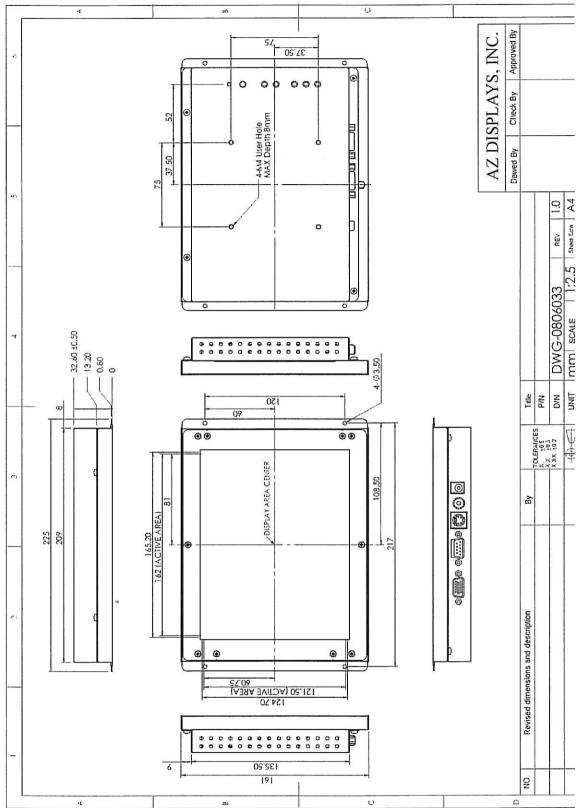


12.

PAGE 09 OF 18

m i fan ser er

AZ DISPLAYS, INC.

6.4 AOM080S03-010R

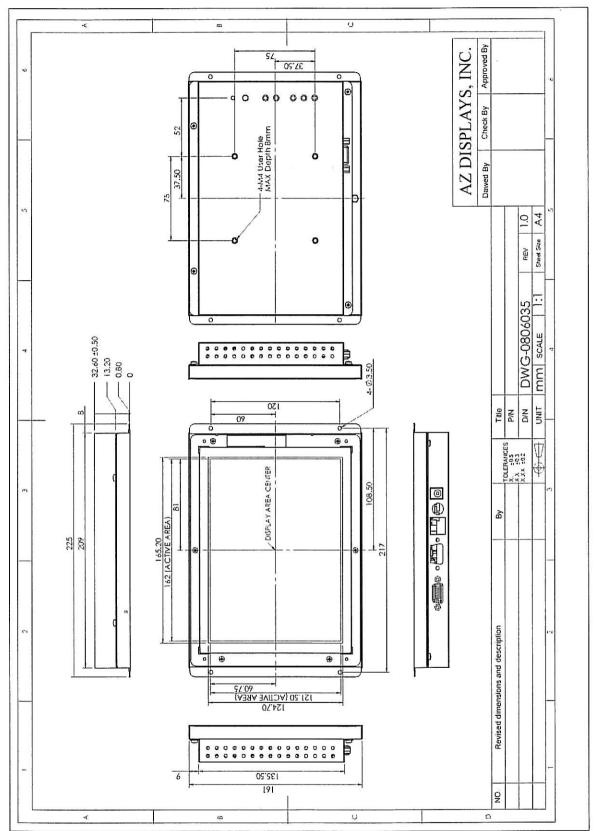


andi L

AZ DISPLAYS, INC.

PAGE 10 OF 18

and the second second

6.5 AOM080S5U-010R

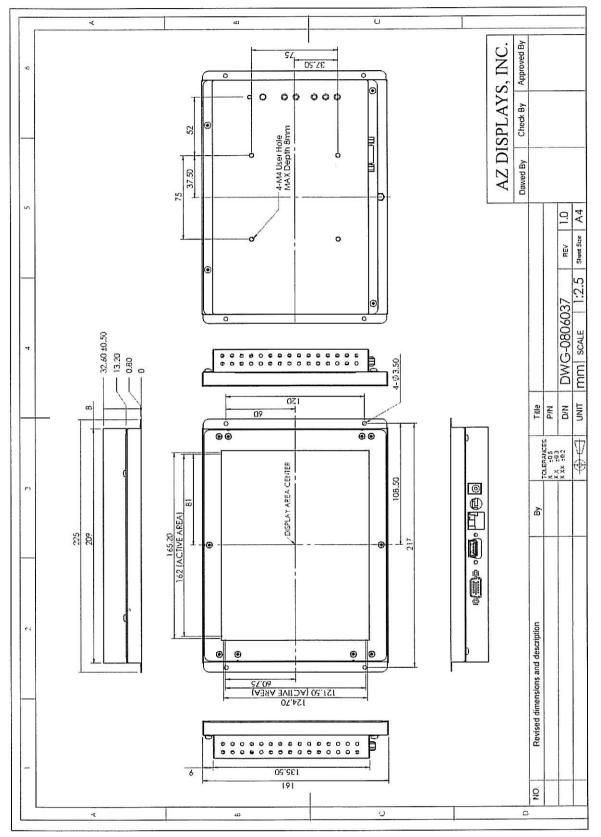


1.4

AZ DISPLAYS, INC.

PAGE 11 OF 18

11

6.6 AOM080S5R-010R

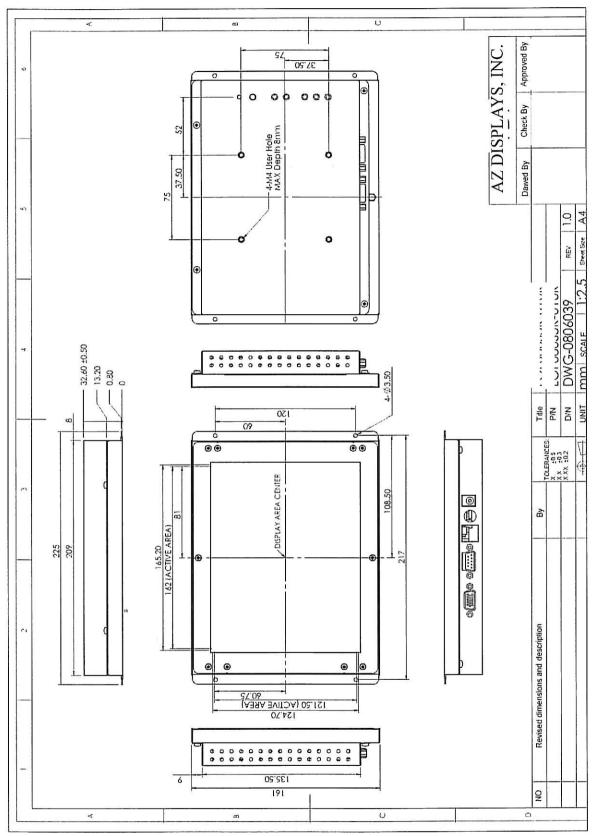

10

AZ DISPLAYS, INC.

PAGE 12 OF 18

r i fr

7. Packing List

Before you begin installing the Open Frame Monitor, please make sure that the following materials have been shipped:



- A. AC to DC Adapter (100-240V_{AC} 50-60Hz or +12V_{DC} @ 3A)
- B. Power Cord
- C. Video Cable(AOM080S<u>xx</u>-000R Only)
- D. S-Video Cable(AOM080Sxx-000R Only)
- E. VGA Cable
- F. USB Cable (AOM080S5U Only)
- G. RS-232 Cable(AOM080S5R Only)
- H. Touch Screen Driver CD Disk(AOM080S5U & AOM080S5R Only) / User Manual

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

8. Installing the Monitor

8.1 Power cable connection:

Connect the power cord to the AC outlet, and connect the power to the monitor through the AC/DC adapter.

8.2 VGA signal cable connection:

Plug one end of the 15-pin signal cable to the VGA connector at the rear of the PC system and the other end to the Open Frame monitor.


Secure the connectors with the screws on the cable connector at both ends.

8.3 Video / S-Video Cable connection:


If required, connect Video / S-Video Cable from the Open Frame Monitor to the DVD or CCD Ca


8.4 Switch on the power:

Switch on the power switch on the rear cover of the Open Frame Monitor.

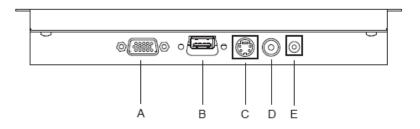

- A. VGA D-sub 15 (Female)
- B. USB / RS-232 Port (For Controller)
- C. S-Video (Y/C Video) In
- D. Video (CVBS) In
- E. DC-In (+12V_{DC} The DC jack core is positive)

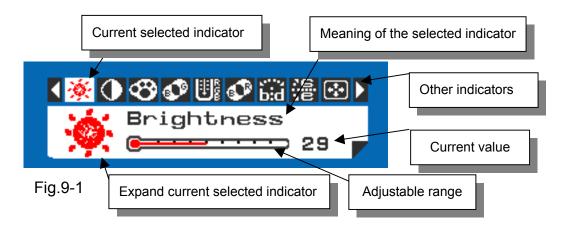

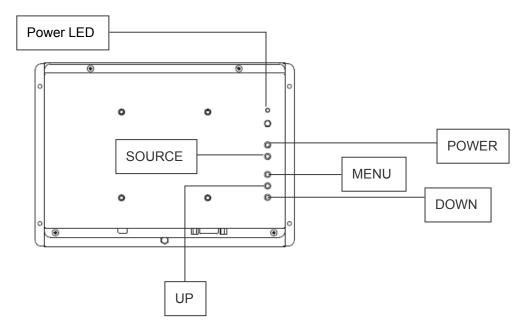

Operations of key board :

- 1. To navigate the menu, press [MENU]. (Fig.9-1)
- 2. The indicator lighting up in white color is the selected adjustment item.
- 3. To Next Item of the menu, press [MENU] again.
- 4. The operations below are only available when "Menu" is started.
- 5. Press [UP] / [DOWN] to adjust the value of the selected item.

AZ DISPLAYS, INC.

PAGE 15 OF 18

Overview of the menu :

Indicator	Meaning	Adjustable range	For	Remark
<u>کې</u>	Brightness	0 64	AV / S-Video / VGA	Adjust-Bar
•	Contrast	0 64	AV / S-Video / VGA /	Adjust-Bar
٩	Color	0 64	AV / S-Video	Adjust-Bar
69	Tint	0 32	AV / S-Video	Adjust-Bar
B	Sharpness	0 16	AV / S-Video	Adjust-Bar
ß	Color Tone	Normal / Warn / Cool	AV / S-Video / VGA	
⊳ d	Mirror	OFF / ON	AV / S-Video / VGA	
2 <mark>6</mark>	Flip	OFF / ON	AV / S-Video / VGA	
	H-Position	-10 +10	VGA	Balance-Bar
	V-Position	-10 +10	VGA Bala	nce-Bar
AUTO	Auto		VGA	
+ ‡+	Scale	Full / 4:3	AV / VGA	
2	Information		AV / VGA	Fig.9-2
5	Memory Recall		AV / VGA	

2		
XINFORMATION		
Video Source	BV1	
Video Source Video System	NTSC	
H-Freq	15.7KHz	
V-Freq	60Hz	
Program Ver	0.10	
Command Ver	0.10	
Image Ver	0 10	

Fig.9-2

AZ DISPLAYS, INC.

PAGE 16 OF 18

9.2 **Operations**

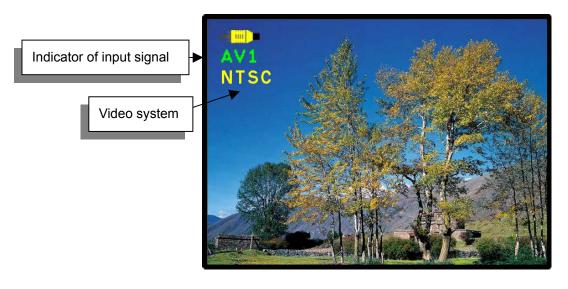


Fig.9-3

[Power] : Monitor power on / off

[Source] : Input signal switch

Overview of input signals :

Indicator	Input signal	Interface	Video system
AV1	AV1	Composite	NTSC / PAL / SECAM
St.	S-Video1	Y/C	NTSC / PAL / SECAM
PC	VGA	Analog RGB	640x480_60 / 800x600_60 / 1024x768_60 / 1280x1024_60

10. Trouble Shooting

If experiencing trouble with the monitor, or it fails to operate correctly, please refer to the following instructions before calling for repairs.

Condition Chec	k Point
1. The picture does not appear	 Check to see that all the I/O and power cables is firmly seated in the socket.
	• Check the Power LED is Lighting When the monitor was turned ON.
	 Check if the brightness control is at the appropriate position, not at the minimum.
2. The screen is not	Check if the I/O signal cable is firmly seated in the socket.
synchronized	 Check if the output level matches the input level.
	Make sure the signal timings of the computer system are within the
	specification of the monitor.
3. The position of the screen is	 Adjust the H-position, and V-position, or perform the auto adjustment
not in the center	Or Memory Recall.
4. The screen is too bright (too	 Check if the brightness or contrast control is at the appropriate
dark).	position, not at the Maximum (Minimum).
5. The Screen is shaking or	Press the Auto adjustment control to adjust. Moving all objects which
waving	emit a magnetic field such as motor or transformer, away from the
	monitor. Check if the specific voltage is applied.
	 Check if the signal timing of the computer system is within the
	specification of monitor.

If you are unable to correct the fault by using this chart, stop using your monitor and contact us.