

# **User's Manual**

# **IE-789026-NS-EM1**

## **Emulation Board**

---

### **Target devices** **μPD789026 Subseries**

[MEMO]

**Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.**

**PC/AT is a trademark of International Business Machines Corporation.**

- **The information in this document is current as of May, 2002. The information is subject to change without notice. For actual design-in, refer to the latest publications of NEC's data sheets or data books, etc., for the most up-to-date specifications of NEC semiconductor products. Not all products and/or types are available in every country. Please check with an NEC sales representative for availability and additional information.**

- No part of this document may be copied or reproduced in any form or by any means without prior written consent of NEC. NEC assumes no responsibility for any errors that may appear in this document.
- NEC does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of NEC semiconductor products listed in this document or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC or others.

- Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of customer's equipment shall be done under the full responsibility of customer. NEC assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.

- While NEC endeavours to enhance the quality, reliability and safety of NEC semiconductor products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in NEC semiconductor products, customers must incorporate sufficient safety measures in their design, such as redundancy, fire-containment, and anti-failure features.

- NEC semiconductor products are classified into the following three quality grades:  
"Standard", "Special" and "Specific". The "Specific" quality grade applies only to semiconductor products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of a semiconductor product depend on its quality grade, as indicated below. Customers must check the quality grade of each semiconductor product before using it in a particular application.

"Standard": Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots

"Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support)

"Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC semiconductor products is "Standard" unless otherwise expressly specified in NEC's data sheets or data books, etc. If customers wish to use NEC semiconductor products in applications not intended by NEC, they must contact an NEC sales representative in advance to determine NEC's willingness to support a given application.

(Note)

(1) "NEC" as used in this statement means NEC Corporation and also includes its majority-owned subsidiaries.

(2) "NEC semiconductor products" means any semiconductor product developed or manufactured by or for NEC (as defined above).

M8E 00.4

# Regional Information

Some information contained in this document may vary from country to country. Before using any NEC product in your application, please contact the NEC office in your country to obtain a list of authorized representatives and distributors. They will verify:

- Device availability
- Ordering information
- Product release schedule
- Availability of related technical literature
- Development environment specifications (for example, specifications for third-party tools and components, host computers, power plugs, AC supply voltages, and so forth)
- Network requirements

In addition, trademarks, registered trademarks, export restrictions, and other legal issues may also vary from country to country.

## **NEC Electronics Inc. (U.S.)**

Santa Clara, California  
Tel: 408-588-6000  
800-366-9782  
Fax: 408-588-6130  
800-729-9288

## **NEC do Brasil S.A.**

Electron Devices Division  
Guarulhos-SP, Brasil  
Tel: 11-6462-6810  
Fax: 11-6462-6829

## **NEC Electronics (Europe) GmbH**

Duesseldorf, Germany  
Tel: 0211-65 03 01  
Fax: 0211-65 03 327

### **• Sucursal en España**

Madrid, Spain  
Tel: 091-504 27 87  
Fax: 091-504 28 60

### **• Succursale Française**

Vélizy-Villacoublay, France  
Tel: 01-30-67 58 00  
Fax: 01-30-67 58 99

### **• Filiale Italiana**

Milano, Italy  
Tel: 02-66 75 41  
Fax: 02-66 75 42 99

### **• Branch The Netherlands**

Eindhoven, The Netherlands  
Tel: 040-244 58 45  
Fax: 040-244 45 80

### **• Branch Sweden**

Taeby, Sweden  
Tel: 08-63 80 820  
Fax: 08-63 80 388

### **• United Kingdom Branch**

Milton Keynes, UK  
Tel: 01908-691-133  
Fax: 01908-670-290

## **NEC Electronics Hong Kong Ltd.**

Hong Kong  
Tel: 2886-9318  
Fax: 2886-9022/9044

## **NEC Electronics Hong Kong Ltd.**

Seoul Branch  
Seoul, Korea  
Tel: 02-528-0303  
Fax: 02-528-4411

## **NEC Electronics Shanghai, Ltd.**

Shanghai, P.R. China  
Tel: 021-6841-1138  
Fax: 021-6841-1137

## **NEC Electronics Taiwan Ltd.**

Taipei, Taiwan  
Tel: 02-2719-2377  
Fax: 02-2719-5951

## **NEC Electronics Singapore Pte. Ltd.**

Novena Square, Singapore  
Tel: 253-8311  
Fax: 250-3583

## Major Revisions in This Edition

| Page                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Throughout                | <ul style="list-style-type: none"> <li>• Addition of description of IE-78K0S-NS-A as supported in-circuit emulator</li> <li>• Addition of NP-H44GB-TQ and NP-H44GB-TQ as supported emulation probes</li> <li>• Deletion of NP-42CU from supported emulation probes</li> </ul>                                                                                                                                                                                                                                                                                                                                                                 |
| pp.12 and 13              | <b>Figure 1-1 System Configuration</b> <ul style="list-style-type: none"> <li>• Change of supply medium of debugger ID78K0S-NS to CD-ROM</li> <li>• Modification of <b>Notes 1 to 3</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| p.15                      | Thorough modification of <b>Table 1-1 Basic Specifications</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| pp.20 to 22               | <b>3.2.1 Overview of clock settings</b> <ul style="list-style-type: none"> <li>• Change of “internal clock” to “clock oscillator”</li> <li>• <b>Figure 3-2 External Circuits Used as System Clock Oscillator</b><br/>Addition of V<sub>ss</sub> pin to figure of <b>(a) Clock oscillator</b></li> <li>• <b>Figure 3-3 When Using Clock That Is Already Mounted on Emulation Board and Figure 3-4 When Using User-Mounted Clock</b><br/>Change of “resonator” in target system to “clock oscillator or external clock”</li> <li>• Change of “clock generator” to “external clock” in <b>Figure 3-5 When Using an External Clock</b></li> </ul> |
| p.29 in previous revision | Deletion of <b>3.4 Low-Voltage Emulation Setting</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| p.27                      | Addition of <b>3.3 Power Supply Voltage Setting of Target Interface</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| p.29                      | <b>3.5 Switch and Jumper Settings on IE-78K0S-NS or IE-78K0S-NS-A</b> <ul style="list-style-type: none"> <li>• Addition of <b>Caution</b></li> <li>• Addition of <b>(2) Settings on the IE-78K0S-NS-A</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                          |
| p.35                      | Addition of <b>APPENDIX B CAUTIONS ON DESIGNING TARGET SYSTEM</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

The mark ★ shows major revised points.

## INTRODUCTION

### Product Overview

The IE-789026-NS-EM1 is designed to be used with the IE-78K0S-NS or IE-78K0S-NS-A to debug the following target devices that belong to the 78K/0S Series of 8-bit single-chip microcontrollers.

- $\mu$ PD789026 Subseries:  $\mu$ PD789022, 789024, 789025, 789026, 78F9026

### Target Readers

This manual is intended for engineers who will use the IE-789026-NS-EM1 with the IE-78K0S-NS or IE-78K0S-NS-A to perform system debugging.

Engineers who use this manual are expected to be thoroughly familiar with the target device's functions and use methods and to be knowledgeable about debugging.

### Organization

When using the IE-789026-NS-EM1, refer to not only this manual (supplied with the IE-789026-NS-EM1) but also the manual that is supplied with the IE-78K0S-NS or IE-78K0S-NS-A.

|                              |
|------------------------------|
| IE-78K0S-NS<br>User's Manual |
|------------------------------|

- Basic specifications
- System configuration
- External interface functions

|                                |
|--------------------------------|
| IE-78K0S-NS-A<br>User's Manual |
|--------------------------------|

- Basic specifications
- System configuration
- External interface functions

|                                   |
|-----------------------------------|
| IE-789026-NS-EM1<br>User's Manual |
|-----------------------------------|

- General
- Part names
- Installation
- Differences between target devices and target interface circuits

### Purpose

This manual's purpose is to explain various debugging functions that can be performed when using the IE-789026-NS-EM1.

## Terminology

The meanings of certain terms used in this manual are listed below.

| Term             | Meaning                                                                                                                                    |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Emulation device | This is a general term that refers to the device in the emulator that is used to emulate the target device. It includes the emulation CPU. |
| Emulation CPU    | This is the CPU block in the emulator that is used to execute user-generated programs.                                                     |
| Target device    | This is the device to be emulated (real chip).                                                                                             |
| Target system    | This includes the target program and the hardware provided by the user. When defined narrowly, it includes only the hardware.              |
| IE system        | This refers to the combination of the IE-78K0S-NS or IE-78K0S-NS-A and the IE-789026-NS-EM1.                                               |

## Conventions

Data significance: Higher digits on the left and lower digits on the right

**Note:** Footnote for item marked with **Note** in the text

**Caution:** Information requiring particular attention

**Remark:** Supplementary information

## Related Documents

The related documents (user's manuals) indicated in this publication may include preliminary versions. However, preliminary versions are not marked as such.

| Document Name                                                                         | Document Number |
|---------------------------------------------------------------------------------------|-----------------|
| IE-78K0S-NS                                                                           | U13549E         |
| IE-78K0S-NS-A                                                                         | U15207E         |
| IE-789026-NS-EM1                                                                      | This manual     |
| ID78K0-NS, ID78K0S-NS Integrated Debugger Ver. 2.20 or Later Operation Windows™ Based | U14910E         |
| μPD789026 Subseries                                                                   | U11919E         |

**Caution** The documents listed above are subject to change without notice. Be sure to use the latest documents when designing.

## CONTENTS

|                     |                                                                       |           |
|---------------------|-----------------------------------------------------------------------|-----------|
| <b>CHAPTER 1</b>    | <b>GENERAL</b>                                                        | <b>11</b> |
| 1.1                 | System Configuration                                                  | 12        |
| 1.2                 | Hardware Configuration                                                | 14        |
| 1.3                 | Basic Specifications                                                  | 15        |
| <b>CHAPTER 2</b>    | <b>PART NAMES</b>                                                     | <b>16</b> |
| 2.1                 | Parts of Main Unit                                                    | 17        |
| <b>CHAPTER 3</b>    | <b>INSTALLATION</b>                                                   | <b>18</b> |
| 3.1                 | Connection                                                            | 19        |
| 3.2                 | Clock Settings                                                        | 20        |
| 3.2.1               | Overview of clock settings                                            | 20        |
| 3.2.2               | Main system clock settings                                            | 22        |
| ★ 3.3               | Power Supply Voltage Setting of Target Interface                      | 27        |
| 3.4                 | External Trigger                                                      | 28        |
| 3.5                 | Switch and Jumper Settings on IE-78K0S-NS or IE-78K0S-NS-A            | 29        |
| <b>CHAPTER 4</b>    | <b>DIFFERENCES BETWEEN TARGET DEVICE AND TARGET INTERFACE CIRCUIT</b> | <b>30</b> |
| <b>APPENDIX A</b>   | <b>EMULATION PROBE PIN ASSIGNMENT TABLE</b>                           | <b>34</b> |
| ★ <b>APPENDIX B</b> | <b>CAUTIONS ON DESIGNING TARGET SYSTEM</b>                            | <b>35</b> |

## LIST OF FIGURES

| Figure No. | Title                                                                               | Page |
|------------|-------------------------------------------------------------------------------------|------|
| 1-1        | System Configuration .....                                                          | 12   |
| 1-2        | Basic Hardware Configuration .....                                                  | 14   |
| 2-1        | IE-789026-NS-EM1 Part Names .....                                                   | 17   |
| 3-1        | Connection of Emulation Probe .....                                                 | 19   |
| 3-2        | External Circuits Used as System Clock Oscillator .....                             | 20   |
| 3-3        | When Using Clock That Is Already Mounted on Emulation Board .....                   | 21   |
| 3-4        | When Using User-Mounted Clock .....                                                 | 21   |
| 3-5        | When Using an External Clock .....                                                  | 22   |
| 3-6        | Connections on Parts Board (When Using User-Mounted Clock) .....                    | 23   |
| 3-7        | Crystal Oscillator (When Using User-Mounted Clock) .....                            | 25   |
| 3-8        | Pin Alignment of Crystal Oscillator and Socket .....                                | 25   |
| 3-9        | Connection of TP1 and Power Supply Voltage of Target System .....                   | 27   |
| 3-10       | External Trigger Input Position .....                                               | 28   |
| 4-1        | Equivalent Circuit 1 of Emulation Circuit .....                                     | 32   |
| 4-2        | Equivalent Circuit 2 of Emulation Circuit .....                                     | 33   |
| 4-3        | Equivalent Circuit 3 of Emulation Circuit .....                                     | 33   |
| B-1        | Distance Between In-Circuit Emulator and Conversion Socket/Conversion Adapter ..... | 35   |
| B-2        | Connection Condition of Target System (When NP-H44GB-TQ Is Used) .....              | 36   |

## LIST OF TABLES

| Table No. | Title                                                  | Page |
|-----------|--------------------------------------------------------|------|
| 1-1       | Basic Specifications.....                              | 15   |
| 3-1       | Main System Clock Settings .....                       | 22   |
| 3-2       | Switch and Jumper Settings on IE-78K0S-NS.....         | 29   |
| 3-3       | Switch and Jumper Settings on IE-78K0S-NS-A .....      | 29   |
| A-1       | NP-44GB, NP-44GB-TQ, NP-H44GB-TQ Pin Assignments ..... | 34   |

## CHAPTER 1 GENERAL

The IE-789026-NS-EM1 is a development tool for efficient debugging of hardware or software when using one of the following target devices that belong to the 78K/0S Series of 8-bit single-chip microcontrollers.

This chapter describes the IE-789026-NS-EM1's system configuration and basic specifications.


- Target devices
  - $\mu$ PD789026 Subseries

## 1.1 System Configuration

Figure 1-1 illustrates the IE-789026-NS-EM1's system configuration.

★

**Figure 1-1. System Configuration**

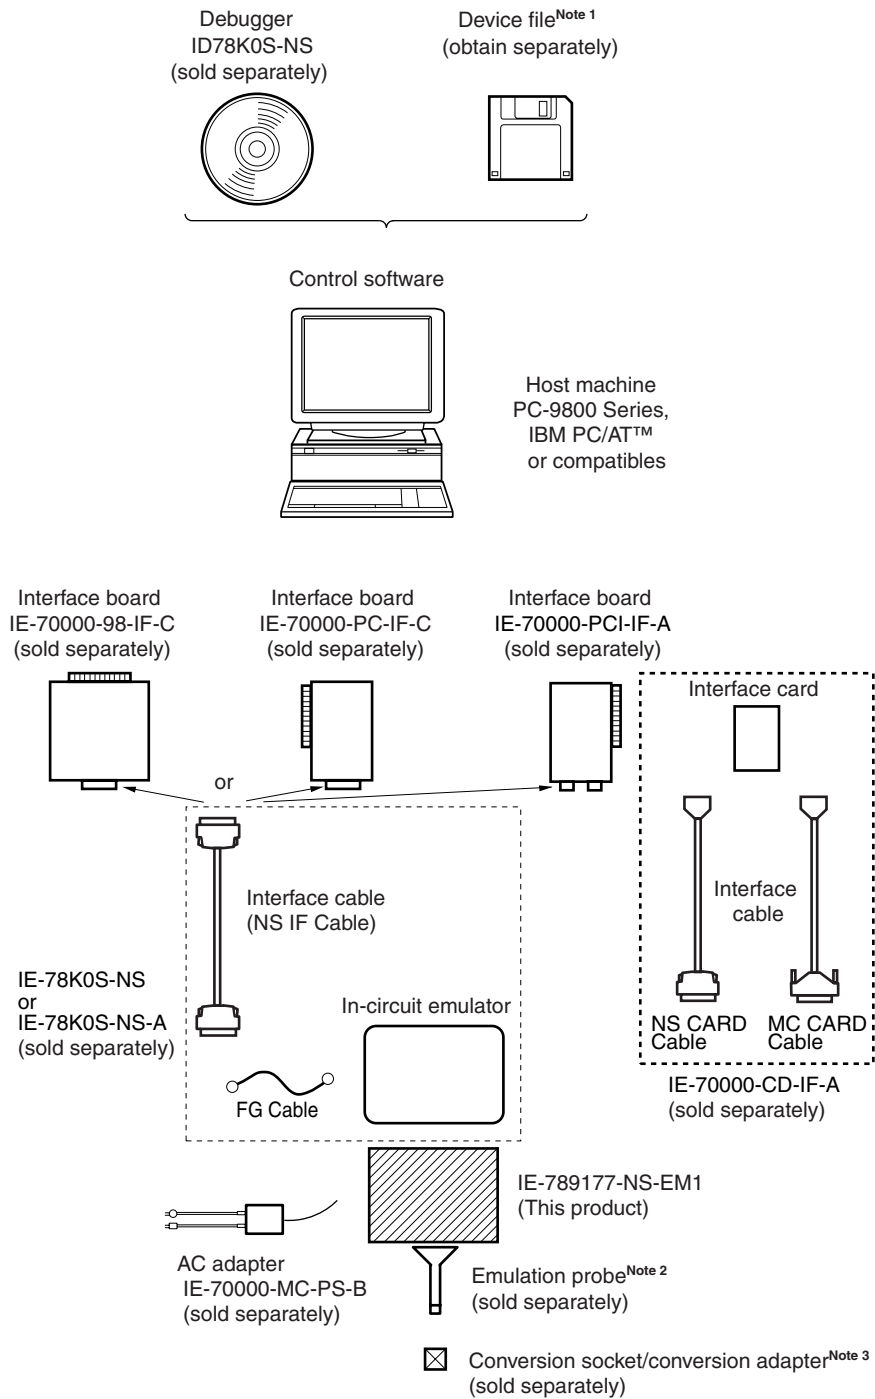

**Notes** 1. The device file is as follows, in accordance with the subseries.

$\mu$ SxxxxDF789026:  $\mu$ PD789022, 789024, 789025, 789026, 78F9026A

Device files can be downloaded from the NEC Electron Devices Web site  
(URL: <http://www.ic.nec.co.jp/micro>).

2. The emulation probe is as follows, in accordance with the package.

NP-44GB, NP-44GB-TQ, NP-H44GB-TQ: 44-pin plastic QFP (GB-8ES type)

The NP-44GB, NP-44GB-TQ, and NP-H44GB-TQ are products made by Naito Densei Machida Mfg. Co., Ltd.

For further information, contact Naito Densei Machida Mfg. Co., Ltd. (TEL: +81-45-475-4191)

3. The conversion socket and conversion adapter are as follows.

EV-9200G-44: 44-pin plastic QFP (GB-8ES type)

TGB044SAP: 44-pin plastic QFP (GB-8ES type)

TGB044SAP is a product of TOKYO ELETECH CORPORATION.

For further information, contact Daimaru Kogyo Co., Ltd.


Tokyo Electronics Department: +81-3-3820-7112

Osaka Electronics Department: +81-6-6244-6672

## 1.2 Hardware Configuration

Figure 1-2 shows the IE-789026-NS-EM1's position in the basic hardware configuration.

**Figure 1-2. Basic Hardware Configuration**

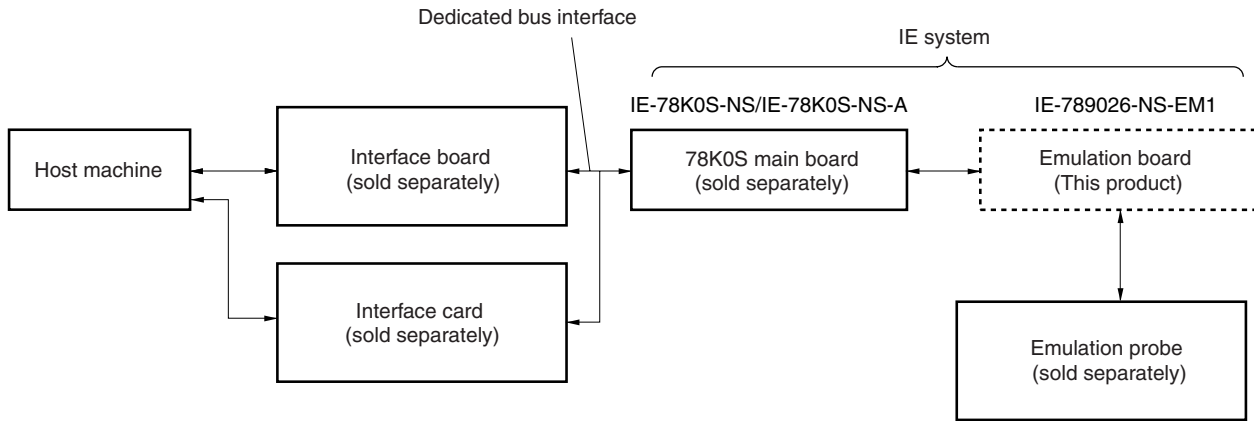

### 1.3 Basic Specifications

The IE-789026-NS-EM1's basic specifications are listed in Table 1-1.

★

**Table 1-1. Basic Specifications**

| Parameter                | Description                                                                                                                                          |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Target device            | $\mu$ PD789026 Subseries                                                                                                                             |
| System clock             | Main system clock: 1.0 to 5.0 MHz                                                                                                                    |
| Main system clock supply | External: Input via an emulation probe from the target system<br>Internal: Mounted on emulation board (5.0 MHz), or mounted on the board by the user |
| Target interface voltage | $V_{DD} = 1.8$ to 5.5 V (same as that of target device)<br>Operates on internal power supply (5 V) when target system is not connected               |

## CHAPTER 2 PART NAMES

This chapter introduces the parts of the IE-789026-NS-EM1 main unit.


The packing box contains the emulation board (IE-789026-NS-EM1), packing list, user's manual, and guarantee card.

If there are any missing or damaged items, please contact an NEC sales representative.

Fill out and return the guarantee card that comes with the main unit.

2.1 Parts of Main Unit

Figure 2-1. IE-789026-NS-EM1 Part Names

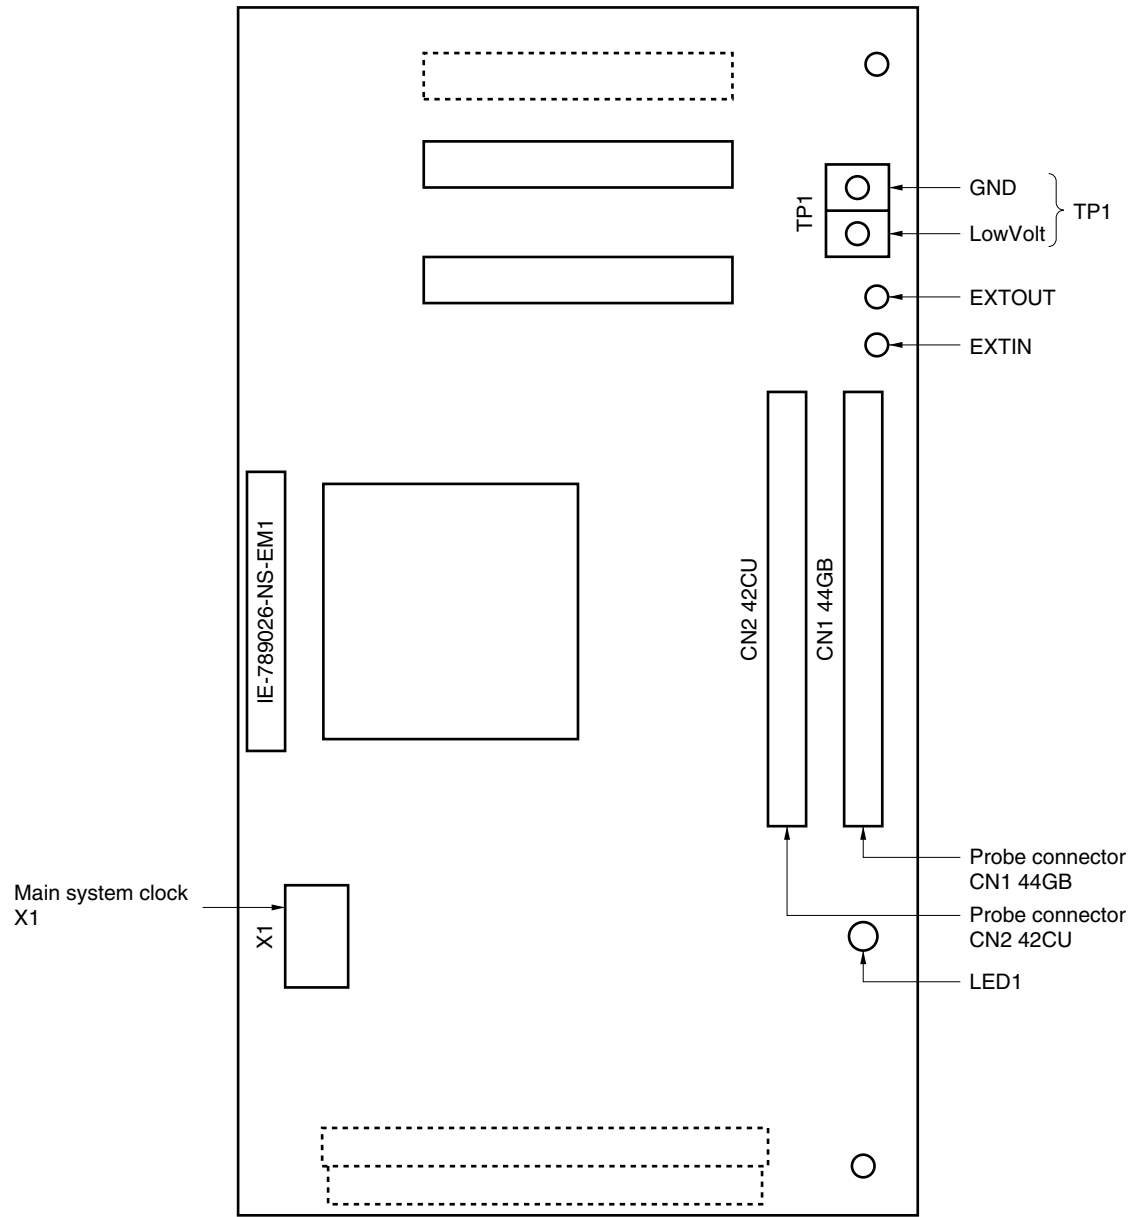

## CHAPTER 3 INSTALLATION

This chapter describes methods for connecting the IE-789026-NS-EM1 to the IE-78K0S-NS or IE-78K0S-NS-A, emulation probe, etc. Mode setting methods are also described.

**Caution**    **Connecting or removing components to or from the target system, or making switch or other setting changes must be carried out after the power supply to both the IE system and the target system has been switched OFF.**

### 3.1 Connection

#### (1) Connection with IE-78K0S-NS or IE-78K0S-NS-A main unit

See the **IE-78K0S-NS User's Manual (U13549E)** for a description of how to connect the IE-789026-NS-EM1 to the IE-78K0S-NS<sup>Note</sup>.

**Note** When using the IE-78K0S-NS-A, see the **IE-78K0S-NS-A User's Manual (U15207E)**.

#### (2) Connection with emulation probe

See the **IE-78K0S-NS User's Manual (U13549E)** for a description of how to connect an emulation probe to the IE-789026-NS-EM1<sup>Note</sup>.


On this board, connect NP-44GB to CN1.

**Note** When using the IE-78K0S-NS-A, see the **IE-78K0S-NS-A User's Manual (U15207E)**.

**Caution** Incorrect connection may damage the IE system.

Be sure to read the emulation probe's user's manual for a detailed description of the connection method.

Figure 3-1. Connection of Emulation Probe

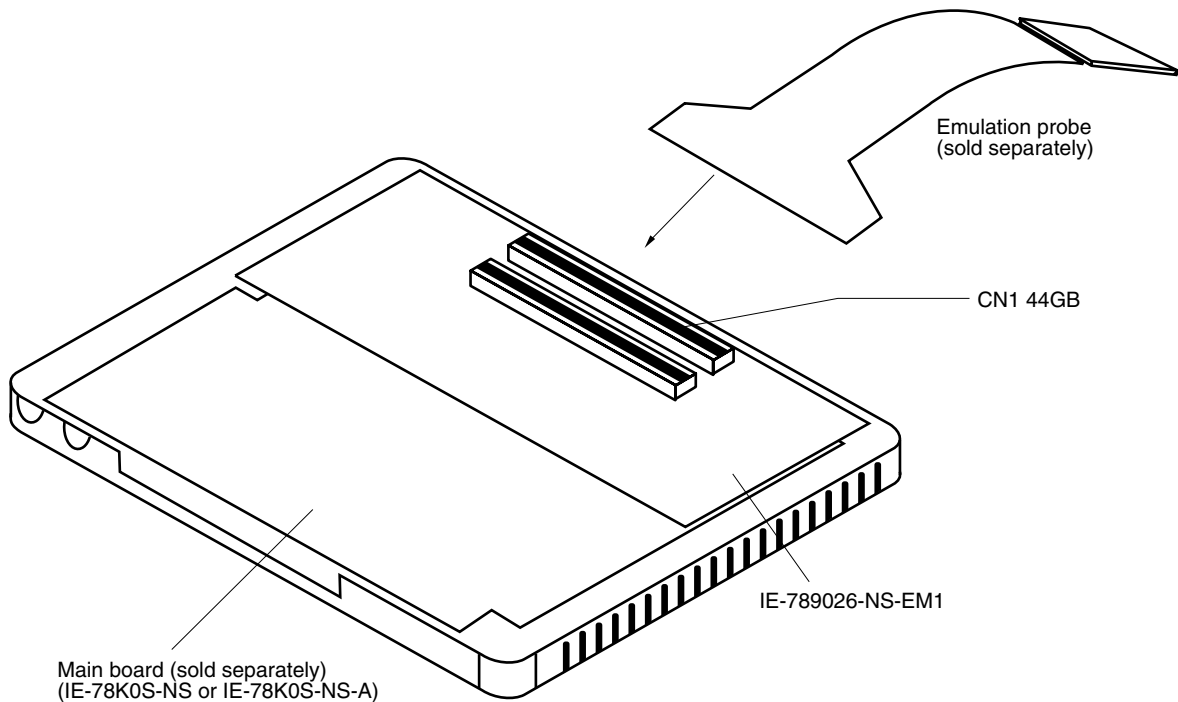

## 3.2 Clock Settings

### 3.2.1 Overview of clock settings

The main system clock to be used during debugging can be selected from (1) to (3) below.

- (1) Clock that is already mounted on emulation board
- (2) Clock that is mounted by user
- (3) Pulse input from target system


★ If the target system includes a clock oscillator, select either “(1) Clock that is already mounted on emulation board” or “(2) Clock that is mounted by user”. For the clock oscillator, a resonator is connected to the target device and the target device’s internal oscillator is used. An example of the external circuit is shown in part (a) of Figure 3-2. During emulation, the oscillator that is mounted on the target system is not used. Instead, the clock that is mounted on the emulation board installed in the IE-78K0S-NS or IE-78K0S-NS-A is used.

If the target system includes an external clock, select “(3) Pulse input from target system”.

For the external clock, a clock signal is supplied from outside of the target device and the target device’s internal oscillator is not used. An example of the external circuit is shown in part (b) of Figure 3-2.

**Caution** The IE system will be hung-up if the main system clock is not supplied normally. Moreover, be sure to input a rectangular wave as the clock from the target. There is no need to supply a clock to the X2 pin.

**Figure 3-2. External Circuits Used as System Clock Oscillator**

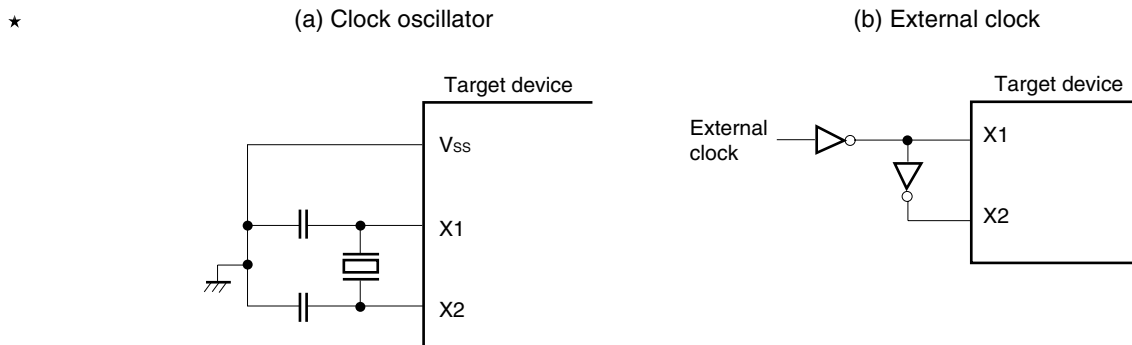


**(1) Clock that is already mounted on emulation board**

A crystal oscillator (X1) is already mounted on the emulation board. Its frequency is 5.0 MHz.

★

**Figure 3-3. When Using Clock That Is Already Mounted on Emulation Board**

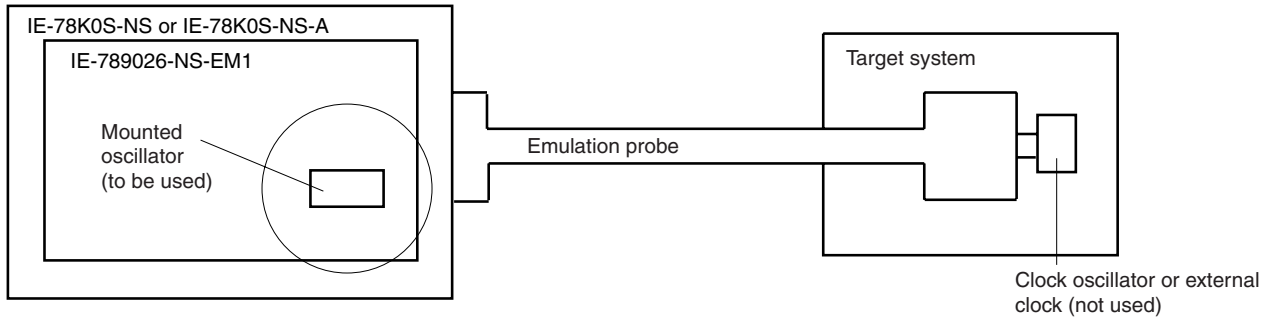

**Remark** The clock that is supplied by the IE-789026-NS-EM1's oscillator (encircled in the figure) is used.


**(2) Clock that is mounted by user**

The user is able to mount any clock supported by the set specifications on the IE-789026-NS-EM1.

Remove the crystal oscillator (X1) that is already mounted on the emulation board, and mount the parts board on which the resonator to be used is mounted or the oscillator to be used. This method is useful when using a different frequency from that of the pre-mounted clock.

★

**Figure 3-4. When Using User-Mounted Clock**

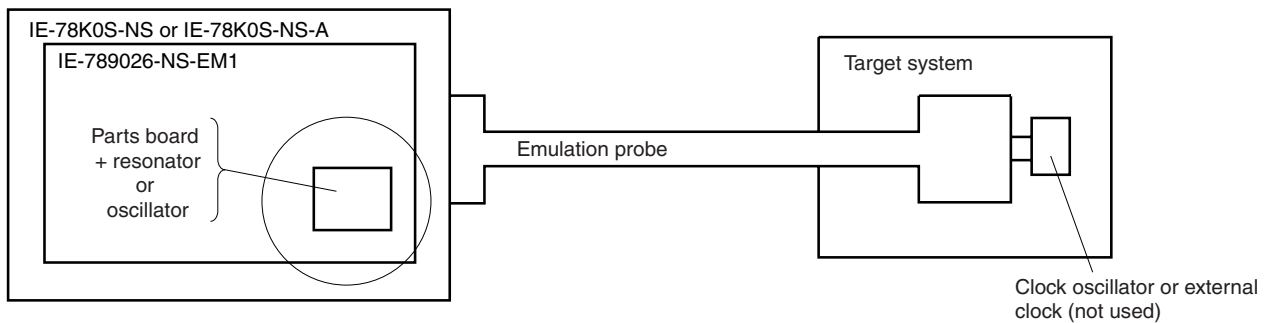


**Remark** The clock that is supplied by the parts board on which the IE-789026-NS-EM1's resonator is mounted or by the oscillator (encircled in the figure) is used.

**(3) Pulse input from target system**

An external clock connected to the target system can be used via an emulation probe.

★

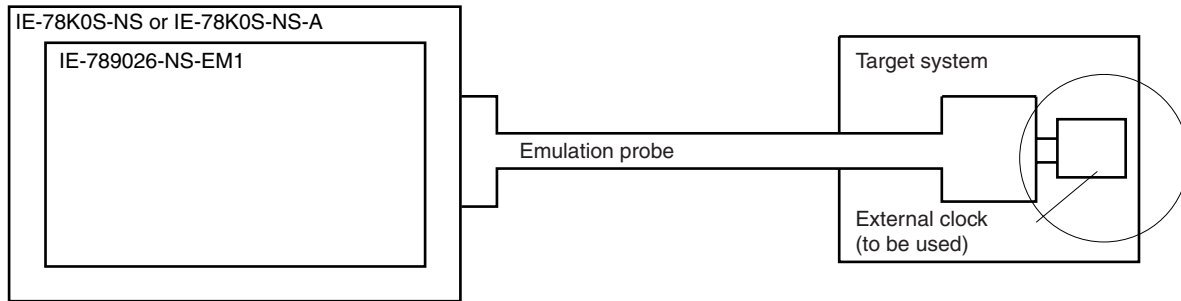**Figure 3-5. When Using an External Clock**

**Remark** The clock supplied by the target system's external clock (encircled in the figure) is used.

**3.2.2 Main system clock settings****Table 3-1. Main System Clock Settings**

| Frequency of Main System Clock                              |                    | IE-789026-NS-EM1              | CPU Clock Source Selection (ID) |
|-------------------------------------------------------------|--------------------|-------------------------------|---------------------------------|
|                                                             |                    | X1 Socket                     |                                 |
| When using clock that is already mounted on emulation board | 5.0 MHz            | Oscillator used               | Internal                        |
| When using clock mounted by user                            | Other than 5.0 MHz | Oscillator configured by user |                                 |
| When inputting pulse from target system                     |                    | Oscillator (not used)         | External                        |

**Caution** When inputting a pulse from the target system, open the configuration dialog box when starting the integrated debugger (ID78K0S-NS) and select “External” in the area (Clock) for selecting the CPU’s clock source (this selects the user’s clock).

**Remark** The IE-789026-NS-EM1’s factory settings are those listed above under “when using clock that is already mounted on emulation board”.

**(1) When using clock that is already mounted on emulation board**

When the IE-789026-NS-EM1 is shipped, a 5.0-MHz crystal oscillator is already mounted in the IE-789026-NS-EM1’s X1 socket. When using the factory-set mode settings, there is no need to make any other hardware settings.

When starting the integrated debugger (ID78K0S-NS), open the configuration dialog box and select “Internal” in the area (Clock) for selecting the CPU’s clock source (this selects the emulator’s internal clock).

## (2) When using clock mounted by user

The settings described under either (a) or (b) are required, depending on the type of clock to be used.

When starting the integrated debugger (ID78K0S-NS), open the configuration dialog box and select "Internal" in the area (Clock) for selecting the CPU's clock source (this selects the emulator's internal clock).

### (a) When using a ceramic resonator or crystal resonator

- Items to be prepared


- Parts board
- Ceramic resonator or crystal resonator
- Resistor Rx
- Capacitor CA
- Capacitor CB
- Solder kit

<Steps>

- <1> Solder the target ceramic resonator or crystal resonator, resistor Rx, capacitor CA, and capacitor CB (all with suitable oscillation frequencies) onto the supplied parts board (as shown below).


**Figure 3-6. Connections on Parts Board (When Using User-Mounted Clock)**

Parts board (X1)

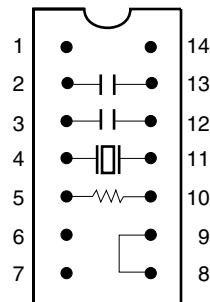

| Pin No. | Connection                             |
|---------|----------------------------------------|
| 2-13    | Capacitor CA                           |
| 3-12    | Capacitor CB                           |
| 4-11    | Ceramic resonator or crystal resonator |
| 5-10    | Resistor Rx                            |
| 8-9     | Shorted                                |

Circuit diagram

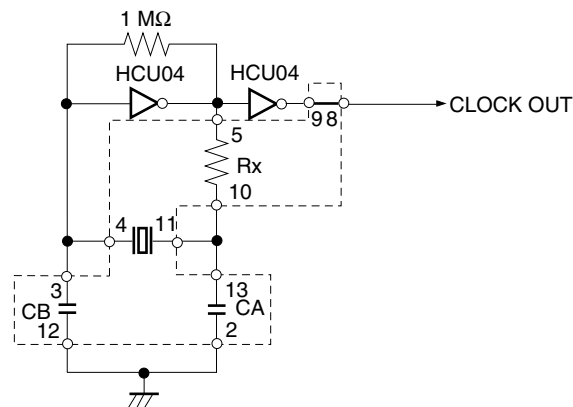


**Remark** The sections enclosed in broken lines indicate parts that are attached to the parts board.

- <2> Prepare the IE-789026-NS-EM1.
- <3> Remove the crystal oscillator that is mounted in the IE-789026-NS-EM1's X1 socket.
- <4> Connect the parts board (from <1> above) to the X1 socket from which the crystal oscillator was removed. Check the pin 1 mark to make sure the board is mounted in the correct direction.
- <5> Make sure that the parts board is wired as shown in Figure 3-6 above.
- <6> Install the IE-789026-NS-EM1 in the IE-78K0S-NS or IE-78K0S-NS-A.

The above steps configure the following circuit and enable supply of the clock from the mounted resonator to the emulation device.

**IE-78K0S-NS or IE-78K0S-NS-A side  
(Emulation device)**

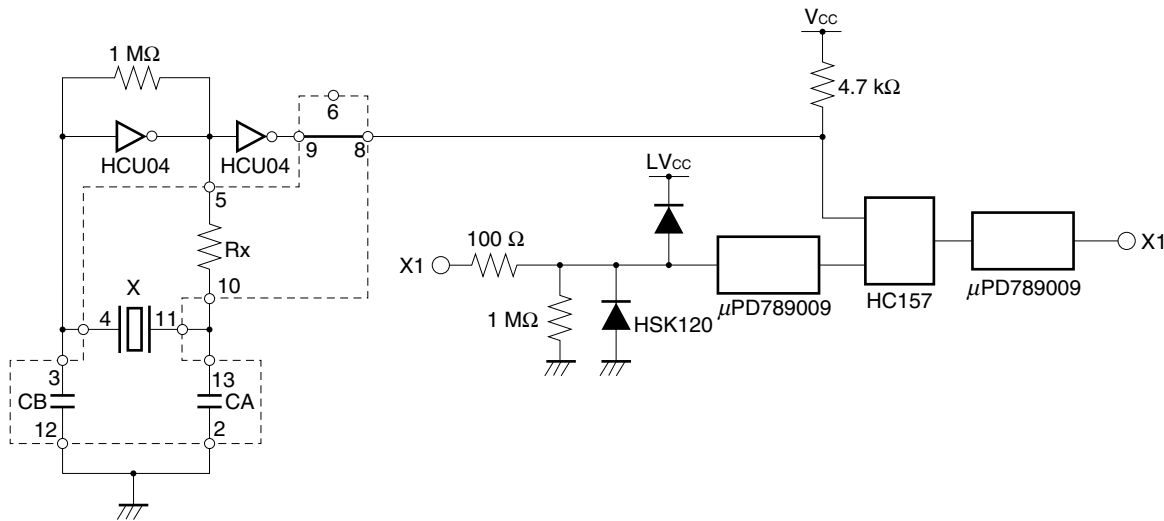


**Remark** The sections enclosed in broken lines indicate parts that are attached to the parts board.

(b) When using a crystal oscillator

- Items to be prepared
  - Crystal oscillator (see pinouts shown in Figure 3-7)


**Figure 3-7. Crystal Oscillator (When Using User-Mounted Clock)**

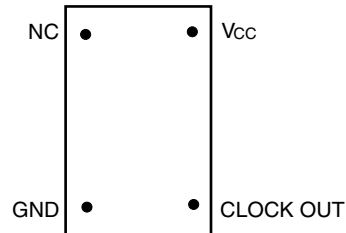

<Steps>


- <1> Prepare the IE-789026-NS-EM1.
- <2> Remove the crystal oscillator that is mounted in the IE-789026-NS-EM1's X1 socket.
- <3> Connect a crystal oscillator to the X1 socket from which the crystal oscillator was removed (in <2> above). Insert the crystal oscillator pin into the socket aligning the pins as shown in the figure below.

**Figure 3-8. Pin Alignment of Crystal Oscillator and Socket**

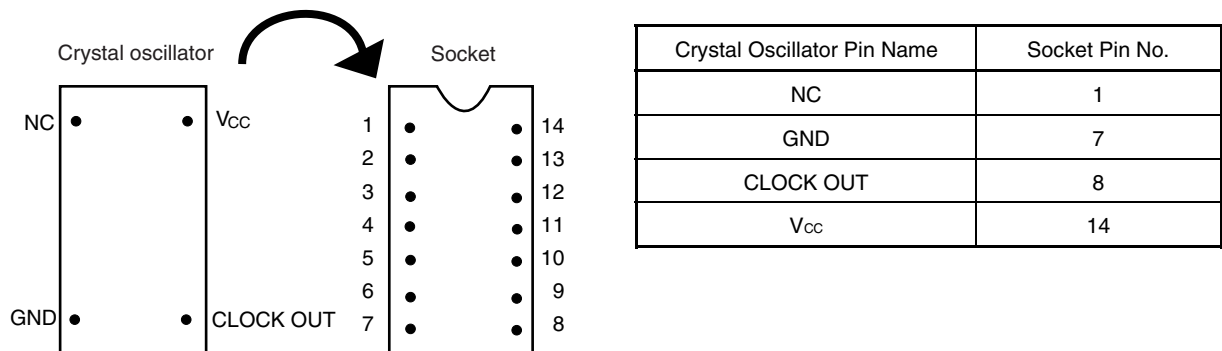

- <4> Install the IE-789026-NS-EM1 in the IE-78K0S-NS or IE-78K0S-NS-A.

The above steps configure the following circuit and enable supply of the clock from the mounted resonator to the emulation device.

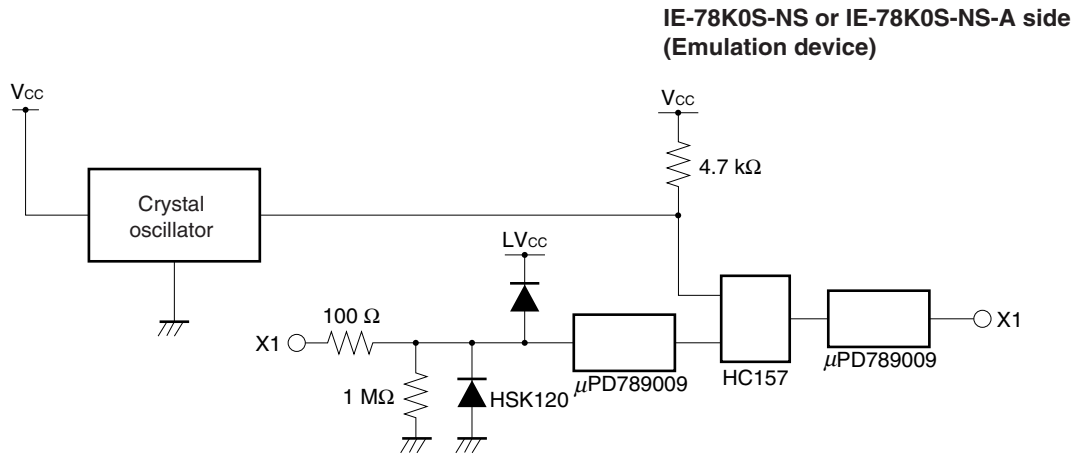

### (3) When inputting pulse from target system

No hardware settings are required for this situation.

When starting the integrated debugger (ID78K0S-NS), open the configuration dialog box and select "External" in the area (Clock) for selecting the CPU's clock source (this selects the user's clock).

### ★ 3.3 Power Supply Voltage Setting of Target Interface


In the IE system, emulation is possible with a voltage of the same level as the power supply voltage of the target system.

When the target system is not connected, the IE system automatically operates with the emulator's internal power supply (5 V). When debugging with a voltage that is the same level as that of the target system, supply the same voltage as that of the target system to the TP1 terminal pin of the IE-789026-NS-EM1 (the same applies when the voltage is 5 V).

Set the target voltage to between 1.8 and 5.0 V.

- Maximum current consumption of TP1  
1.8 to 5.0 V: Approximately 100 mA

**Figure 3-9. Connection of TP1 and Power Supply Voltage of Target System**

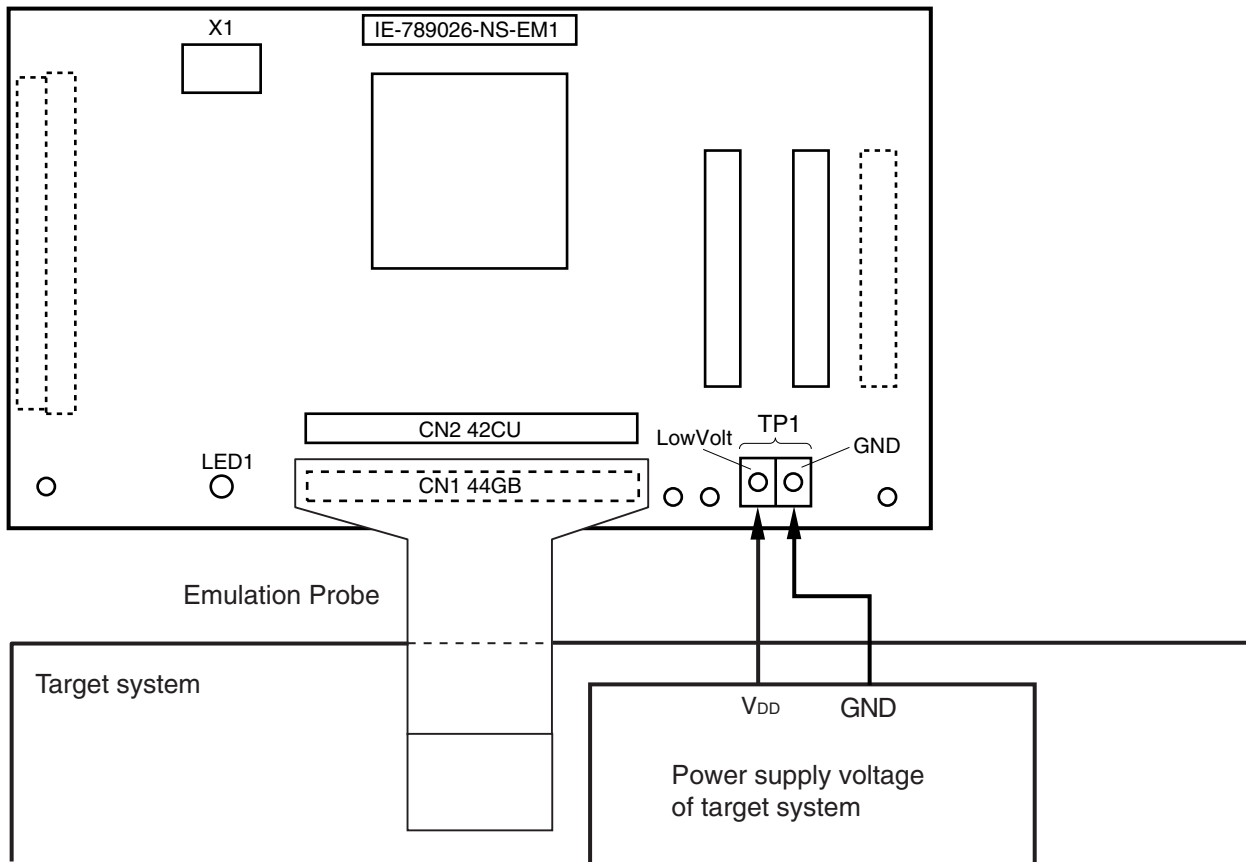

**Caution** Connect TP1 on the board and the power supply voltage of the target system after turning off the power of the IE-78K0S-NS or IE-78K0S-NS-A.

**Remark** The VDD pin of the target system is only used for controlling LED1 (TVCC), which monitors whether the power supply of the target system is connected in the IE-789026-NS-EM1.


### 3.4 External Trigger

To set up an external trigger, connect the IE-789026-NS-EM1's check pins EXTOUT and EXTIN, as shown below.

See the **IE-78K0S-NS User's Manual (U13549E)** or **IE-78K0S-NS-A User's Manual (U15207E)** for pin characteristics.

For the use methods, see the **ID78K0-NS, ID78K0S-NS Integrated Debugger Ver.2.20 or Later Operation (Windows Based) User's Manual (U14910E)**.

Figure 3-10. External Trigger Input Position

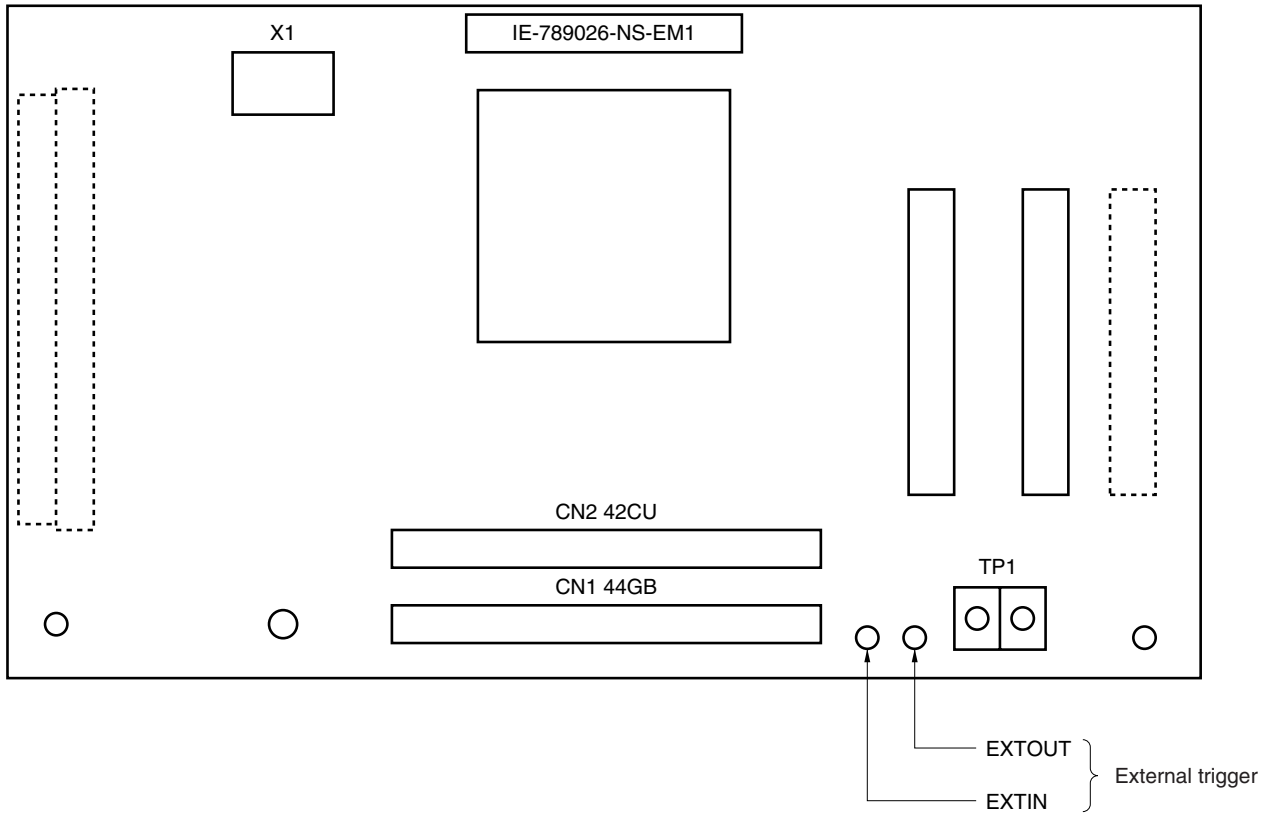

### 3.5 Switch and Jumper Settings on IE-78K0S-NS or IE-78K0S-NS-A

#### (1) Settings on the IE-78K0S-NS

When using the IE-789026-NS-EM1, set the switches and jumpers on the IE-78K0S-NS as shown in Table 3-2. For details of these switch and jumper settings, refer to the **IE-78K0S-NS User's Manual (U13549E)**.

**Table 3-2. Switch and Jumper Settings on IE-78K0S-NS**

|         | SW1 | SW3             | SW4             | JP1             | JP4             |
|---------|-----|-----------------|-----------------|-----------------|-----------------|
| Setting | OFF | All switches ON | All switches ON | 2 and 3 shorted | 1 and 2 shorted |

★ **Caution** Incorrect connection may damage the IE-789026-NS-EM1.

#### (2) Settings on the IE-78K0S-NS-A

When using the IE-789026-NS-EM1, set the switches and jumpers on the IE-78K0S-NS-A as shown in Table 3-3. For details of these switch and jumper settings, refer to the **IE-78K0S-NS-A User's Manual (U15207E)**.

**Table 3-3. Switch and Jumper Settings on IE-78K0S-NS-A**

|         | SW1 | JP1             | JP3             |
|---------|-----|-----------------|-----------------|
| Setting | OFF | 1 and 2 shorted | Shorted (fixed) |

**Caution** Incorrect connection may damage the IE-789026-NS-EM1.

## CHAPTER 4 DIFFERENCES BETWEEN TARGET DEVICE AND TARGET INTERFACE CIRCUIT

This chapter describes differences between the target device's signal lines and the signal lines of the IE-789026-NS-EM1's target interface circuit.

Although the target device is a CMOS circuit, the IE-789026-NS-EM1's target interface circuit consists of an emulation CPU, TTL, CMOS-IC, and other components.

When the IE system is connected with the target system for debugging, the IE system performs emulation so as to operate as the actual target device would operate in the target system.

However, some minor differences exist since the operations are performed via the IE system's emulation.

- (1) Signals input to or output from the evaluation chip and peripheral evaluation chip
- (2) Signals input from the target system via a gate
- (3) Other signals

The IE-789026-NS-EM1's circuit is used as follows for signals listed in (1) to (3) above.

### (1) Signals input to or output from the evaluation chip and peripheral evaluation chip

The following signals perform the same operations as in the  $\mu$ PD789026 Subseries. However, a 1 M $\Omega$  pull-down resistor and 100  $\Omega$  resistor are inserted in series for the signals related to ports. Refer to **Figure 4-1 Equivalent Circuit 1 of Emulation Circuit**.

- Signals related to port 0
- Signals related to port 1
- Signals related to port 2
- Signals related to port 3
- Signals related to port 4
- Signals related to port 5

### (2) Signals input from the target system via a gate

Since the following signals are input via a gate, their timing shows a delay compared to the  $\mu$ PD789026 Subseries.

- $\overline{\text{RESET}}$  signal
- X1 signal

Refer to **Figure 4-3 Equivalent Circuit 3 of Emulation Circuit**.

**(3) Other signals**

- **V<sub>DD</sub> pin**

When the target system is not connected, the internal power supply voltage (5 V) of the IE-789026-NS-EM1 is supplied to the emulation CPU. When the target system is connected, power is supplied via the voltage supply pin (TP1). The V<sub>DD</sub> pin of the target system is only used to control the LED (TV<sub>CC</sub>) in the IE-789026-NS-EM1 that monitors the input of the target system's power supply.

- **V<sub>SS</sub> pin**

The V<sub>SS</sub> pin is connected to GND in the IE-789026-NS-EM1.

- **V<sub>PP</sub>/IC pin**

The V<sub>PP</sub> and IC pins are not used in the IE-789026-NS-EM1.

- **X2 pin**

The X2 pin is not used in the IE-789026-NS-EM1.

Figure 4-1. Equivalent Circuit 1 of Emulation Circuit

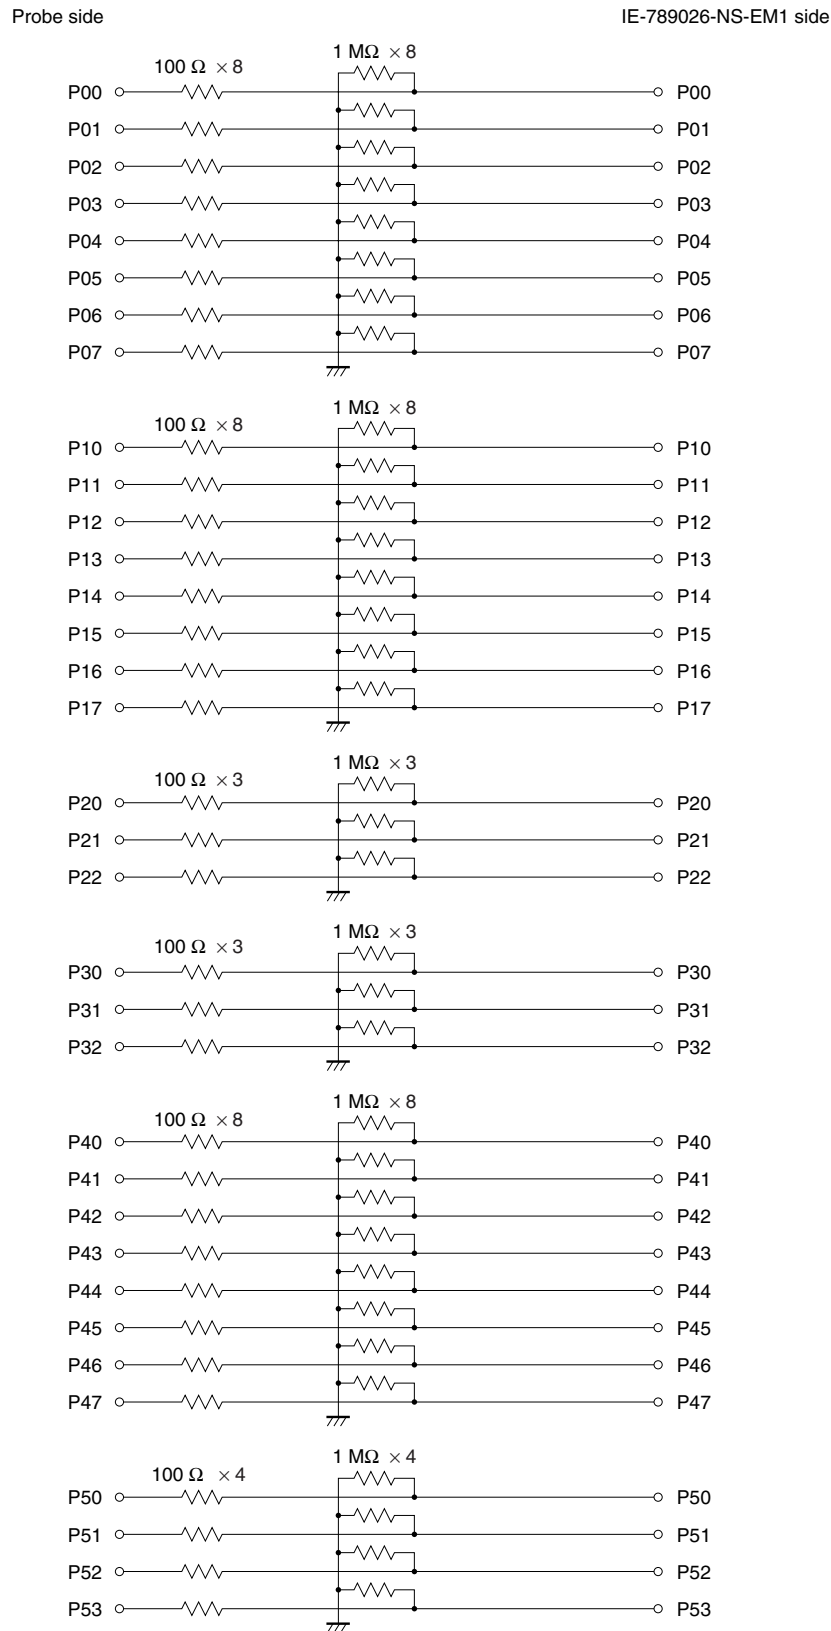


Figure 4-2. Equivalent Circuit 2 of Emulation Circuit


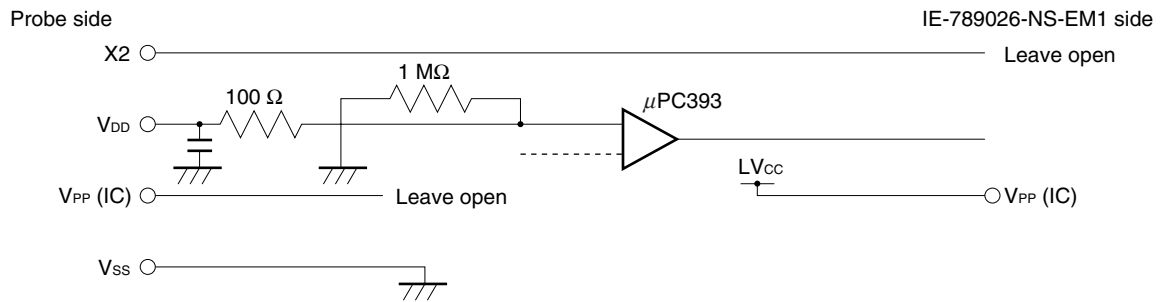


Figure 4-3. Equivalent Circuit 3 of Emulation Circuit

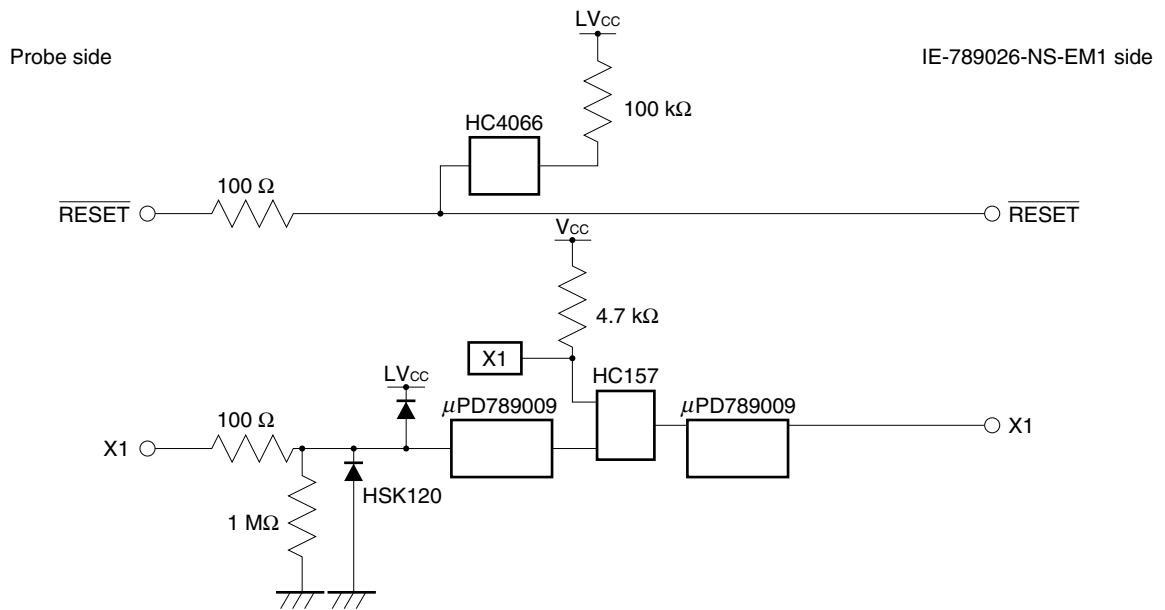

## APPENDIX A EMULATION PROBE PIN ASSIGNMENT TABLE


**Table A-1. NP-44GB, NP-44GB-TQ, NP-H44GB-TQ Pin Assignments**

| Emulation Probe | CN1 Pin No. | Emulation Probe | CN1 Pin No. |
|-----------------|-------------|-----------------|-------------|
| 1               | 104         | 23              | 18          |
| 2               | 103         | 24              | 17          |
| 3               | 100         | 25              | 22          |
| 4               | 99          | 26              | 21          |
| 5               | 94          | 27              | 28          |
| 6               | 93          | 28              | 27          |
| 7               | 30          | 29              | 92          |
| 8               | 29          | 30              | 91          |
| 9               | 24          | 31              | 98          |
| 10              | 23          | 32              | 97          |
| 11              | 20          | 33              | 102         |
| 12              | 47          | 34              | 73          |
| 13              | 48          | 35              | 72          |
| 14              | 51          | 36              | 69          |
| 15              | 52          | 37              | 70          |
| 16              | 57          | 38              | 63          |
| 17              | 58          | 39              | 64          |
| 18              | 59          | 40              | 61          |
| 19              | 60          | 41              | 62          |
| 20              | 55          | 42              | 65          |
| 21              | 56          | 43              | 66          |
| 22              | 49          | 44              | 71          |

- Remarks**
1. NP-44GB, NP-44GB-TQ, and NP-H44GB-TQ are products of Naito Densei Machida Mfg. Co., Ltd.
  2. The numbers in the “Emulation probe” column indicate the corresponding pin number on the emulation probe tip.

Figures B-1 and B-2 show the conditions when connecting the emulation probe to the conversion connector or conversion socket. Follow the configuration below and consider the shape of parts to be mounted on the target system when designing a system.


**Figure B-1. Distance Between In-Circuit Emulator and Conversion Socket/Conversion Adapter**

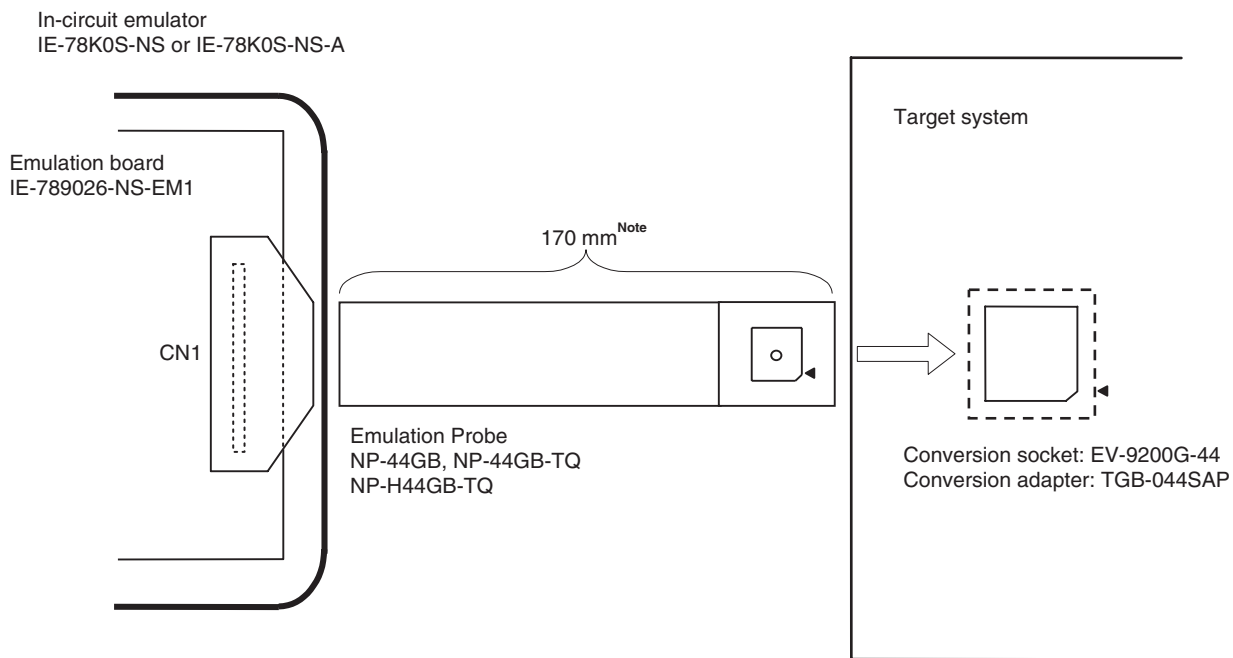

**Note** Distance when NP-44GB and NP-44GB-TQ are used. When NP-H44GB-TQ is used, the distance is 370 mm.

**Remarks**

1. NP-44GB, NP-44GB-TQ, and NP-H44GB-TQ are products of Naito Densai Machida Mfg. Co., Ltd.
2. TGB-044SAP is a product of TOKYO ELETECH CORPORATION.

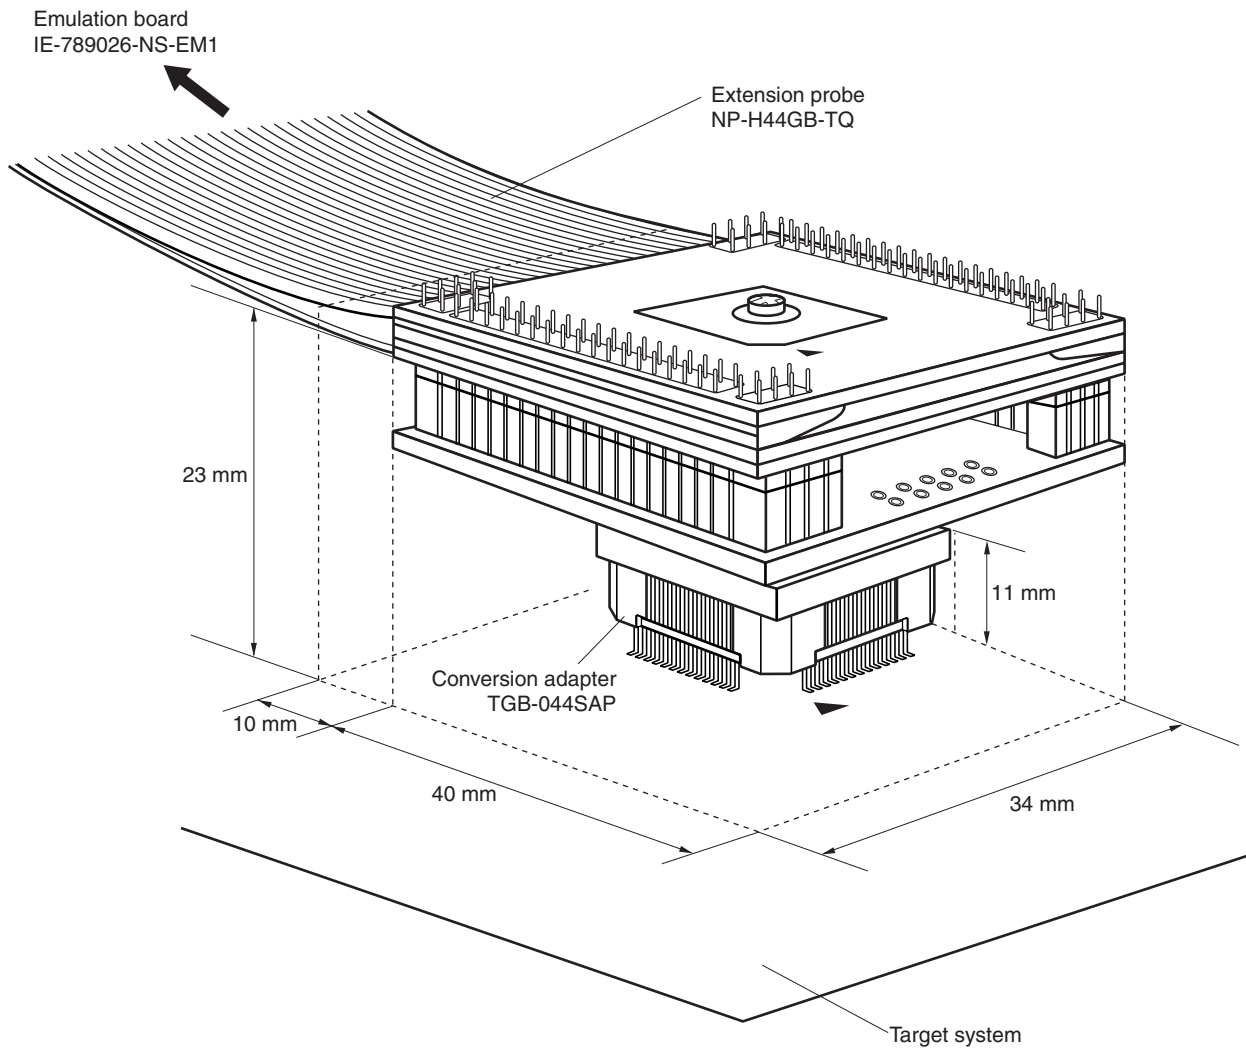**Figure B-2. Connection Condition of Target System (When NP-H44GB-TQ Is Used)**

**Remark** NP-H44GB-TQ is a product of Naito Densetsu Machida Mfg. Co., Ltd.  
TGB-044SAP is a product of TKYO ELETECH CORPORATION.

**[MEMO]**

[MEMO]

## Facsimile Message

From:

Name

Company

Tel.

FAX

Address

Although NEC has taken all possible steps to ensure that the documentation supplied to our customers is complete, bug free and up-to-date, we readily accept that errors may occur. Despite all the care and precautions we've taken, you may encounter problems in the documentation. Please complete this form whenever you'd like to report errors or suggest improvements to us.

*Thank you for your kind support.*

### North America

NEC Electronics Inc.  
Corporate Communications Dept.  
Fax: +1-800-729-9288  
+1-408-588-6130

### Hong Kong, Philippines, Oceania

NEC Electronics Hong Kong Ltd.  
Fax: +852-2886-9022/9044

### Taiwan

NEC Electronics Taiwan Ltd.  
Fax: +886-2-2719-5951

### Europe

NEC Electronics (Europe) GmbH  
Market Communication Dept.  
Fax: +49-211-6503-274

### Korea

NEC Electronics Hong Kong Ltd.  
Seoul Branch  
Fax: +82-2-528-4411

### Asian Nations except Philippines

NEC Electronics Singapore Pte. Ltd.  
Fax: +65-250-3583

### South America

NEC do Brasil S.A.  
Fax: +55-11-6462-6829

### P.R. China

NEC Electronics Shanghai, Ltd.  
Fax: +86-21-6841-1137

### Japan

NEC Semiconductor Technical Hotline  
Fax: +81- 44-435-9608

I would like to report the following error/make the following suggestion:

Document title: \_\_\_\_\_

Document number: \_\_\_\_\_ Page number: \_\_\_\_\_

---



---



---

If possible, please fax the referenced page or drawing.

| Document Rating    | Excellent                | Good                     | Acceptable               | Poor                     |
|--------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Clarity            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Technical Accuracy | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Organization       | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |