NPN Silicon RF Transistor

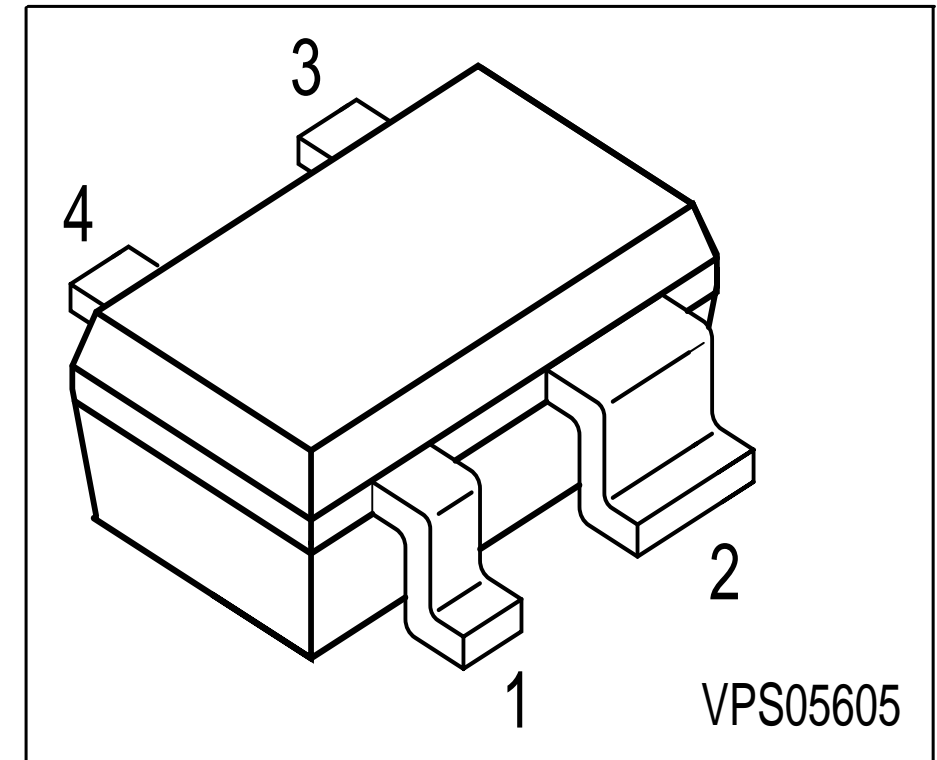

- For low noise, high-gain amplifiers up to 2 GHz
- For linear broadband amplifiers
- f_T = 8 GHz
  F = 1.3 dB at 900 MHz

ESD: **E**lectro**s**tatic **d**ischarge sensitive device, observe handling precaution!

Type	Marking	Pin Configuration				Package
BFP193W	RCs	1 = E	2 = C	3 = E	4 = B	SOT343

Maximum Ratings

Parameter	Symbol	Value	Unit
Collector-emitter voltage	V_{CEO}	12	V
Collector-emitter voltage	V_{CES}	20	
Collector-base voltage	V_{CBO}	20	
Emitter-base voltage	V_{EBO}	2	
Collector current	I_C	80	mA
Base current	I_B	10	
Total power dissipation $T_S \leq 66$ °C [1)	P_{tot}	580	mW
Junction temperature	T_j	150	°C
Ambient temperature	T_A	-65 ... 150	
Storage temperature	T_{stg}	-65 ... 150	

Thermal Resistance

Parameter	Symbol	Value	Unit
Junction - soldering point[2)	R_{thJS}	≤ 145	K/W

[1] T_S is measured on the collector lead at the soldering point to the pcb

[2] For calculation of R_{thJA} please refer to Application Note Thermal Resistance

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
DC characteristics					
Collector-emitter breakdown voltage I_C = 1 mA, I_B = 0	$V_{(BR)CEO}$	12	-	-	V
Collector-emitter cutoff current V_{CE} = 20 V, V_{BE} = 0	I_{CES}	-	-	100	µA
Collector-base cutoff current V_{CB} = 10 V, I_E = 0	I_{CBO}	-	-	100	nA
Emitter-base cutoff current V_{EB} = 1 V, I_C = 0	I_{EBO}	-	-	1	µA
DC current gain I_C = 30 mA, V_{CE} = 8 V	h_{FE}	50	100	200	-

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
AC characteristics (verified by random sampling)					
Transition frequency I_C = 50 mA, V_{CE} = 8 V, f = 500 MHz	f_T	6	8	-	GHz
Collector-base capacitance V_{CB} = 10 V, f = 1 MHz	C_{cb}	-	0.63	0.9	pF
Collector-emitter capacitance V_{CE} = 10 V, f = 1 MHz	C_{ce}	-	0.33	-	
Emitter-base capacitance V_{EB} = 0.5 V, f = 1 MHz	C_{eb}	-	1.8	-	
Noise figure I_C = 10 mA, V_{CE} = 8 V, $Z_S = Z_{Sopt}$, f = 900 MHz f = 1.8 GHz	F	 - -	 1.3 2.1	 - -	dB
Power gain, maximum available [1)] I_C = 30 mA, V_{CE} = 8 V, $Z_S = Z_{Sopt}$, $Z_L = Z_{Lopt}$, f = 900 MHz f = 1.8 GHz	G_{ma}	 - -	 19.5 13	 - -	
Transducer gain I_C = 30 mA, V_{CE} = 8 V, $Z_S = Z_L$ = 50Ω , f = 900 MHz f = 1.8 GHz	$\|S_{21e}\|^2$	 - -	 15 9	 - -	

[1] $G_{ma} = |S_{21} / S_{12}|$ (k-(k^2-1)$^{1/2}$)

SPICE Parameters (Gummel-Poon Model, Berkley-SPICE 2G.6 Syntax) :

Transistor Chip Data

IS =	0.2738	fA	BF =	125	-	NF =	0.95341	-
VAF =	24	V	IKF =	0.26949	A	ISE =	10.627	fA
NE =	1.935	-	BR =	14.267	-	NR =	1.4289	-
VAR =	3.8742	V	IKR =	0.037925	A	ISC =	0.037409	fA
NC =	0.94371	-	RB =	1.8368	Ω	IRB =	0.91763	mA
RBM =	1	Ω	RE =	0.76534		RC =	0.11938	Ω
CJE =	1.1824	fF	VJE =	0.70276	V	MJE =	0.48654	-
TF =	18.828	ps	XTF =	0.69477	-	VTF =	0.8	V
ITF =	0.96893	mA	PTF =	0	deg	CJC =	935.03	fF
VJC =	1.1828	V	MJC =	0.30002	-	XCJC =	0.053563	-
TR =	1.0037	ns	CJS =	0	fF	VJS =	0.75	V
MJS =	0	-	XTB =	0	-	EG =	1.11	eV
XTI =	3	-	FC =	0.72063	-	TNOM	300	K

All parameters are ready to use, no scalling is necessary.
Extracted on behalf of Infineon Technologies AG by:
Institut für Mobil-und Satellitentechnik (IMST)

Package Equivalent Circuit:

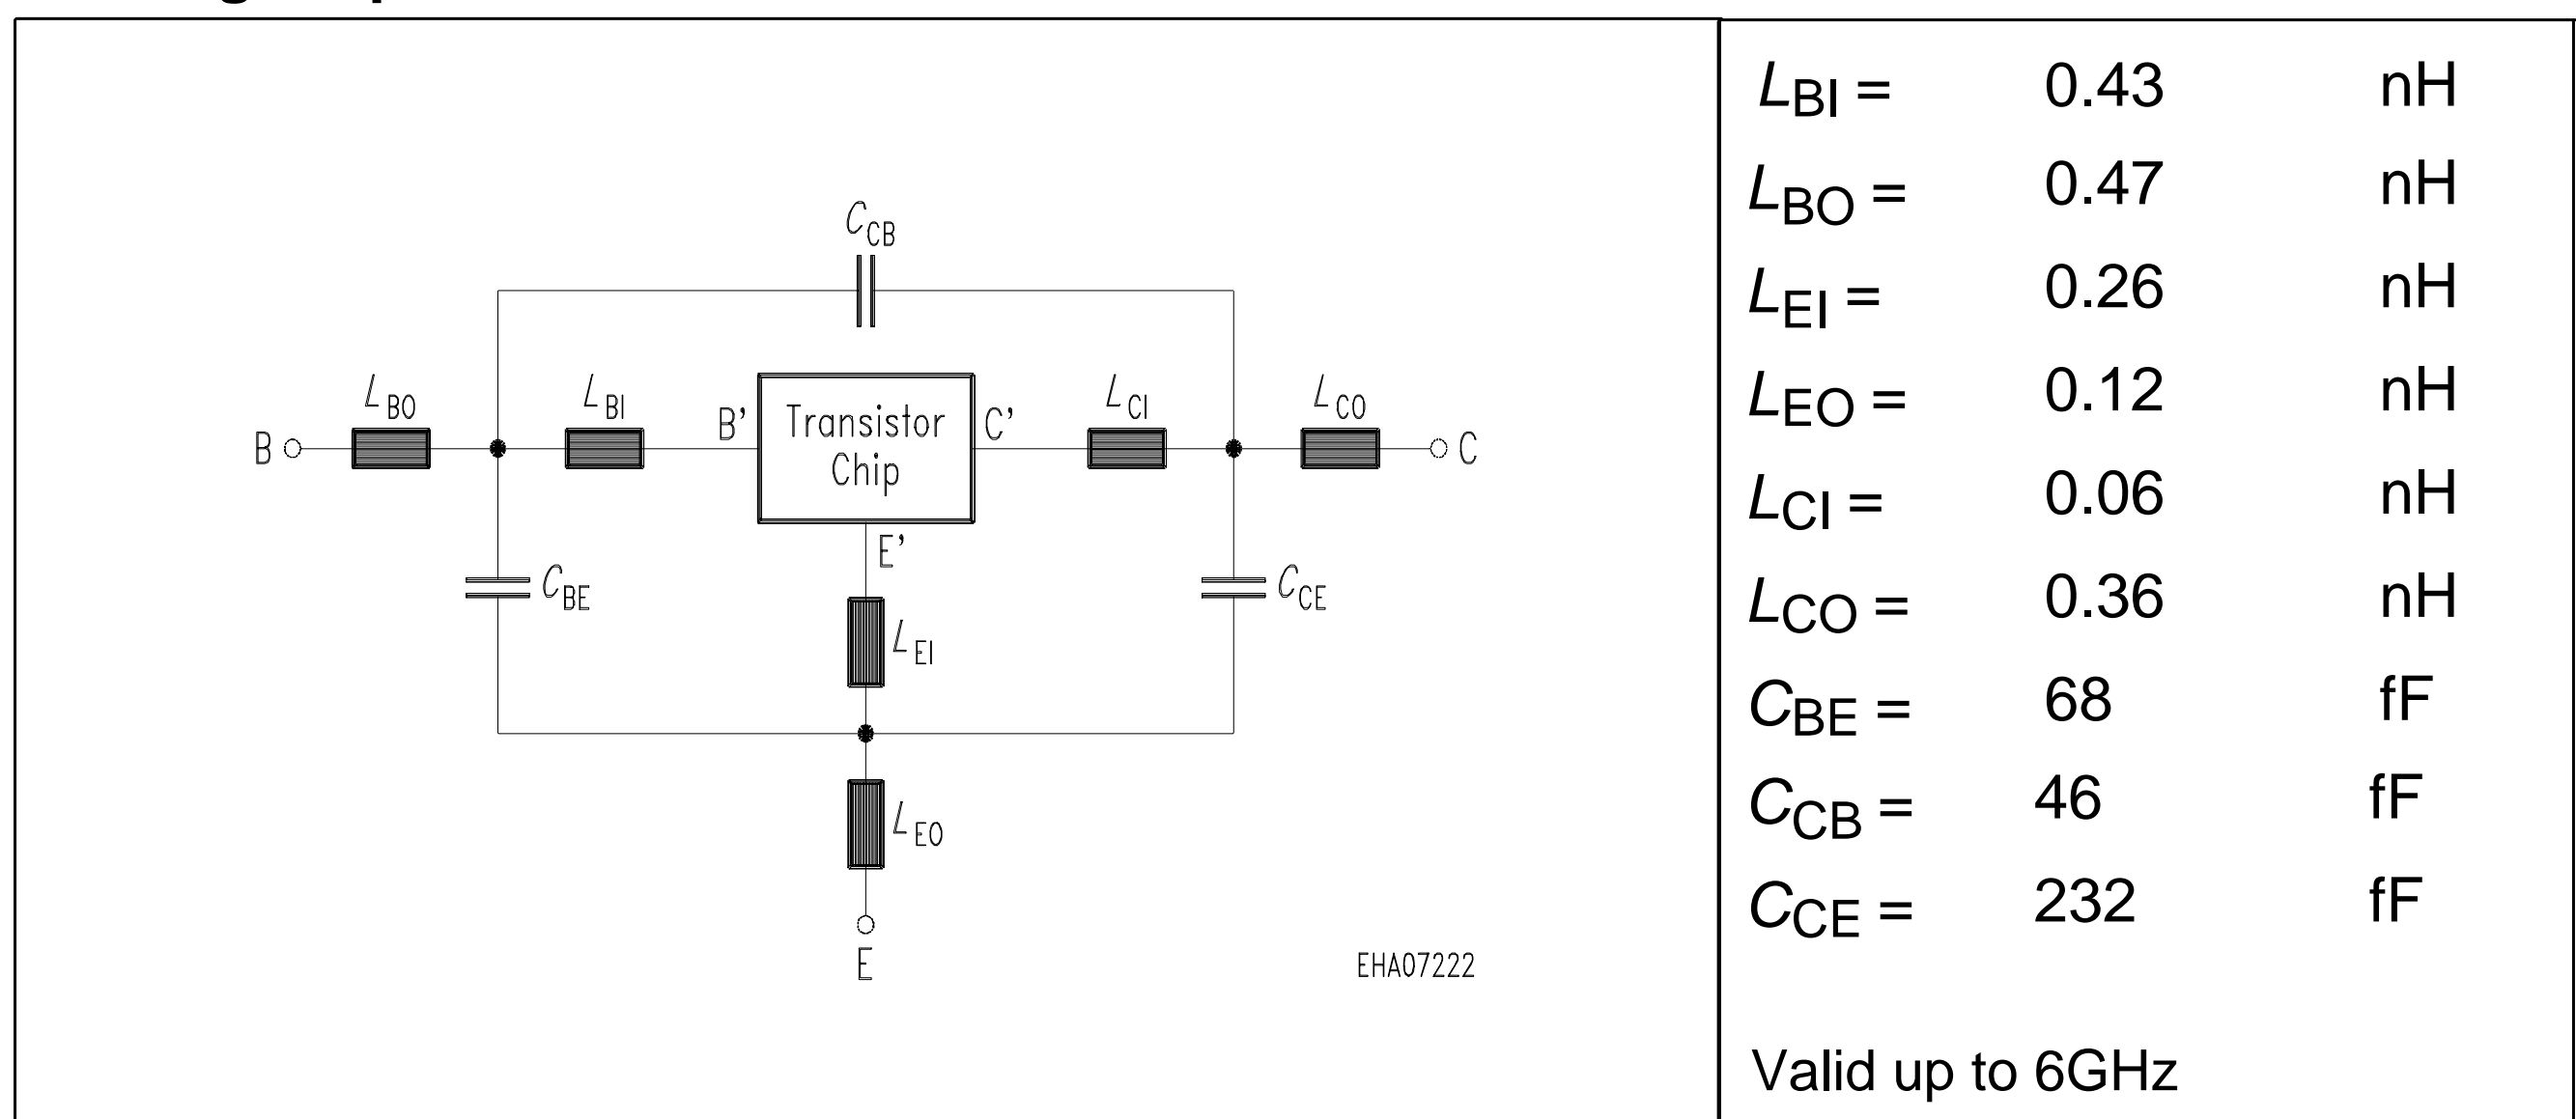

L_{BI} =	0.43	nH
L_{BO} =	0.47	nH
L_{EI} =	0.26	nH
L_{EO} =	0.12	nH
L_{CI} =	0.06	nH
L_{CO} =	0.36	nH
C_{BE} =	68	fF
C_{CB} =	46	fF
C_{CE} =	232	fF

Valid up to 6GHz

For examples and ready to use parameters please contact your local Infineon Technologies distributor or sales office to obtain a Infineon Technologies CD-ROM or see Internet: http://www.infineon.com/silicondiscretes

Total power dissipation $P_{tot} = f(T_S)$

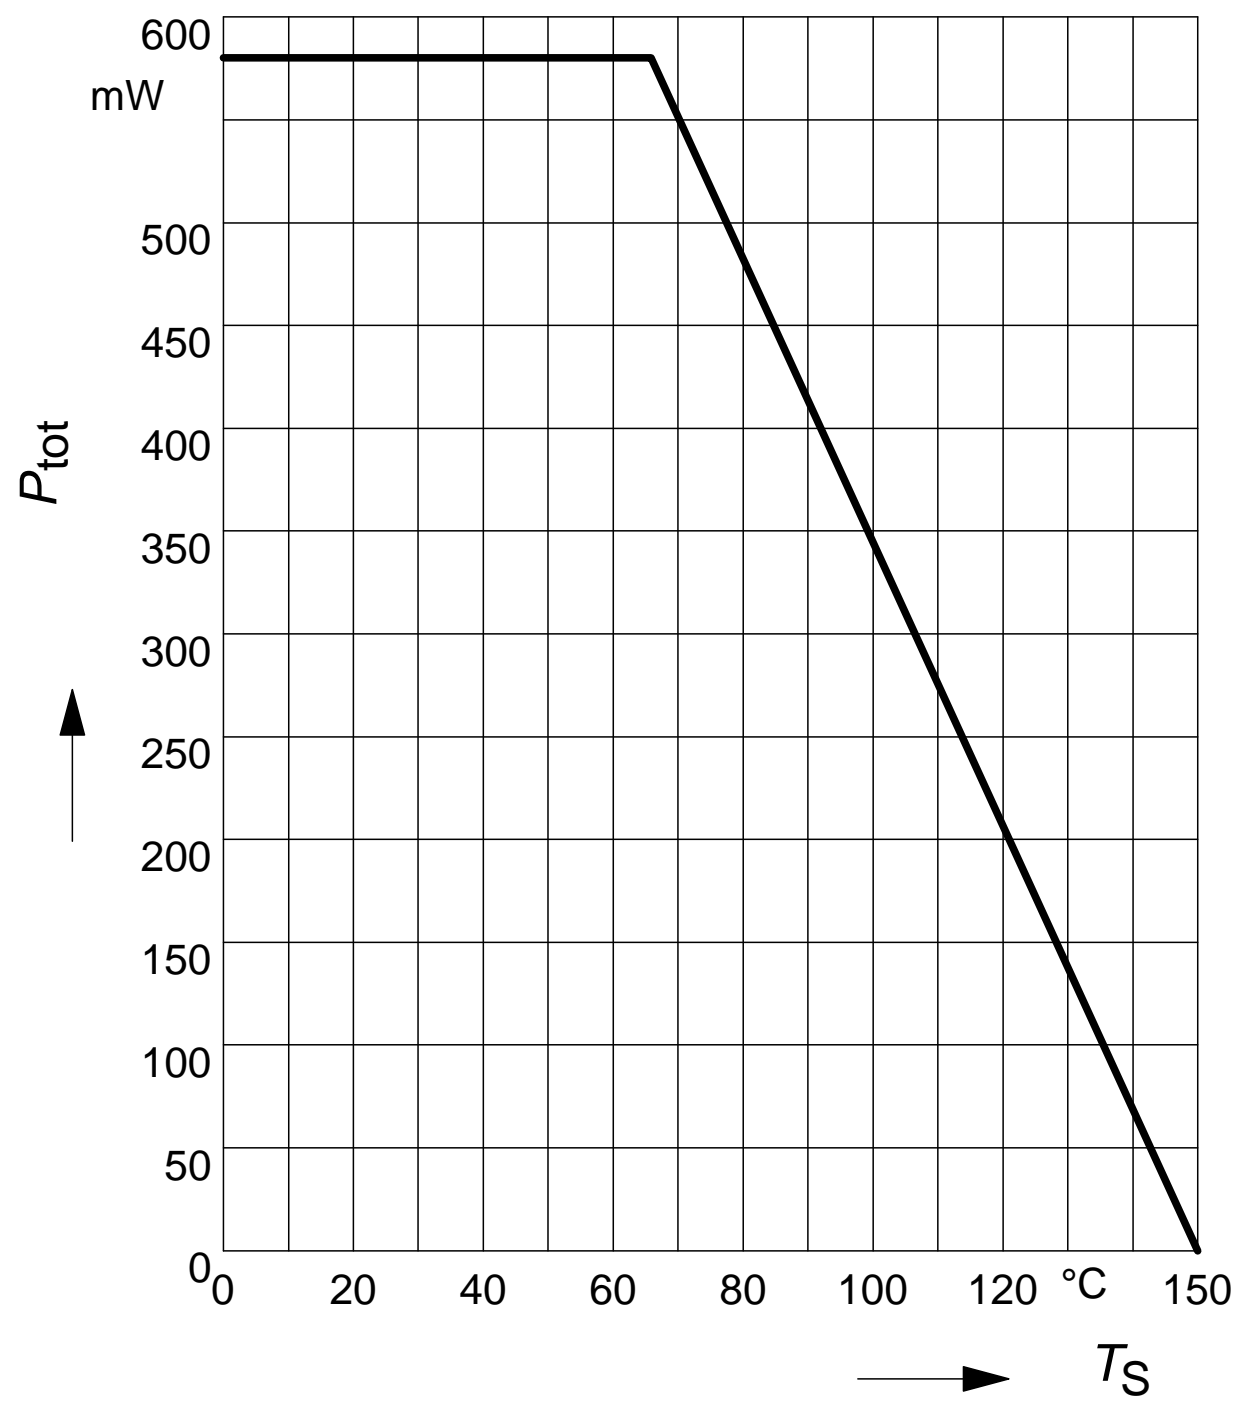

Permissible Pulse Load $R_{thJS} = f(t_p)$

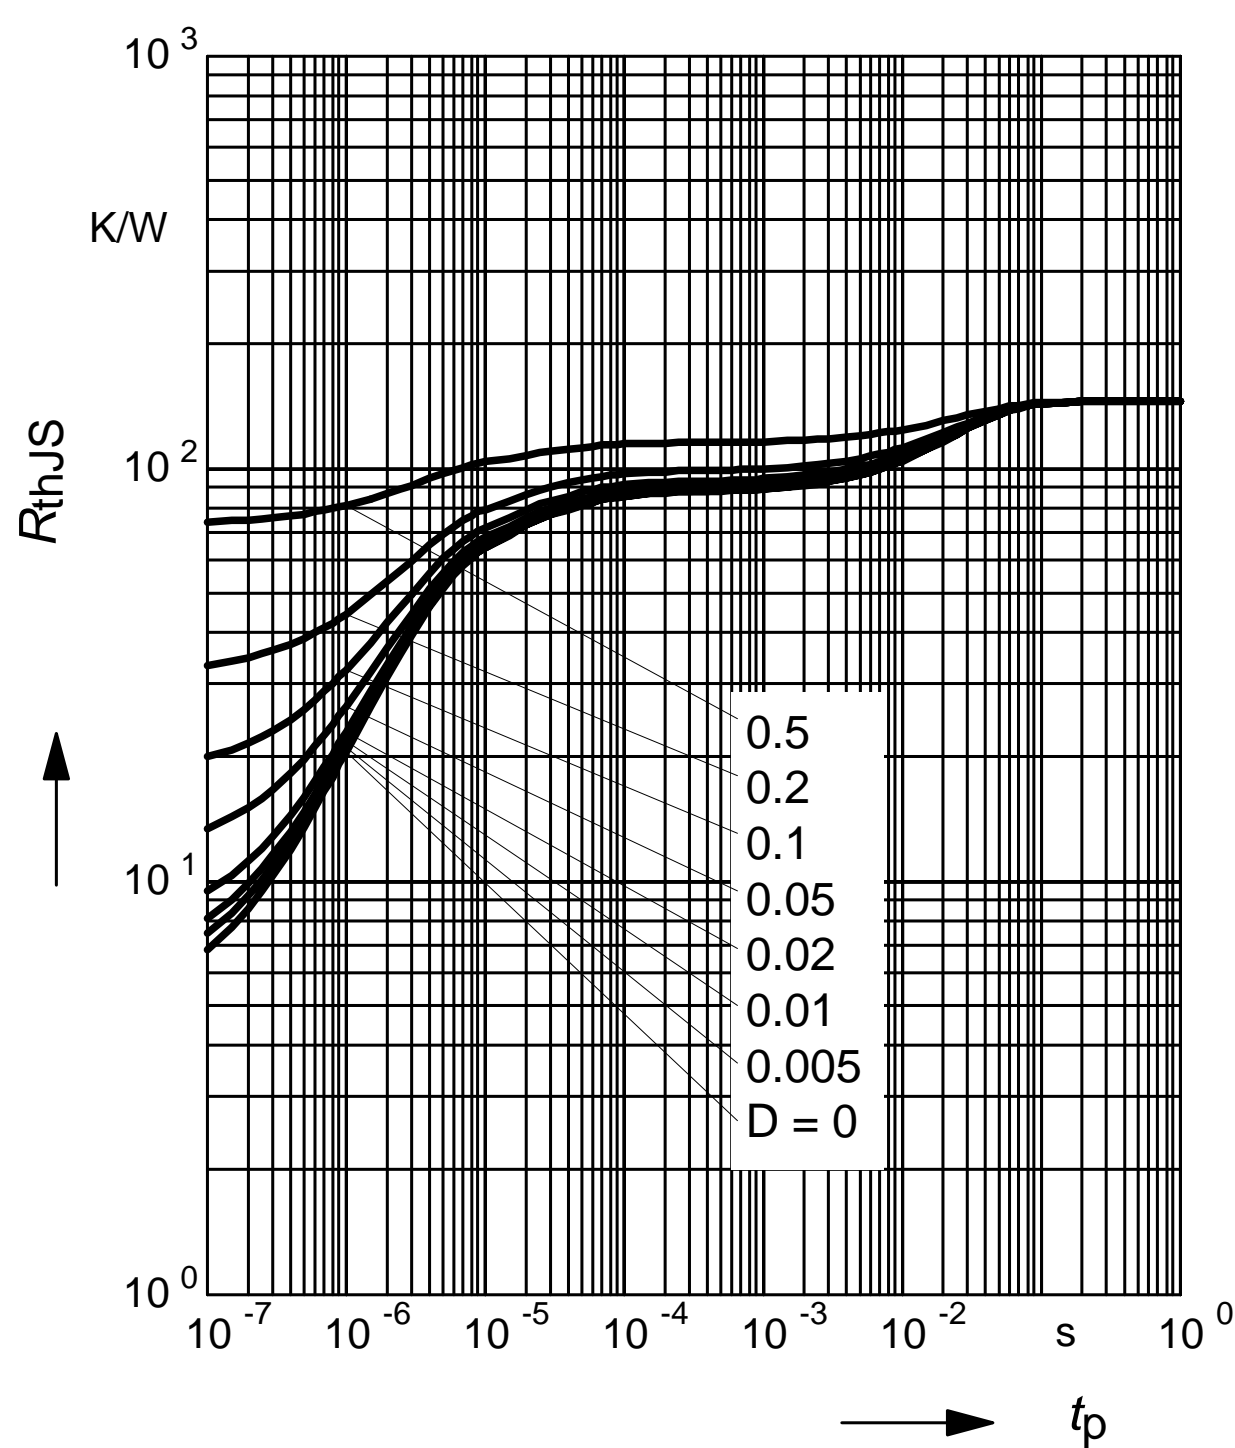

Permissible Pulse Load

$P_{totmax}/P_{totDC} = f(t_p)$

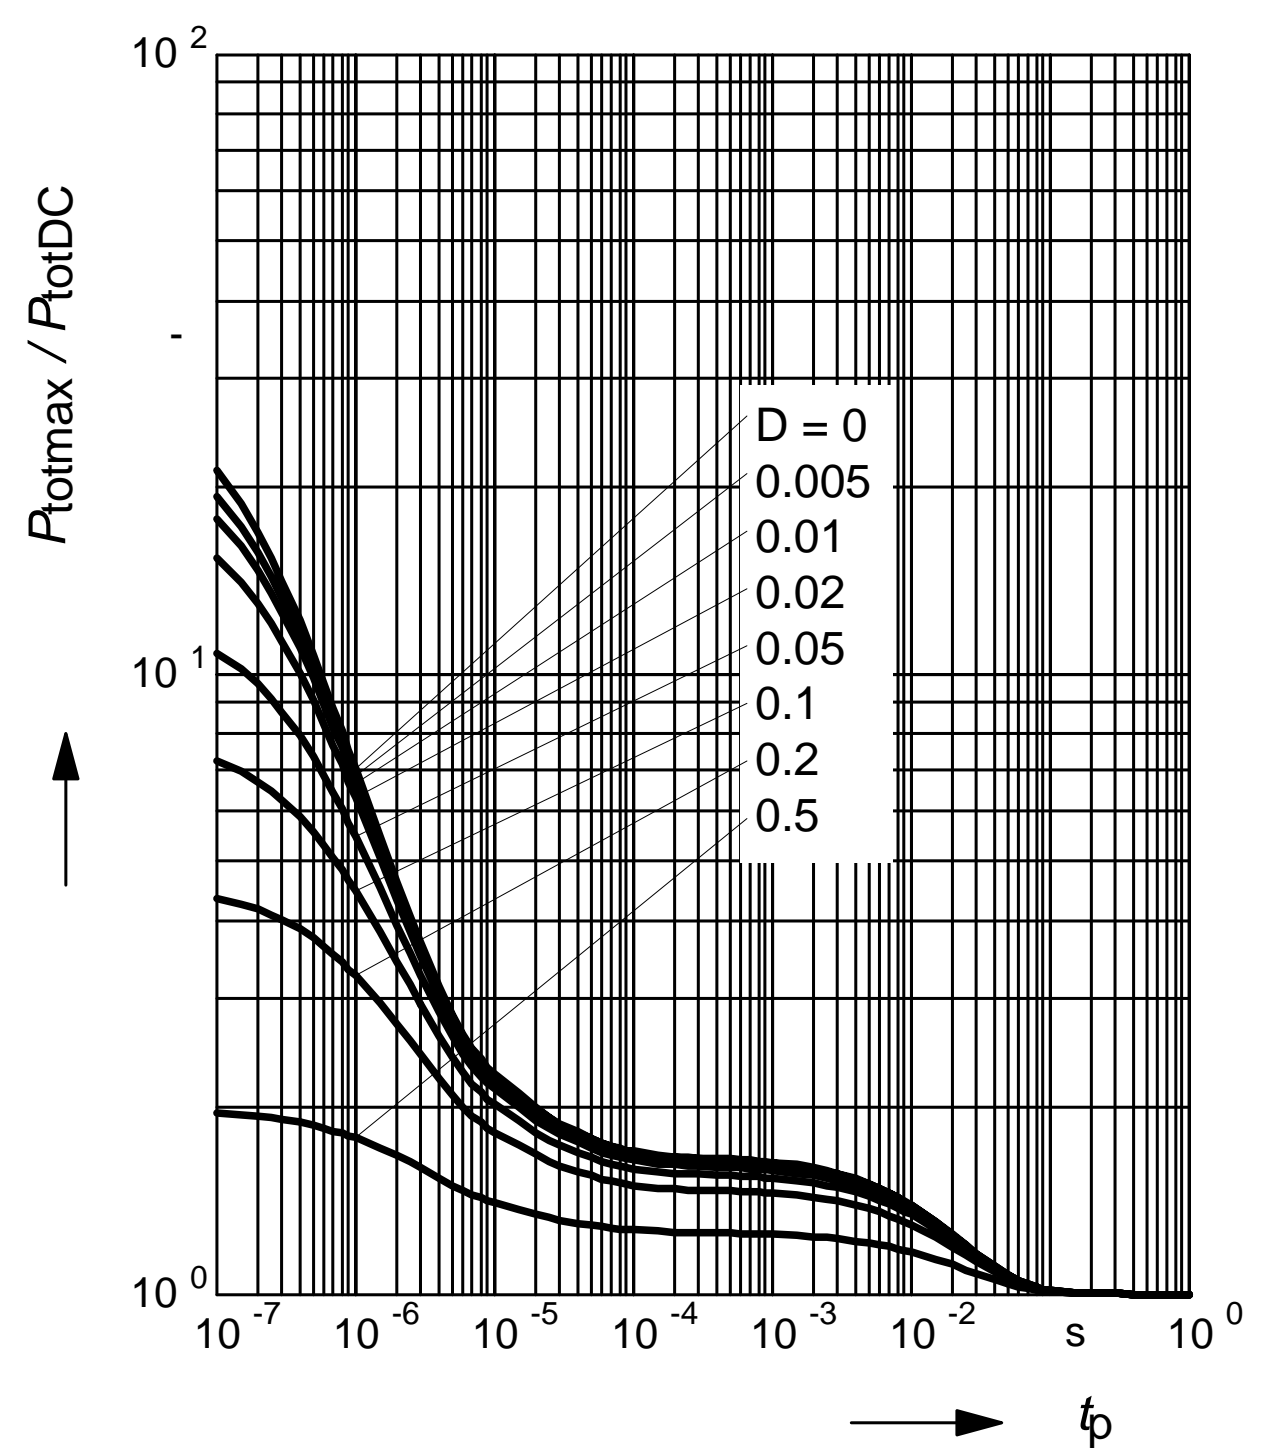

Collector-base capacitance $C_{cb} = f(V_{CB})$

f = 1MHz

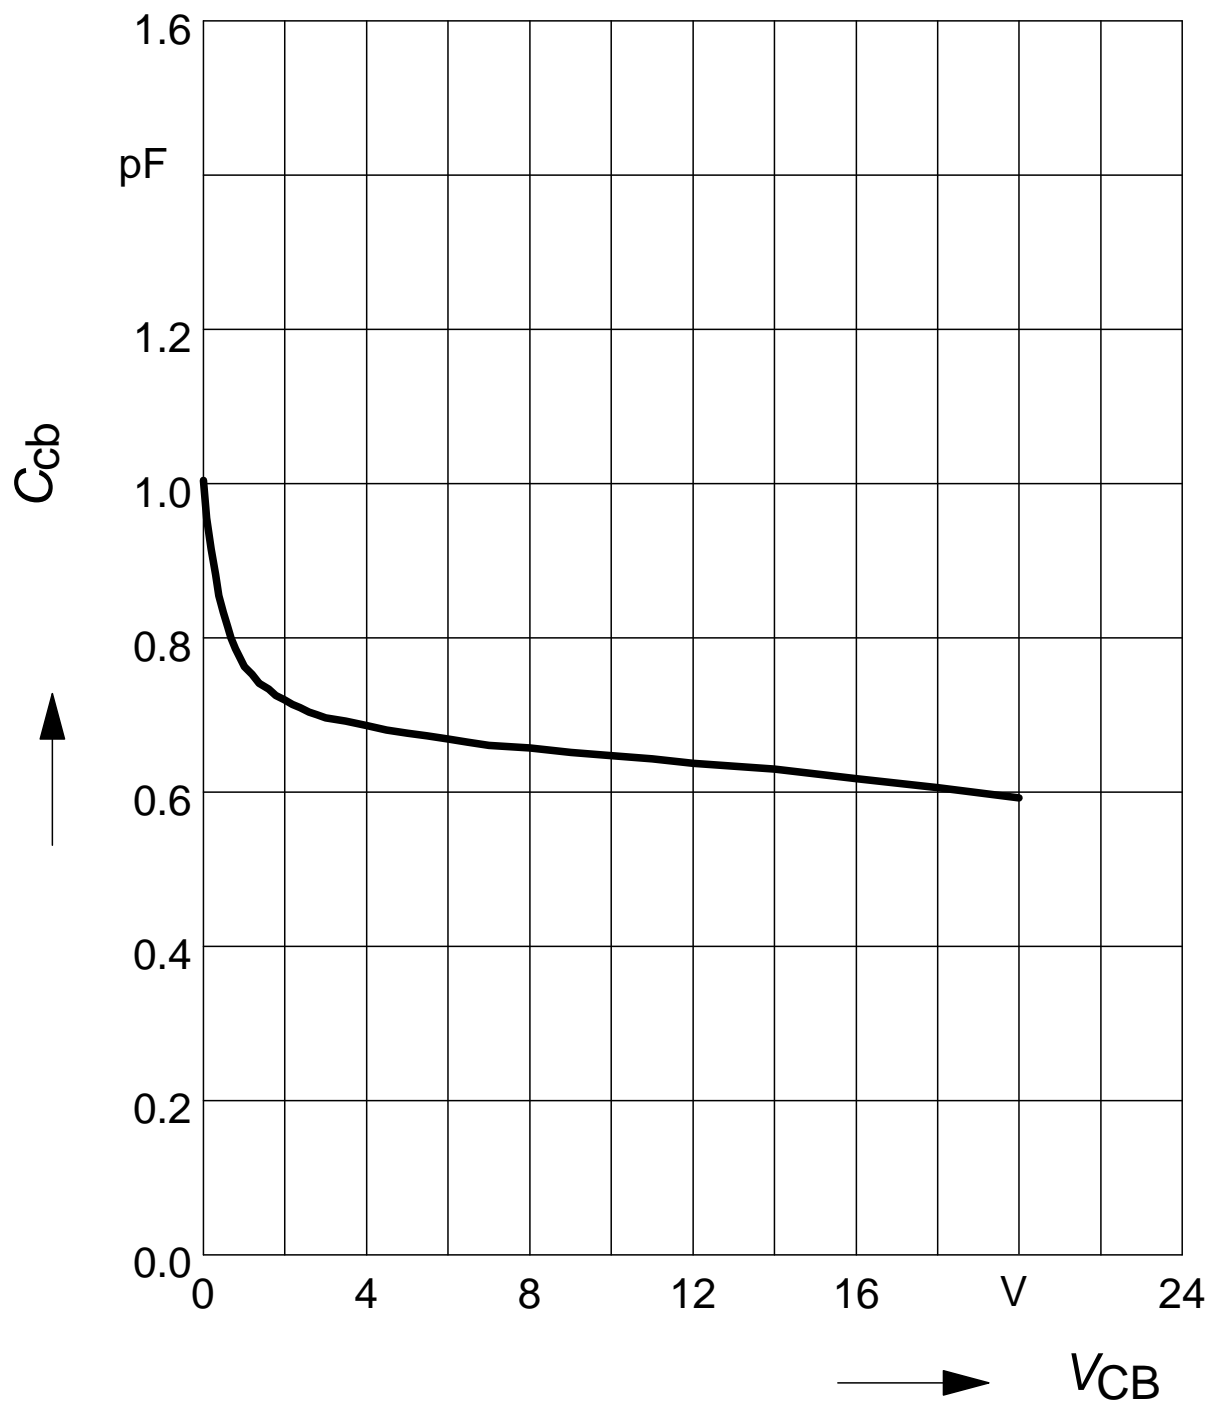

Transition frequency $f_T = f(I_C)$

V_{CE} = Parameter

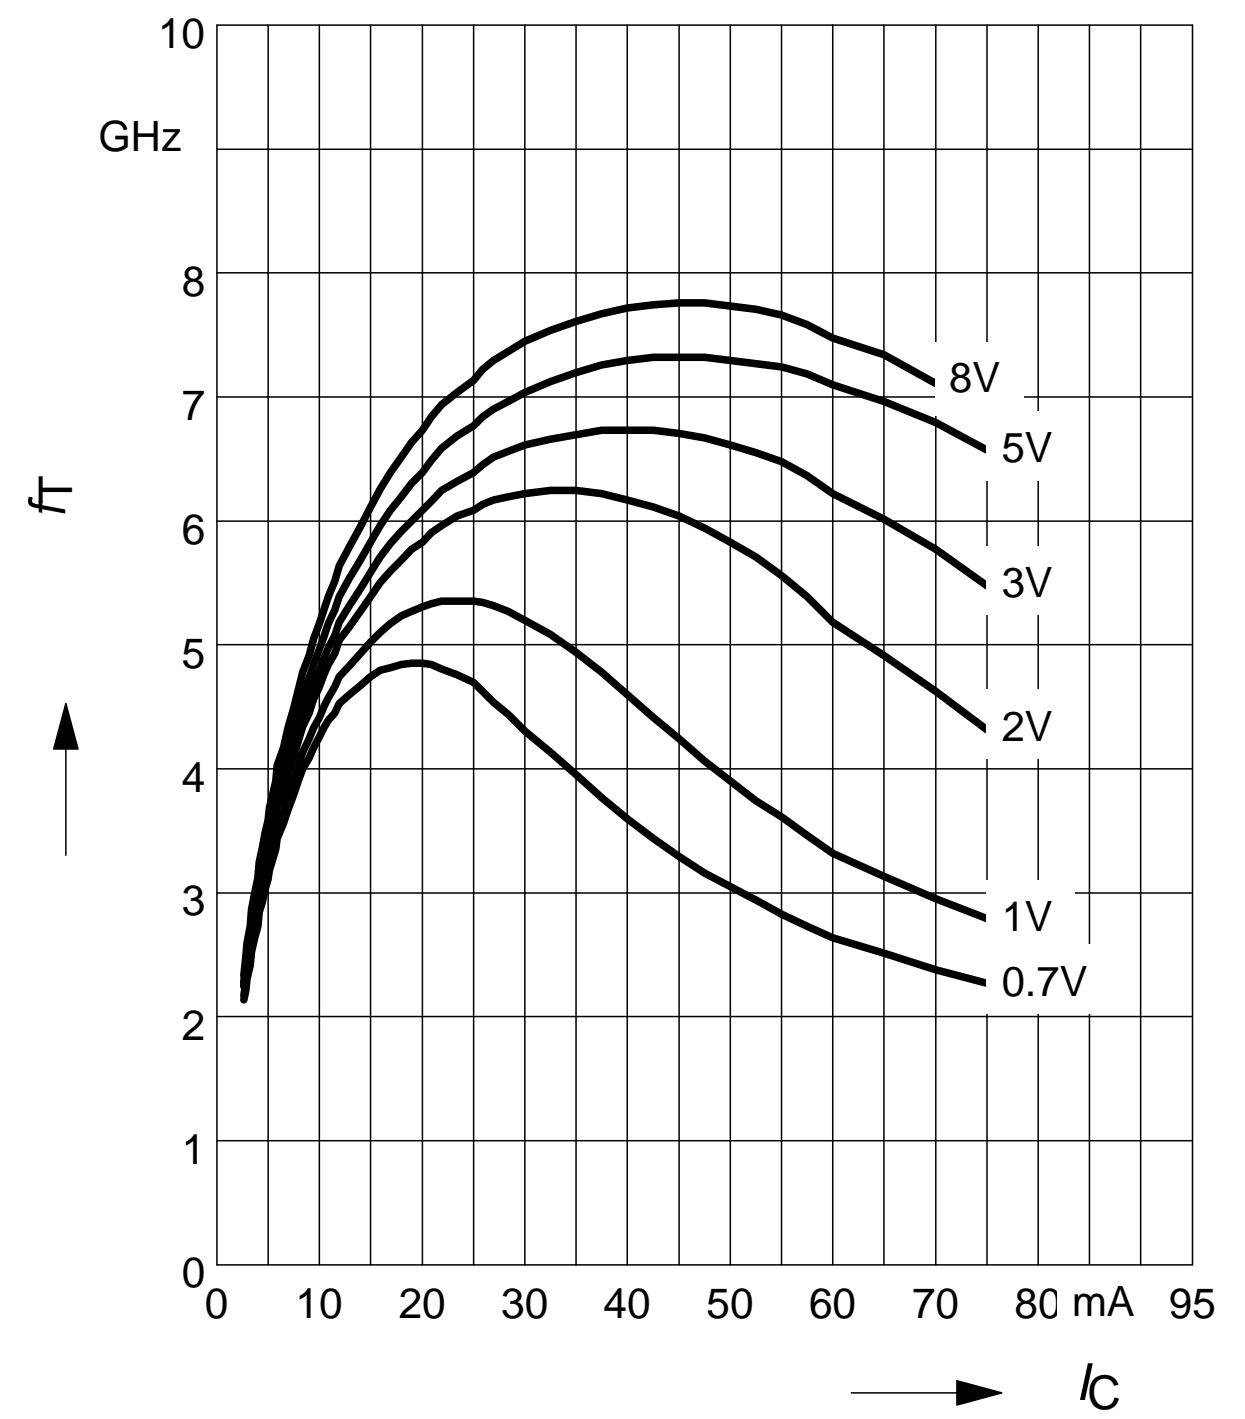

Power Gain G_{ma}, $G_{ms} = f(I_C)$

f = 0.9GHz

V_{CE} = Parameter

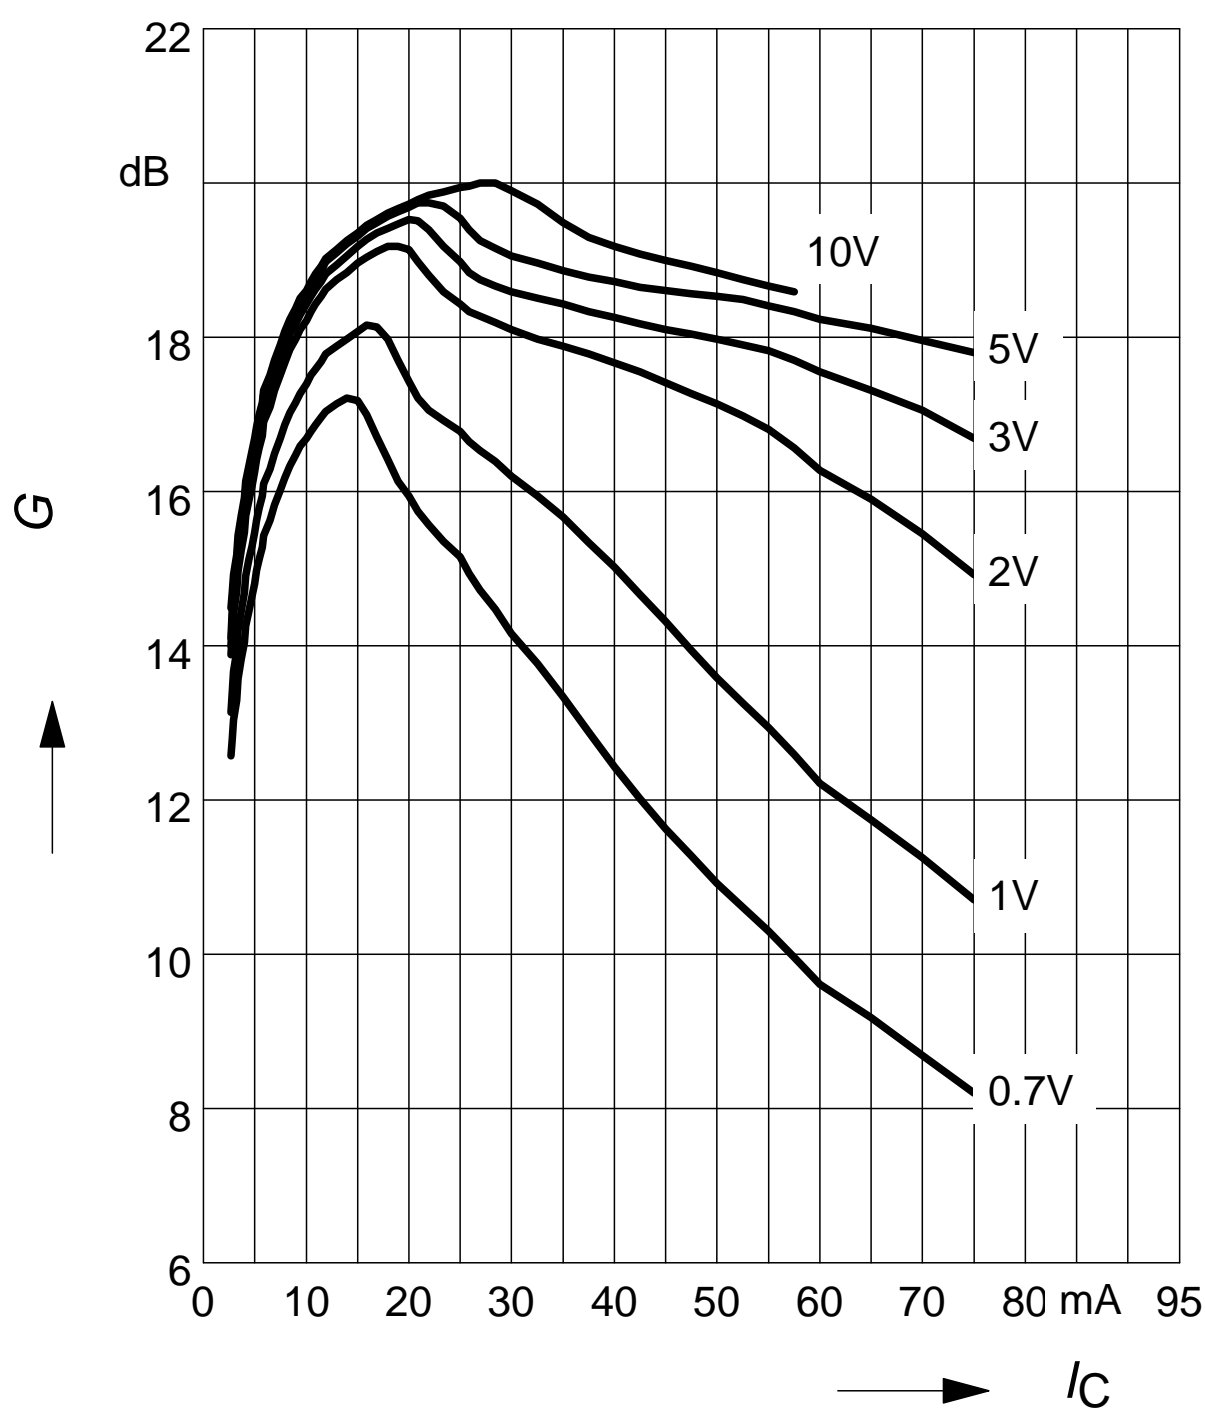

Power Gain G_{ma}, $G_{ms} = f(I_C)$

f = 1.8GHz

V_{CE} = Parameter

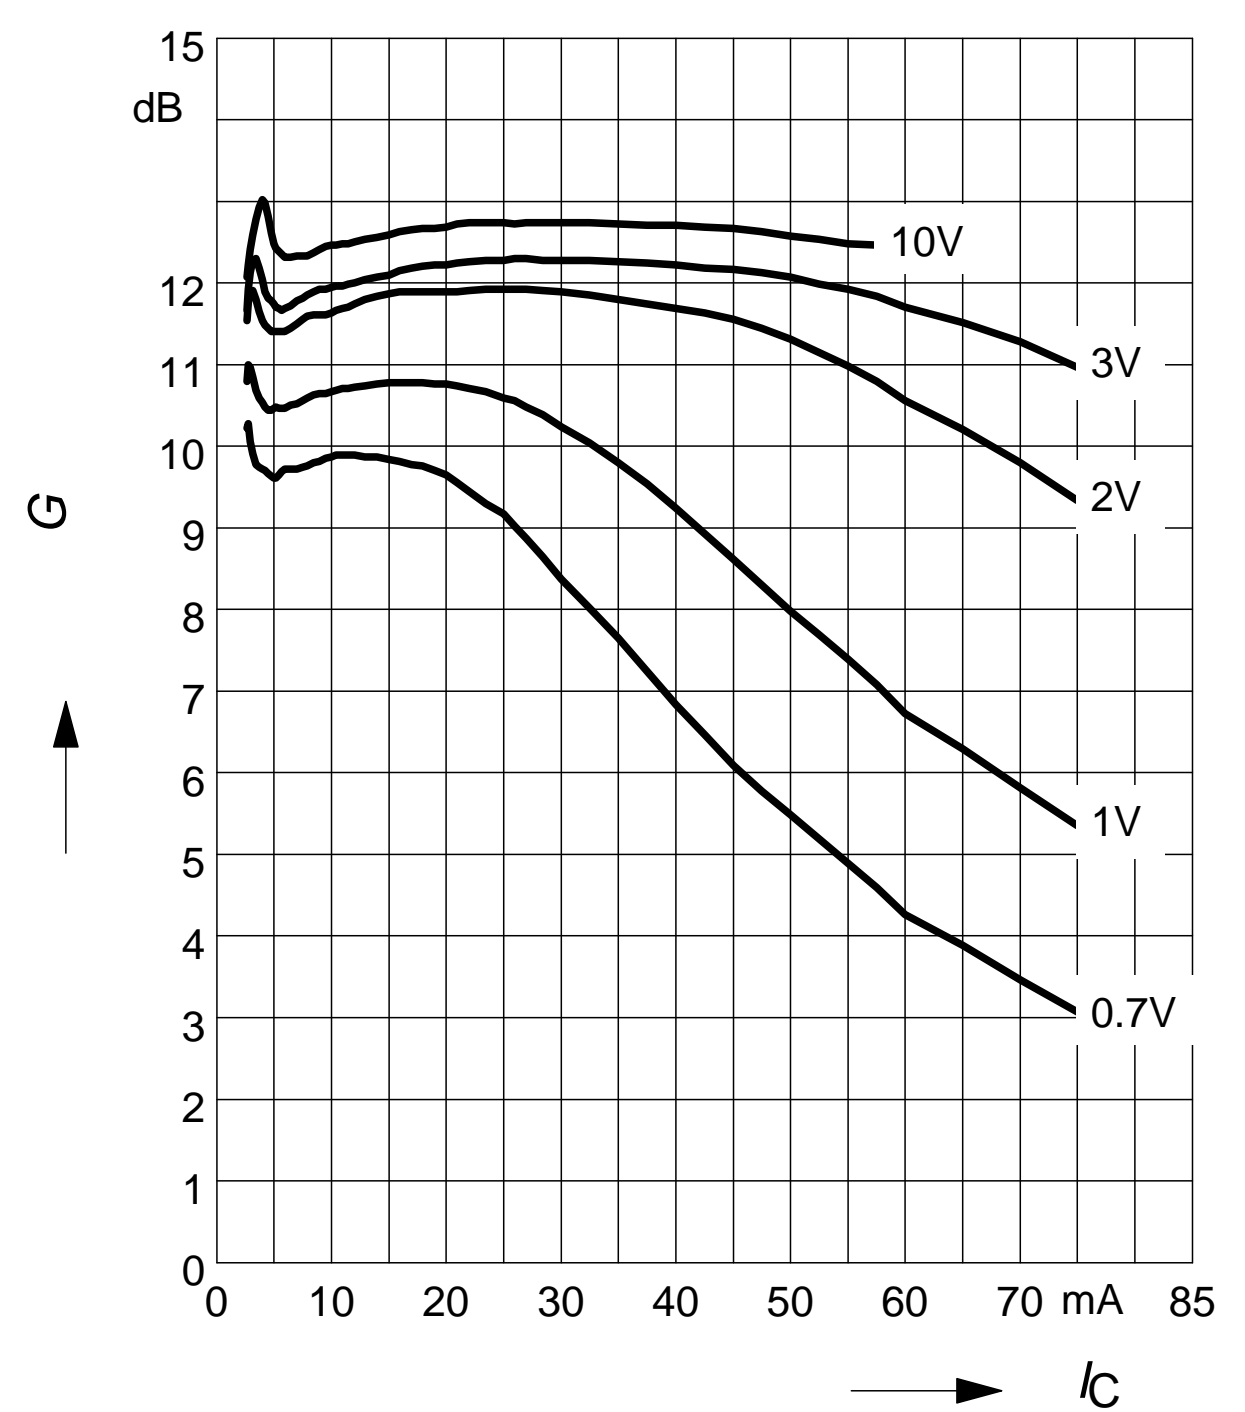

Power Gain G_{ma}, G_{ms} = $f(V_{CE})$:______

$|S_{21}|^2 = f(V_{CE})$:---------

f = Parameter

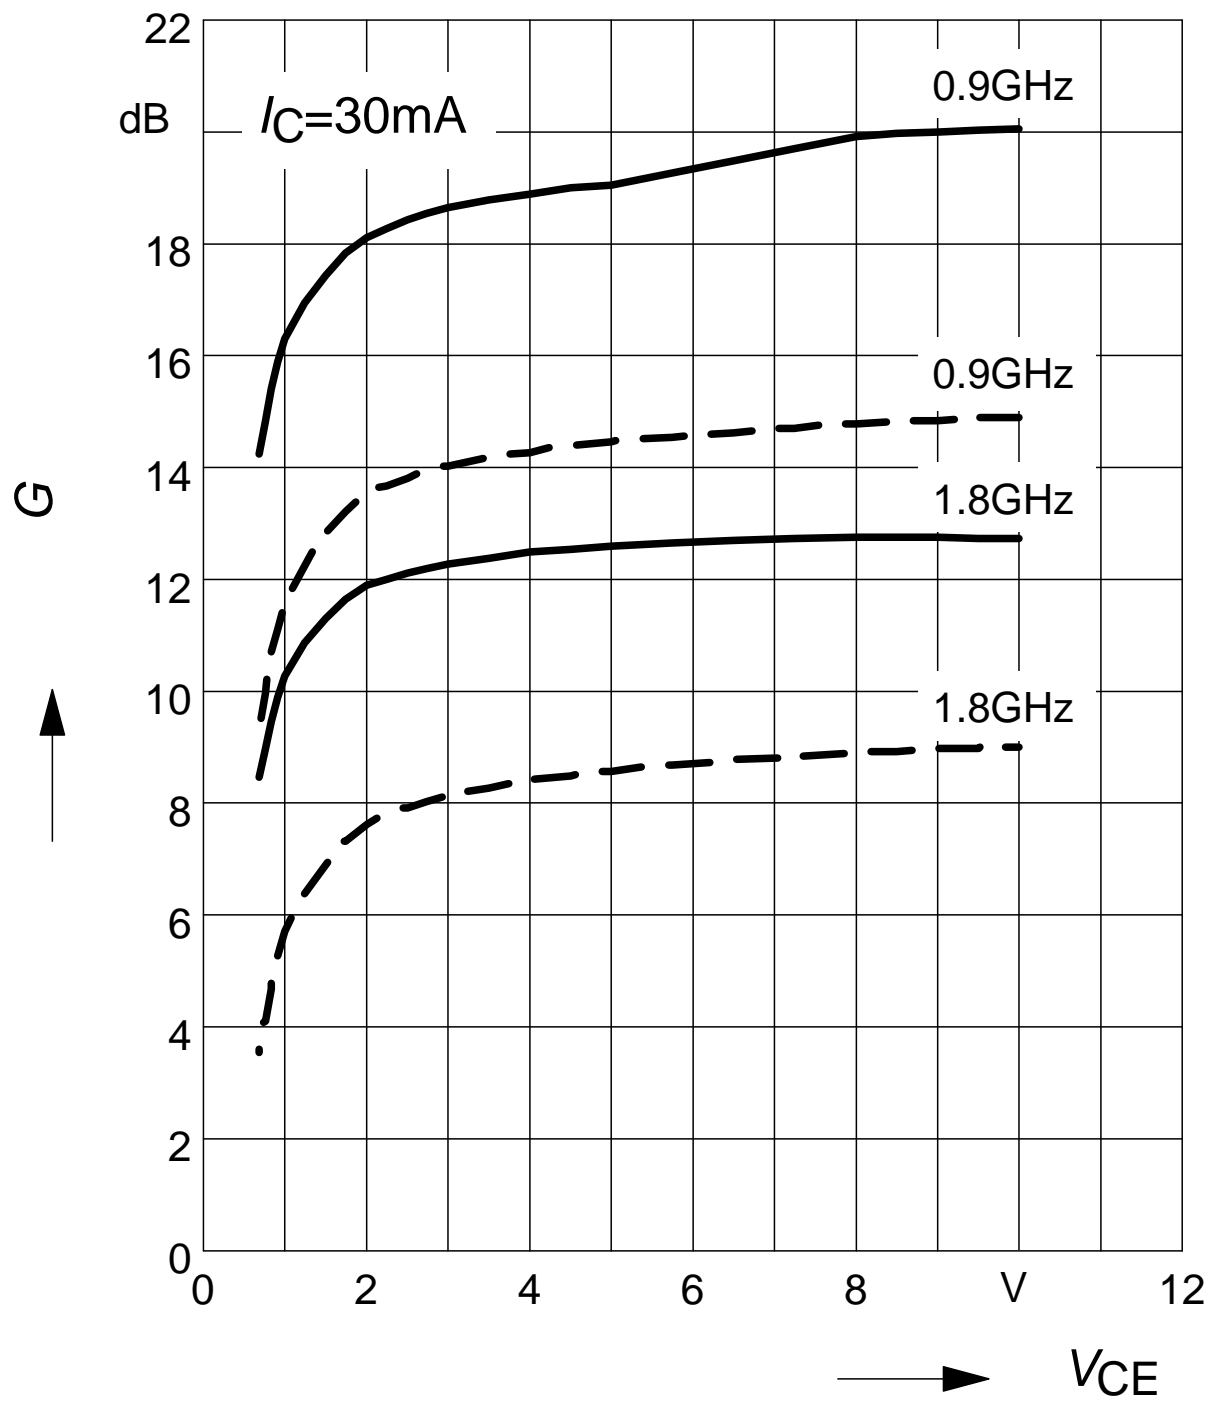

Intermodulation Intercept Point IP_3=$f(I_C)$

(3rd order, Output, Z_S=Z_L=50Ω)

V_{CE} = Parameter, f = 900MHz

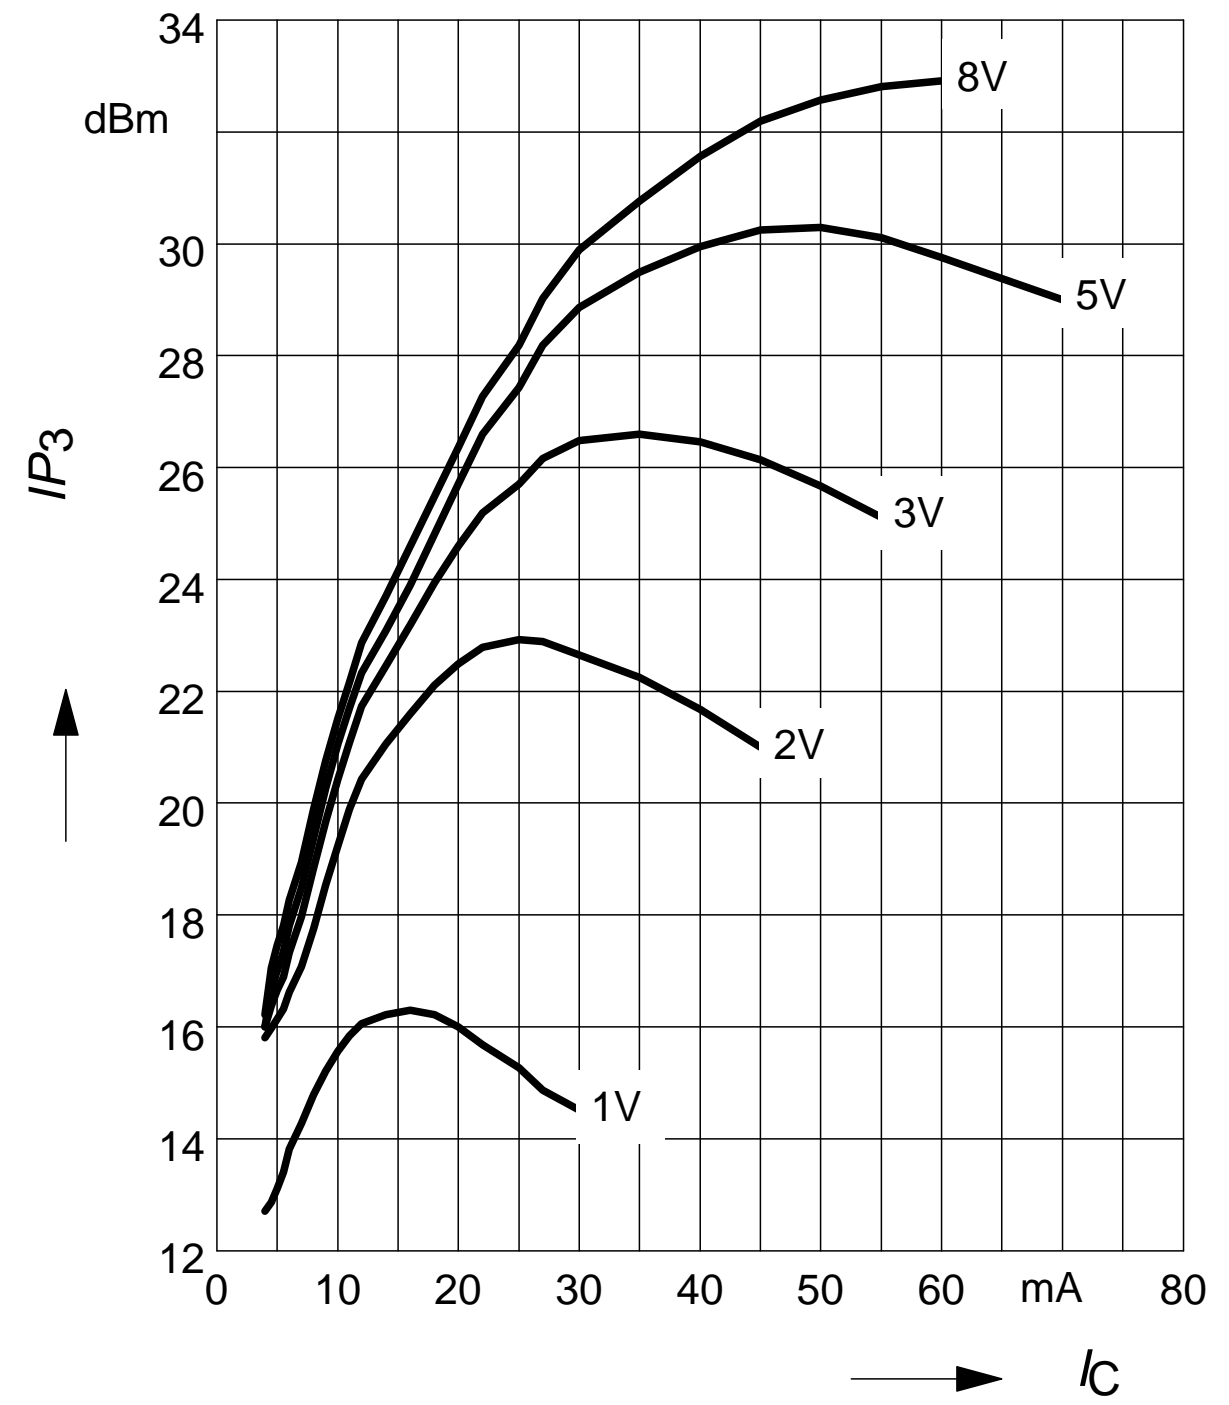

Power Gain G_{ma}, G_{ms} = $f(f)$

V_{CE} = Parameter

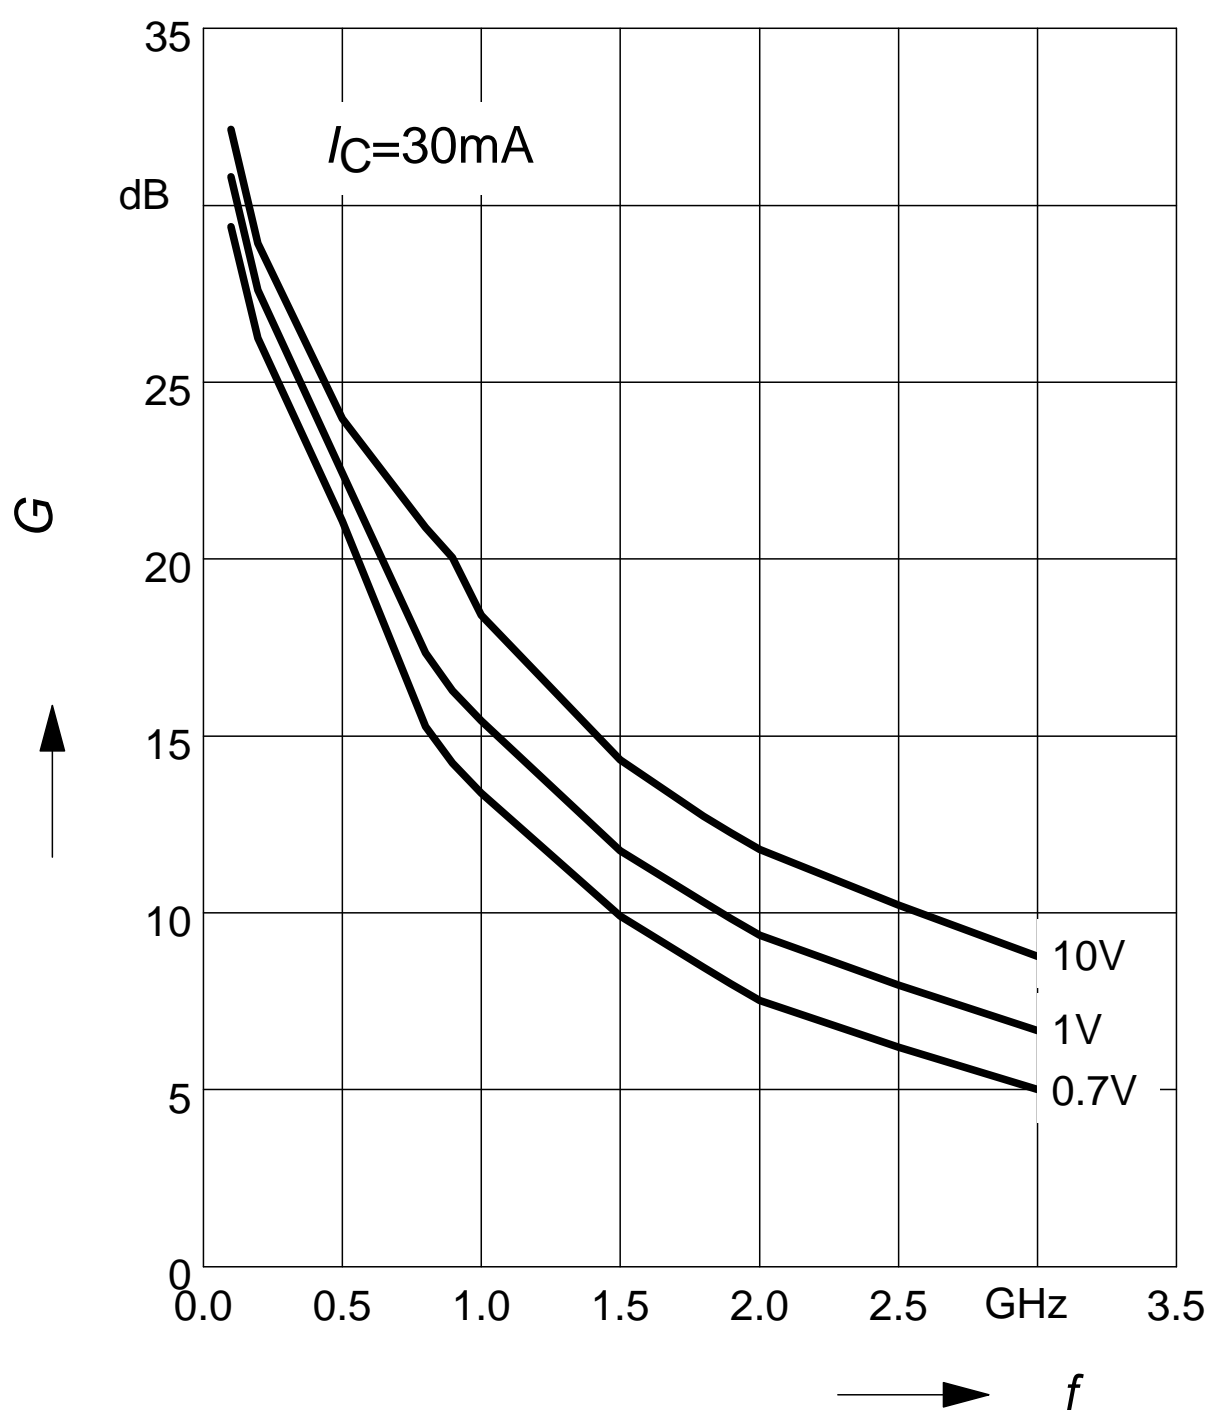

Power Gain $|S_{21}|^2$= $f(f)$

V_{CE} = Parameter