Features

CAS Latency and Frequency

Maximum Operating Frequency (MHz)								
DDR466 DDR400 (43) (5T)		DDR333 (6K)	DDR266 (75B)					
-	-	133	100					
-	166	166	133					
233	200	-	-					
	DDR466 (43) - -	DDR466 DDR400 (43) (5T) 166	DDR466 (43) DDR400 (5T) DDR333 (6K) - - 133 - 166 166					

- Double data rate architecture: two data transfers per clock cycle
- Bidirectional data strobe (DQS) is transmitted and received with data, to be used in capturing data at the receiver
- DQS is edge-aligned with data for reads and is centeraligned with data for writes

Description

The 128Mb DDR SDRAM is a high-speed CMOS, dynamic random-access memory containing 134,217,728 bits. It is internally configured as a quad-bank DRAM and is based on Nanya's 110nm process.

The 128Mb DDR SDRAM uses a double-data-rate architecture to achieve high-speed operation. The double data rate architecture is essentially a *2n* prefetch architecture with an interface designed to transfer two data words per clock cycle at the I/O pins. A single read or write access for the 128Mb DDR SDRAM effectively consists of a single *2n*-bit wide, one clock cycle data transfer at the internal DRAM core and two corresponding n-bit wide, one-half-clock-cycle data transfers at the I/O pins.

A bidirectional data strobe (DQS) is transmitted externally, along with data, for use in data capture at the receiver. DQS is a strobe transmitted by the DDR SDRAM during Reads and by the memory controller during Writes. DQS is edgealigned with data for Reads and center-aligned with data for Writes.

The 128<u>Mb</u> DDR SDRAM operates from a differ<u>ential</u> clock (CK and CK; the crossing of CK going high and CK going LOW is referred to as the positive edge of CK). Commands (address and control signals) are registered at every positive edge of CK. Input data is registered on both edges of DQS, and output data is referenced to both edges of DQS, as well as to both edges of CK.

Read and write accesses to the DDR SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an Active command, which is then followed by a Read or Write command. The address bits registered coincident with the Active command are used to select the bank and row to be accessed. The address bits registered coincident with the Read or Write command are used to select the bank and the starting column location for the burst access.



- Differential clock inputs (CK and CK)
- Four internal banks for concurrent operation
- · Data mask (DM) for write data
- DLL aligns DQ and DQS transitions with CK transitions
- Commands entered on each positive CK edge; data and data mask referenced to both edges of DQS
- Burst lengths: 2, 4, or 8
- CAS Latency: 2 & 2.5 for 6K/75B , 2.5 & 3 for 5T, 3 for 43
- Auto Precharge option for each burst access
- Auto Refresh and Self Refresh Modes
- 15.6µs Maximum Average Periodic Refresh Interval
- 2.5V (SSTL_2 compatible) I/O
- $V_{DD} = V_{DDQ} = 2.5V \pm 0.2V (6K/75B)$
- $V_{DD} = V_{DDQ} = 2.6V \pm 0.1V (5T/43)$
- · Lead-free and Halogen-free product available

The DDR SDRAM provides for programmable Read or Write burst lengths of 2, 4, or 8 locations. An Auto Precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst access.

As with standard SDRAMs, the pipelined, multibank architecture of DDR SDRAMs allows for concurrent operation, thereby providing high effective bandwidth by hiding row precharge and activation time.

An auto refresh mode is provided along with a power-saving Power Down mode.

The functionality described and the timing specifications included in this data sheet are for the DLL Enabled mode of operation.

REV 0.5 May 06, 2005 Preliminary





Ordering Information

	0.00	Dert Number	Deskere	Spe	eed	Commonte
	Org. Part Number		Package	Clock (MHz)	CL-t _{RCD} -t _{RP}	Comments
		NT5DS8M16FT-43		233	3-4-4	DDR466, 4K/64ms Refresh
		NT5DS8M16FT-5T	66 pin	200	3-3-3	DDR400, 4K/64ms Refresh
	NT5DS8M16FT-6K NT5DS8M16FT-75B 8M x 16 NT5DS8M16FS-43	TSOP2	166	2.5-3-3	DDR333, 4K/64ms Refresh	
81		NT5DS8M16FT-75B		133	2.5-3-3	DDR266 4K/64ms Refresh
0		NT5DS8M16FS-43		233	3-4-4	DDR466, 4K/64ms Refresh
		NT5DS8M16FS-5T	66 pin TSOP2	200	3-3-3	DDR400, 4K/64ms Refresh
		NT5DS8M16FS-6K	(Green Package)	166	2.5-3-3	DDR333, 4K/64ms Refresh
	NT5DS8M16FS-75B		133	2.5-3-3	DDR266, 4K/64ms Refresh	



Pin Configuration - 66 pins 400mil TSOP II Package

	66	V _{SS}
		DQ15
		V _{SSQ}
		DQ14
		DQ13
		V _{DDQ}
		DQ12
		DQ11
		V _{SSQ}
		DQ10
		DQ9
	55	V _{DDQ}
13	54	DQ8
14	53 🗆	NC
15	52	V _{SSQ}
16	51 🗌	UDQS
L 17	50 🗆	NC
18	49	V _{REF}
19	48	V _{SS}
20	47 🗖	UDM*
21	46	CK
22	45	СК
23	44	СКЕ
24	43	NC
		NC
	41	A11
		A9
		A8
		A7
		A6
	•· _	A5
		A4
		V _{SS}
oo-piii riasiic i		
Column Ad	dress Table	
	 [] 13 [] 14 [] 15 [] 16 [] 17 [] 18 [] 19 [] 20 [] 21 [] 22 [] 23 [] 24 [] 25 [] 26 [] 27 [] 28 [] 29 [] 30 [] 31 [] 32 [] 33 66-pin Plastic Tomogram (Composition Composition (Composition (C	$\begin{bmatrix} 2 & 65 \\ 3 & 64 \\ 4 & 63 \\ 5 & 62 \\ 6 & 61 \\ 7 & 60 \\ 7 & 60 \\ 8 & 59 \\ 9 & 58 \\ 0 & 10 \\ 11 \\ 56 \\ 0 & 12 \\ 12 \\ 55 \\ 0 & 13 \\ 14 \\ 53 \\ 0 & 14 \\ 15 \\ 15 \\ 52 \\ 0 & 16 \\ 11 \\ 15 \\ 52 \\ 0 & 16 \\ 11 \\ 17 \\ 50 \\ 0 & 18 \\ 19 \\ 19 \\ 18 \\ 49 \\ 0 & 19 \\ 19 \\ 18 \\ 49 \\ 0 & 19 \\ 19 \\ 18 \\ 49 \\ 0 & 19 \\ 19 \\ 18 \\ 49 \\ 0 & 19 \\ 19 \\ 18 \\ 49 \\ 0 & 19 \\ 19 \\ 21 \\ 48 \\ 10 \\ 22 \\ 45 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 0 \\ 23 \\ 44 \\ 0 \\ 22 \\ 45 \\ 0 \\ 0 \\ 0 \\ 28 \\ 39 \\ 0 \\ 0 \\ 31 \\ 36 \\ 0 \\ 31 \\ 36 \\ 0 \\ 32 \\ 35 \\ 0 \\ 0 \\ 35 \\ 0 \\ 0 \\ 35 \\ 0 \\ 0 \\ 35 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ $

Organization	Row Address	Column Address	Refresh		
8Mb x 16	A0-A11	A0-A8	4K/64ms		




Input/Output Functional Description

Symbol	Туре	Function
СК, СК	Input	Clock: CK and \overline{CK} are differential clock inputs. All address and <u>control</u> input signals are sampled on the crossing of the positive edge of CK and negative edge of CK. Output (read) data is referenced to the crossings of CK and CK (both directions of crossing).
CKE, CKE0, CKE1	Input	Clock Enable: CKE HIGH activates, and CKE Low deactivates, internal clock signals and device input buffers and output drivers. Taking CKE Low provides Precharge Power Down and Self Refresh operation (all banks idle), or Active Power Down (row Active in any bank). CKE is synchronous for power down entry and exit, and for self refresh entry. CKE is asynchronous for self refresh exit. CKE must be maintained high throughout read and write accesses. Input buffers, excluding CK, CK and CKE are disabled during Power Down. Input buffers, excluding CKE, are disabled during self refresh. The standard pinout includes one CKE pin. Optional pinouts might include CKE1 on a different pin, in addition to CKE0, to facilitate independent power down control of stacked devices.
$\overline{CS}, \overline{CS0}, \overline{CS1}$	Input	Chip Select: All commands are masked when \overline{CS} is registered high. \overline{CS} provides for external bank selection on systems with multiple banks. CS is considered part of the command code. The standard pinout includes one \overline{CS} pin. Optional pinouts might include CS1 on a different pin, in addition to CS0, to allow upper or lower deck selection on stacked devices.
RAS, CAS, WE	Input	Command Inputs: \overrightarrow{RAS} , \overrightarrow{CAS} and \overrightarrow{WE} (along with \overrightarrow{CS}) define the command being entered.
DM	Input	Input Data Mask: DM is an input mask signal for write data. Input data is masked when DM is sampled high coincident with that input data during a Write access. DM is sampled on both edges of DQS. Although DM pins are input only, the DM loading matches the DQ and DQS loading. During a Read, DM can be driven high, low, or floated.
BA0, BA1	Input	Bank Address Inputs: BA0 and BA1 define to which bank an Active, Read, Write or Precharge command is being applied. BA0 and BA1 also determines if the mode register or extended mode register is to be accessed during a MRS or EMRS cycle.
A0 - A11	Input	Address Inputs: Provide the row address for Active commands, and the column address and Auto Precharge bit for Read/Write commands, to select one location out of the memory array in the respective bank. A10 is sampled during a Precharge command to determine whether the Precharge applies to one bank (A10 low) or all banks (A10 high). If only one bank is to be precharged, the bank is selected by BA0, BA1. The address inputs also provide the op-code during a Mode Register Set command.
DQ	Input/Output	Data Input/Output: Data bus.
DQS, LDQS, UDQS	Input/Output	Data Strobe: Output with read data, input with write data. Edge-aligned with read data, centered in write data. Used to capture write data. For the x16, LDQS corresponds to the data on DQ0-DQ7; UDQS corresponds to the data on DQ8-DQ15
NC		No Connect: No internal electrical connection is present.
NU		Electrical connection is present. Should not be connected at second level of assembly.
V _{DDQ}	Supply	DQ Power Supply: $2.5V \pm 0.2V$.
V _{SSQ}		PO Ground
	Supply	DQ Ground
V _{DD}	Supply Supply	DQ GroundPower Supply: $2.5V \pm 0.2V.$
V _{DD} V _{SS}		



Block Diagram (8Mb x 16)

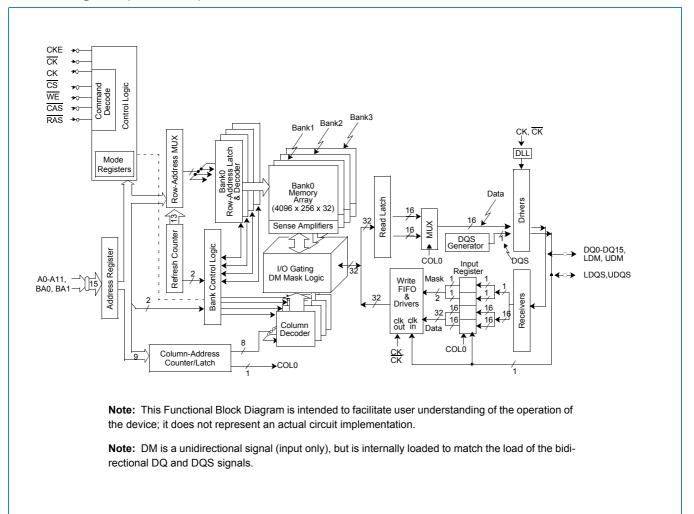



Functional Description

The 128Mb DDR SDRAM is a high-speed CMOS, dynamic random-access memory containing 134,217,728 bits. The 128Mb DDR SDRAM is internally configured as a quad-bank DRAM.

The 128Mb DDR SDRAM uses a double-data-rate architecture to achieve high-speed operation. The double-data-rate architecture is essentially a *2n* prefetch architecture, with an interface designed to transfer two data words per clock cycle at the I/O pins. A single read or write access for the 128Mb DDR SDRAM consists of a single *2n*-bit wide, one clock cycle data transfer at the internal DRAM core and two corresponding n-bit wide, one-half clock cycle data transfers at the I/O pins.

Read and write accesses to the DDR SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an Active command, which is then followed by a Read or Write command. The address bits registered coincident with the Active command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0-A11 select the row). The address bits registered coincident with the Read or Write command are used to select the starting column location for the burst access.

Prior to normal operation, the DDR SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

Initialization

Only one of the following two conditions must be met.

- No power sequencing is specified during power up or power down given the following criteria:
 - VDD and VDDQ are driven from a single power converter output
 - VTT meets the specification
 - A minimum resistance of 42 ohms limits the input current from the VTT supply into any pin and VREF tracks VDDQ /2
- or

• The following relationships must be followed:

VDDQ is driven after or with VDD such that VDDQ < VDD + 0.3V

VTT is driven after or with VDDQ such that VTT < VDDQ + 0.3V

VREF is driven after or with VDDQ such that VREF < VDDQ + 0.3V

The DQ and DQS outputs are in the High-Z state, where they remain until driven in normal operation (by a read access). After all power supply and reference voltages are stable, and the clock is stable, the DDR SDRAM requires a 200µs delay prior to applying an executable command.

Once the 200µs delay has been satisfied, a Deselect or NOP command should be applied, and CKE must be brought HIGH. Following the NOP command, a Precharge ALL command must be applied. Next a Mode Register Set command must be issued for the Extended Mode Register, to enable the DLL, then a Mode Register Set command must be issued for the Mode Register, to reset the DLL, and to program the operating parameters. 200 clock cycles are required between the DLL reset and any read command. A Precharge ALL command should be applied, placing the device in the "all banks idle" state

Once in the idle state, two auto refresh cycles must be performed. Additionally, a Mode Register Set command for the Mode Register, with the reset DLL bit deactivated (i.e. to program operating parameters without resetting the DLL) must be performed. Following these cycles, the DDR SDRAM is ready for normal operation.

DDR SDRAM's may be reinitialized at any time during normal operation by asserting a valid MRS command to either the base or extended mode registers without affecting the contents of the memory array. The contents of either the mode register or extended mode register can be modified at any valid time during device operation without affecting the state of the internal address refresh counters used for device refresh.

Register Definition



The Mode Register is used to define the specific mode of operation of the DDR SDRAM. This definition includes the selection of a burst length, a burst type, a CAS latency, and an operating mode. The Mode Register is programmed via the Mode Register Set command (with BA0 = 0 and BA1 = 0) and retains the stored information until it is programmed again or the device loses power (except for bit A8, which is self-clearing).

Mode Register bits A0-A2 specify the burst length, A3 specifies the type of burst (sequential or interleaved), A4-A6 specify the CAS latency, and A7-A11 specify the operating mode.

The Mode Register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements results in unspecified operation.

Burst Length

Read and write accesses to the DDR SDRAM are burst oriented, with the burst length being programmable. The burst length determines the maximum number of column locations that can be accessed for a given Read or Write command. Burst lengths of 2, 4, or 8 locations are available for both the sequential and the interleaved burst types.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a Read or Write command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst wraps within the block if a boundary is reached. The block is uniquely selected by A1-Ai when the burst length is set to two, by A2-Ai when the burst length is set to four and by A3-Ai when the burst length is set to eight (where Ai is the most significant column address bit for a given configuration). The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. The programmed burst length applies to both Read and Write bursts.





Mode Register Operation

	BA1	BA0	A11	A10	A9	A8	A7	A6	A5	A4	A3	A2	A1	A0	Address Bus
	0*	0*	С	Operating Mode CAS Late						ncy	BT	Bu	rst Lenç	gth	Mode Register
			1												1
A11 - A9	A8	A7	A6 - A	۸0	Operat	ing Mo	de		_		•		_		
0	0	0	Valio			Normal operation Do not reset DLL				A3		urst ype			
0	1	0	Valio	ł	Normal	operati L Rese				0	Seq	uential			
							-			1	Inte	rleave			
0	0	1	VS**	ť	Vendo Test	Mode	ric								
-	-	-			Res	erved									
	Г	A6	A5	CAS	Later	Late	ncv			A2	A1		Leng	•	
				A4											st Lenath
		0	0	0		Rese	rved	-		0	0		0		st Length eserved
	_	0 0						_		0 0	0 0		0 1		-
		-	0	0		Rese	rved			-			-		eserved
		0	0 0	0		Rese Rese	rved			0	0		1		eserved 2
		0	0 0 1	0 1 0		Rese Rese 2	erved 2 otion)			0 0	0		1 0	R	eserved 2 4
		0 0 0	0 0 1 1	0 1 0 1		Rese Rese 2 3 (Op	erved etion) erved			0 0 0	0 1 1		1 0 1	Ri	eserved 2 4 8
		0 0 0 1	0 0 1 1 0	0 1 0 1 0		Rese Rese 2 3 (Op Rese	rved etion) rved ption)			0 0 0 1	0 1 1 0		1 0 1 0	Ri	eserved 2 4 8 eserved

* BA0 and BA1 must be 0, 0 to select the Mode Register (vs. the Extended Mode Register).



Burst Definition

Durat Law off	Startir	ng Column A	ddress	Order of Accesses Within a Burst					
Burst Length	A2	A1	A0	Type = Sequential	Type = Interleaved				
0	0		0-1	0-1					
2			1	1-0	1-0				
		0	0	0-1-2-3	0-1-2-3				
		0	1	1-2-3-0	1-0-3-2				
4		1	0	2-3-0-1	2-3-0-1				
		1	1	3-0-1-2	3-2-1-0				
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7				
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6				
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5				
	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4				
8	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3				
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2				
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1				
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0				

Notes:

- 1. For a burst length of two, A1-A i selects the two-data-element block; A0 selects the first access within the block.
- 2. For a burst length of four, A2-A i selects the four-data-element block; A0-A1 selects the first access within the block.
- 3. For a burst length of eight, A3-A i selects the eight-data- element block; A0-A2 selects the first access within the block.
- 4. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.

Burst Type

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit A3. The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in *Burst Definition* on page 9.

Read Latency

The Read latency, or CAS latency, is the delay, in clock cycles, between the registration of a Read command and the availability of the first burst of output data. The latency can be programmed 2 or 2.5 clocks.

If a Read command is registered at clock edge n, and the latency is m clocks, the data is available nominally coincident with clock edge n + m.

Reserved states should not be used as unknown operation or incompatibility with future versions may result.




Operating Mode

The normal operating mode is selected by issuing a Mode Register Set Command with bits A7-A11 to zero, and bits A0-A6 set to the desired values. A DLL reset is initiated by issuing a Mode Register Set command with bits A7 and A9-A11 each set to zero, bit A8 set to one, and bits A0-A6 set to the desired values. A Mode Register Set command issued to reset the DLL should always be followed by a Mode Register Set command to select normal operating mode.

All other combinations of values for A7-A11 are reserved for future use and/or test modes. Test modes and reserved states should not be used as unknown operation or incompatibility with future versions may result.

CAS Latencies

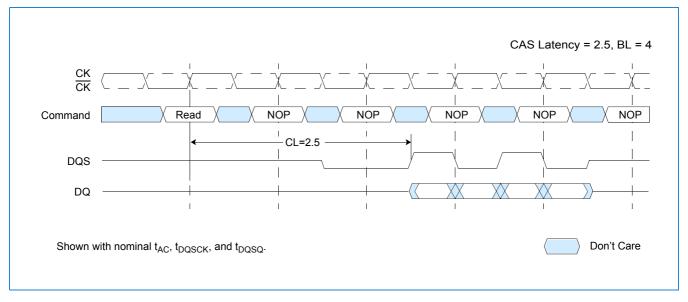

Extended Mode Register

The Extended Mode Register controls functions beyond those controlled by the Mode Register; these additional functions include DLL enable/disable, bit A0; output drive strength selection, bit A1; and \overline{QFC} output enable/disable, bit A2 (NTC optional). These functions are controlled via the bit settings shown in the Extended Mode Register Definition. The Extended Mode Register is programmed via the Mode Register Set command (with BA0 = 1 and BA1 = 0) and retains the stored information until it is programmed again or the device loses power. The Extended Mode Register must be loaded when all banks are idle, and the controller must wait the specified time before initiating any subsequent operation. Violating either of these requirements result in unspecified operation.

DLL Enable/Disable

The DLL must be enabled for normal operation. DLL enable is required during power up initialization, and upon returning to normal operation after having disabled the DLL for the purpose of debug or evaluation. The DLL is automatically disabled when entering self refresh operation and is automatically re-enabled upon exit of self refresh operation. Any time the DLL is enabled, 200 clock cycles must occur to allow time for the internal clock to lock to the externally applied clock before a Read command can be issued. This is the reason for introducing timing parameter t_{XSRD} for DDR SDRAM's (Exit Self Refresh to Read Command). Non- Read commands can be issued 2 clocks after the DLL is enabled via the EMRS command (t_{MRD}) or 10 clocks after the DLL is enabled via self refresh exit command (t_{XSNR} , Exit Self Refresh to Non-Read Command).

Output Drive Strength

The normal drive strength for all outputs is specified to be SSTL_2, Class II.


QFC Enable/Disable

The $\overline{\text{QFC}}$ signal is an optional DRAM output control used to isolate module loads (DIMMs) from the system memory bus by means of external FET switches when the given module (DIMM) is not being accessed. The $\overline{\text{QFC}}$ function is an optional feature for NANYA and is not included on all DDR SDRAM devices.





Extended Mode Register Definition

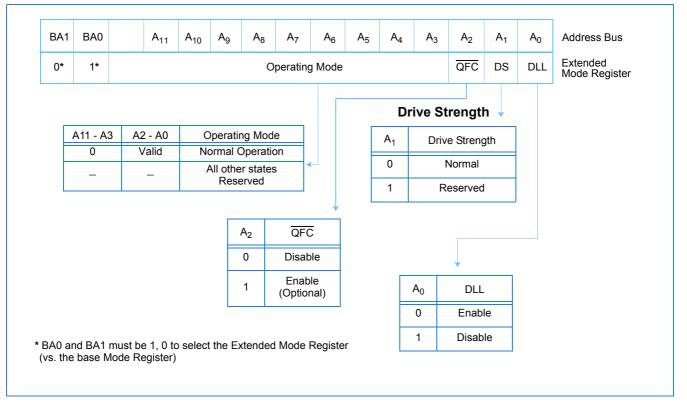



Commands

Truth Tables 1a and 1b provide a reference of the commands supported by DDR SDRAM devices. A verbal description of each commands follows.

Truth Table 1a: Commands

Name (Function)	CS	RAS	CAS	WE	Address	MNE	Notes
Deselect (Nop)	н	Х	Х	Х	х	NOP	1, 9
No Operation (Nop)	L	н	н	н	х	NOP	1, 9
Active (Select Bank And Activate Row)	L	L	н	н	Bank/Row	ACT	1, 3
Read (Select Bank And Column, And Start Read Burst)	L	н	L	н	Bank/Col	Read	1, 4
Write (Select Bank And Column, And Start Write Burst)	L	н	L	L	Bank/Col	Write	1, 4
Burst Terminate	L	н	н	L	Х	BST	1, 8
Precharge (Deactivate Row In Bank Or Banks)	L	L	н	L	Code	PRE	1, 5
Auto Refresh Or Self Refresh (Enter Self Refresh Mode)	L	L	L	н	Х	AR / SR	1, 6, 7
Mode Register Set	L	L	L	L	Op-Code	MRS	1, 2

1. CKE is high for all commands shown except Self Refresh.

2. BA0, BA1 select either the Base or the Extended Mode Register (BA0 = 0, BA1 = 0 selects Mode Register; BA0 = 1, BA1 = 0 selects Extended Mode Register; other combinations of BA0-BA1 are reserved; A0-A11 provide the op-code to be written to the selected Mode Register.)

3. BA0-BA1 provide bank address and A0-A11 provide row address.

4. BA0, BA1 provide bank address; A0-A8 provide column address; A10 high enables the Auto Precharge feature (non-persistent), A10 low disables the Auto Precharge feature.

5. A10 LOW: BA0, BA1 determine which bank is precharged.

A10 HIGH: all banks are precharged and BA0, BA1 are "Don't Care."

6. This command is auto refresh if CKE is high; Self Refresh if CKE is low.

7. Internal refresh counter controls row and bank addressing; all inputs and I/Os are "Don't Care" except for CKE.

8. Applies only to read bursts with Auto Precharge disabled; this command is undefined (and should not be used) for read bursts with Auto Precharge enabled or for write bursts

9. Deselect and NOP are functionally interchangeable.

Truth Table 1b: DM Operation

Name (Function)	DM	DQs	Notes
Write Enable	L	Valid	1
Write Inhibit	Н	Х	1
1. Used to mask write data; provided coincident with the corresponding data.			



Deselect

The Deselect function prevents new commands from being executed by the DDR SDRAM. The DDR SDRAM is effectively deselected. Operations already in progress are not affected.

No Operation (NOP)

The No Operation (NOP) command is used to perform a NOP to a DDR SDRAM. This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

Mode Register Set

The mode registers are loaded via inputs A0-A11, BA0 and BA1 while issuing the Mode Register Set Command. See mode register descriptions in the Register Definition section. The Mode Register Set command can only be issued when all banks are idle and no bursts are in progress. A subsequent executable command cannot be issued until t_{MRD} is met.

Active

The Active command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A11 selects the row. This row remains active (or open) for accesses until a Precharge (or Read or Write with Auto Precharge) is issued to that bank. A Precharge (or Read or Write with Auto Precharge) command must be issued and completed before opening a different row in the same bank.

Read

The Read command is used to initiate a burst read access to an active (open) row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A8 selects the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected, the row being accessed is precharged at the end of the Read burst; if Auto Precharge is not selected, the row remains open for subsequent accesses.

Write

The Write command is used to initiate a burst write access to an active (open) row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A8 selects the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected, the row being accessed is precharged at the end of the Write burst; if Auto Precharge is not selected, the row remains open for subsequent accesses. Input data appearing on the DQs is written to the memory array subject to the DM input logic level appearing coincident with the data. If a given DM signal is registered low, the corresponding data is written to memory; if the DM signal is registered high, the corresponding data inputs are ignored, and a Write is not executed to that byte/column location.

Precharge

The Precharge command is used to deactivate (close) the open row in a particular bank or the open row(s) in all banks. The bank(s) will be available for a subsequent row access a specified time (t_{RP}) after the Precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any Read or Write commands being issued to that bank. A precharge command is treated as a NOP if there is no open row in that bank, or if the previously open row is already in the process of precharging.




Auto Precharge

Auto Precharge is a feature which performs the same individual-bank precharge function described above, but without requiring an explicit command. This is accomplished by using A10 to enable Auto Precharge in conjunction with a specific Read or Write command. A precharge of the bank/row that is addressed with the Read or Write command is automatically performed upon completion of the Read or Write burst. Auto Precharge is non-persistent in that it is either enabled or disabled for each individual Read or Write command. Auto Precharge ensures that the precharge is initiated at the earliest valid stage within a burst. This is determined as if an explicit Precharge command was issued at the earliest possible time without violating $t_{RAS}(min)$. The user must not issue another command to the same bank until the precharge (t_{RP}) is completed.

The NTC DDR SDRAM devices supports the optional t_{RAS} lockout feature. This feature allows a Read command with Auto Precharge to be issued to a bank that has been activated (opened) but has not yet satisfied the t_{RAS} (min) specification. The t_{RAS} lockout feature essentially delays the onset of the auto precharge operation until two conditions occur. One, the entire burst length of data has been successfully prefetched from the memory array; and two, t_{RAS} (min) has been satisfied.

As a means to specify whether a DDR SDRAM device supports the t_{RAS} lockout feature, a new parameter has been defined, t_{RAP} (RAS Command to Read Command with Auto Precharge or better stated Bank Activate to Read Command with Auto Precharge). For devices that support the t_{RAS} lockout feature, $t_{RAP} = t_{RCD}$ (min). This allows any Read Command (with or without Auto Precharge) to be issued to an open bank once t_{RCD} (min) is satisfied.

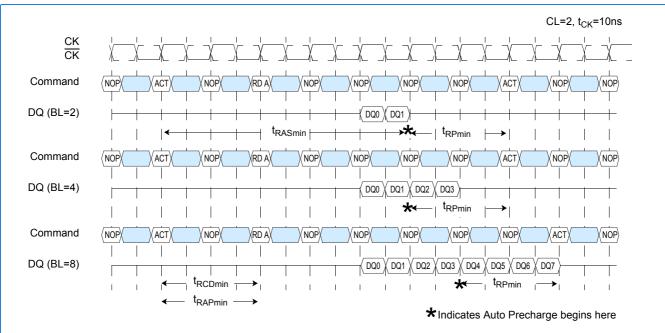

t_{RAP} Definition

The above timing diagrams show the effects of t_{RAP} for devices that support t_{RAS} lockout. In these cases, the Read with Auto Precharge command (RDA) is issued with t_{RCD} (min) and dataout is available with the shortest latency from the Bank Activate command (ACT). The internal precharge operation, however, does not begin until after t_{RAS} (min) is satisfied.

Burst Terminate

The Burst Terminate command is used to truncate read bursts (with Auto Precharge disabled). The most re-cently registered Read command prior to the Burst Terminate command is truncated, as shown in the Operation section of this data sheet. Write burst cycles are not to be terminated with the Burst Terminate command.



Auto Refresh

Auto Refresh is used during normal operation of the DDR SDRAM and is analogous to CAS Before RAS (CBR) Refresh in previous DRAM types. This command is nonpersistent, so it must be issued each time a refresh is required.

The refresh addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an Auto Refresh command. The 128Mb DDR SDRAM requires Auto Refresh cycles at an average periodic interval of 7.8µs (maximum).

Self Refresh

The Self Refresh command can be used to retain data in the DDR SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the DDR SDRAM retains data without external clocking. The Self Refresh command is initiated as an Auto Refresh command coincident with CKE transitioning low. The DLL is automatically disabled upon entering Self Refresh, and is automatically enabled upon exiting Self Refresh (200 clock cycles must then occur before a Read command can be issued). Input signals except CKE (low) are "Don't Care" during Self Refresh operation.


The procedure for exiting self refresh requires a sequence of commands. CK (and \overline{CK}) must be stable prior to CKE returning high. Once CKE is high, the SDRAM must have NOP commands issued for t_{XSNR} because time is required for the completion of any internal refresh in progress. A simple algorithm for meeting both refresh and DLL requirements is to apply NOPs for 200 clock cycles before applying any other command.

Operations

Bank/Row Activation

Before any Read or Write commands can be issued to a bank within the DDR SDRAM, a row in that bank must be "opened" (activated). This is accomplished via the Active command and addresses A0-A11, BA0 and BA1 (see Activating a Specific Row in a Specific Bank), which decode and select both the bank and the row to be activated. After opening a row (issuing an Active command), a Read or Write command may be issued to that row, subject to the t_{RCD} specification. A subsequent Active command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive Active commands to the same bank is defined by t_{RC} . A subsequent Active command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive Active commands to different banks is defined by t_{RD} .


Activating a Specific Row in a Specific Bank

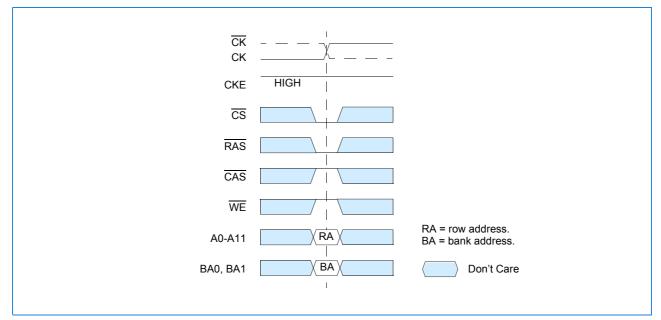





t_{RCD} and t_{RRD} Definition

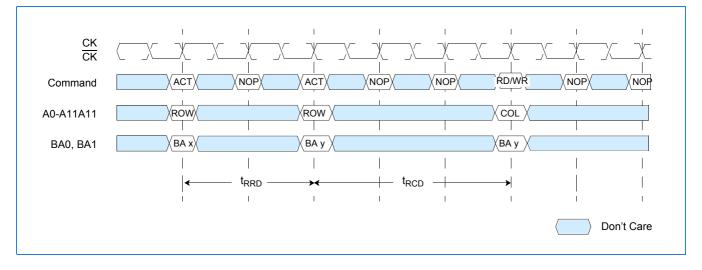

Reads


Subsequent to programming the mode register with CAS latency, burst type, and burst length, Read bursts are initiated with a Read command.

The starting column and bank addresses are provided with the Read command and Auto Precharge is either enabled or disabled for that burst access. If Auto Precharge is enabled, the row that is accessed starts precharge at the completion of the burst, provided t_{RAS} has been satisfied. For the generic Read commands used in the following illustrations, Auto Precharge is disabled.

During Read bursts, the valid data-out element from the starting column address is available following the CAS latency after the Read command. Each subsequent data-out element is valid nominally at the next positive or negative clock edge (i.e. at the next crossing of CK and \overline{CK}). The following timing figure entitled "Read Burst: CAS Latencies (Burst Length=4)" illustrates the general timing for each supported CAS latency setting. DQS is driven by the DDR SDRAM along with output data. The initial low state on DQS is known as the read preamble; the low state coincident with the last data-out element is known as the read post-amble. Upon completion of a burst, assuming no other commands have been initiated, the DQs and DQS goes High-Z. Data from any Read burst may be concatenated with or truncated with data from a subsequent Read command. In either case, a continuous flow of data can be maintained. The first data element from the new burst follows either the last element of a completed burst or the last desired data element of a longer burst which is being truncated. The new Read command should be is ed x cycles after the first Read command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). This is shown in timing figure entitled "Consecutive Read Bursts: CAS Latencies (Burst Length = 3r 8)". A Read command can be initiated on any positive clock cycle following a previous Read command. Nonconsecutive Read is shown in timing figure entitled "Non-Consecutive Read Bursts: CAS Latencies (Burst Length = 3r 8)". Full-speed Rando Read Accesses: CAS Latencies (Burst Length = 2, 4 or 8) within a page (or pages) can be performed as shown on page 23.




Read Command

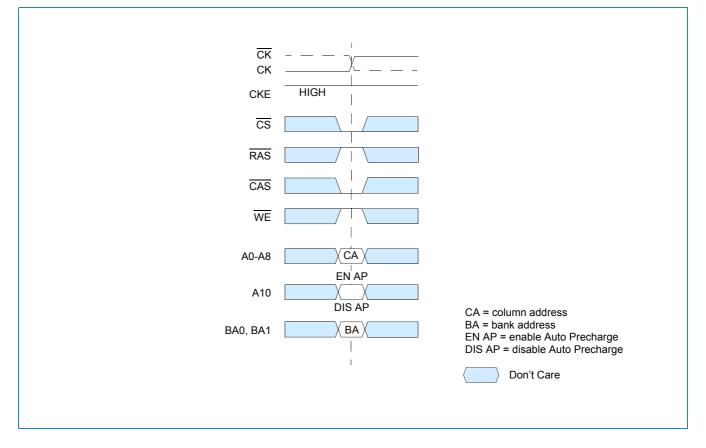




Read Burst: CAS Latencies (Burst Length = 4)

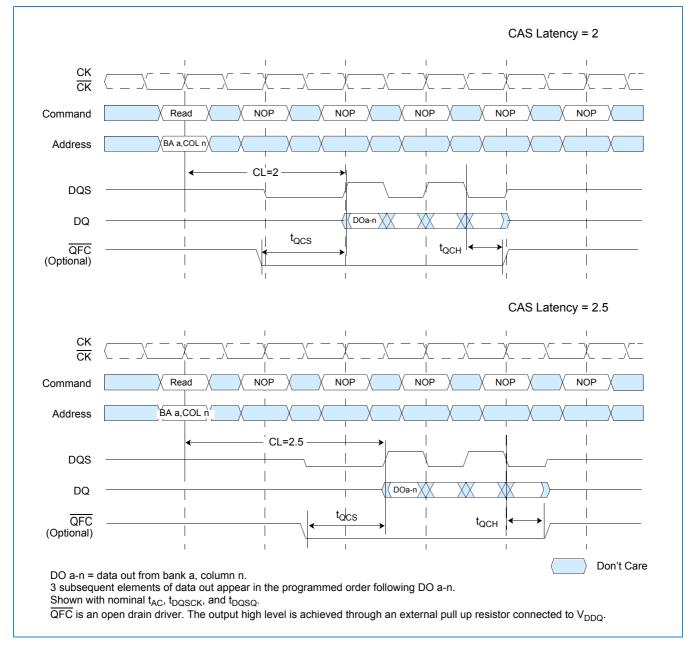




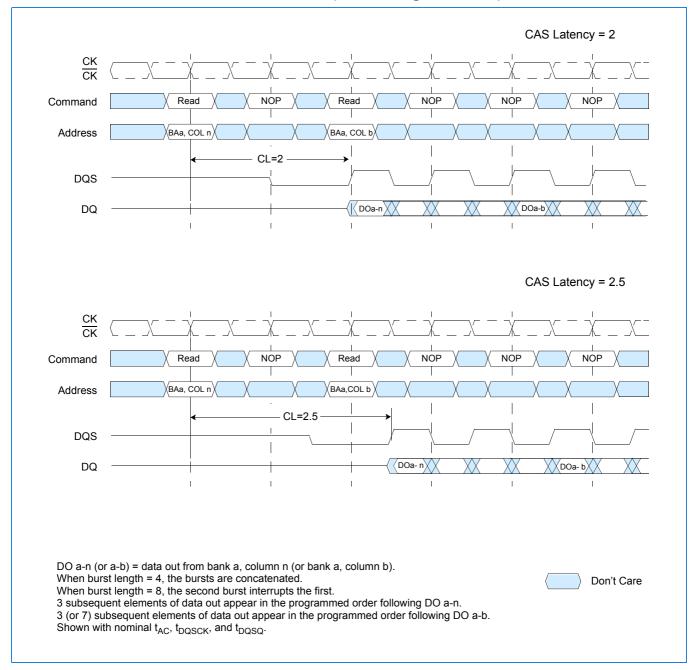


Consecutive Read Bursts: CAS Latencies (Burst Length = 4 or 8)



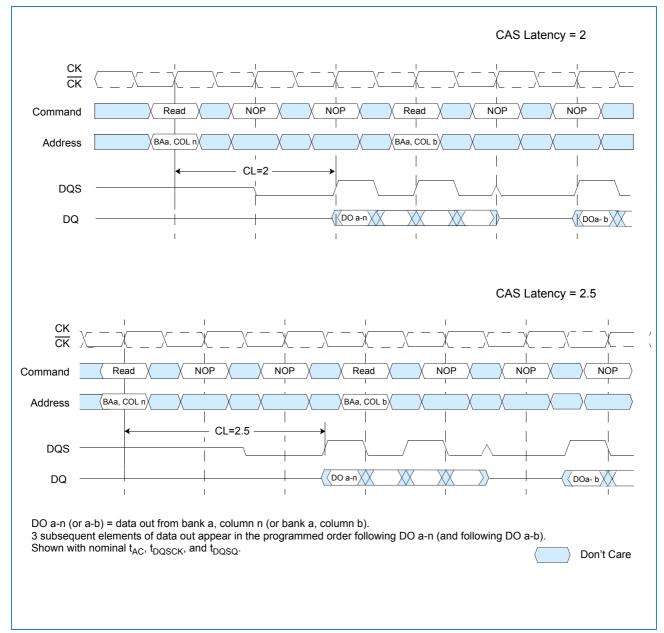





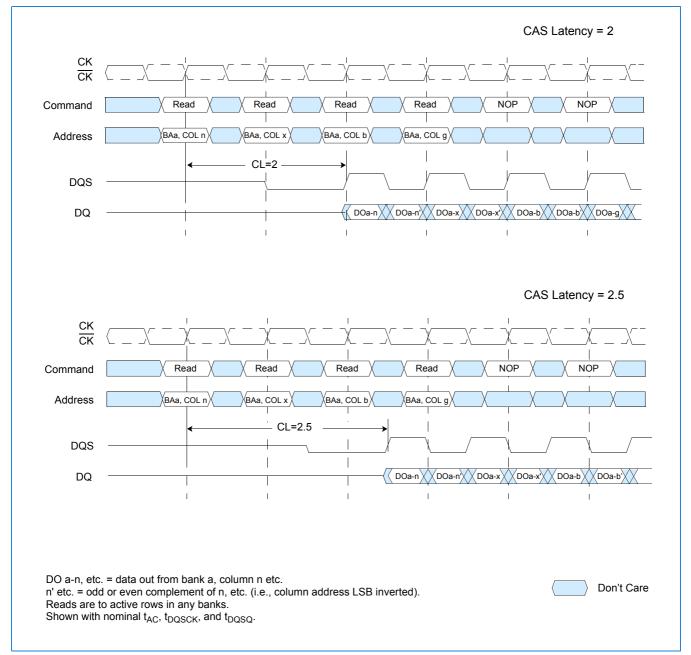

Random Read Accesses: CAS Latencies (Burst Length = 2, 4 or 8)




Data from any Read burst may be truncated with a Burst Terminate command, as shown in timing figure entitled *Terminating a Read Burst: CAS Latencies (Burst Length = 8)* on page 25. The Burst Terminate latency is equal to the read (CAS) latency, i.e. the Burst Terminate command should be issued x cycles after the Read command, where x equals the number of desired data element pairs.

Data from any Read burst must be completed or truncated before a subsequent Write command can be issued. If truncation is necessary, the Burst Terminate command must be used, as shown in timing figure entitled *Read to Write: CAS Latencies (Burst Length = 4 or 8)* on page 26. The example is shown for t_{DQSS} (min). The t_{DQSS} (max) case, not shown here, has a longer bus idle time. t_{DQSS} (min) and t_{DQSS} (max) are defined in the section on Writes.

A Read burst may be followed by, or truncated with, a Precharge command to the same bank (provided that Auto Precharge was not activated). The Precharge command should be issued x cycles after the Read command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). This is shown in timing figure *Read to Precharge: CAS Latencies (Burst Length = 4 or 8)* on page 27 for Read latencies of 2 and 2.5. Following the Precharge command, a subsequent command to the same bank cannot be issued until t_{RP} is met. Note that part of the row precharge time is hidden during the access of the last data elements.


In the case of a Read being executed to completion, a Precharge command issued at the optimum time (as described above) provides the same operation that would result from the same Read burst with Auto Precharge enabled. The disadvantage of the Precharge command is that it requires that the command and address busses be available at the appropriate time to issue the command. The advantage of the Precharge command is that it can be used to truncate bursts.



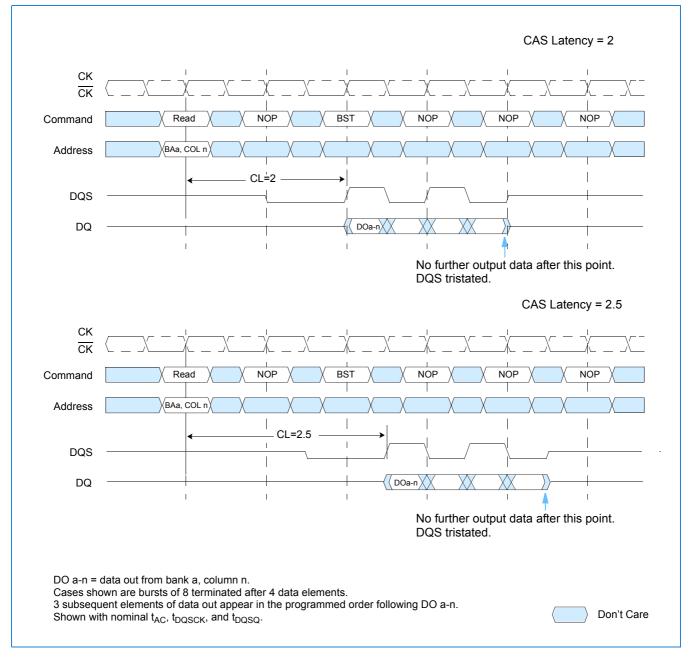


Terminating a Read Burst: CAS Latencies (Burst Length = 8)



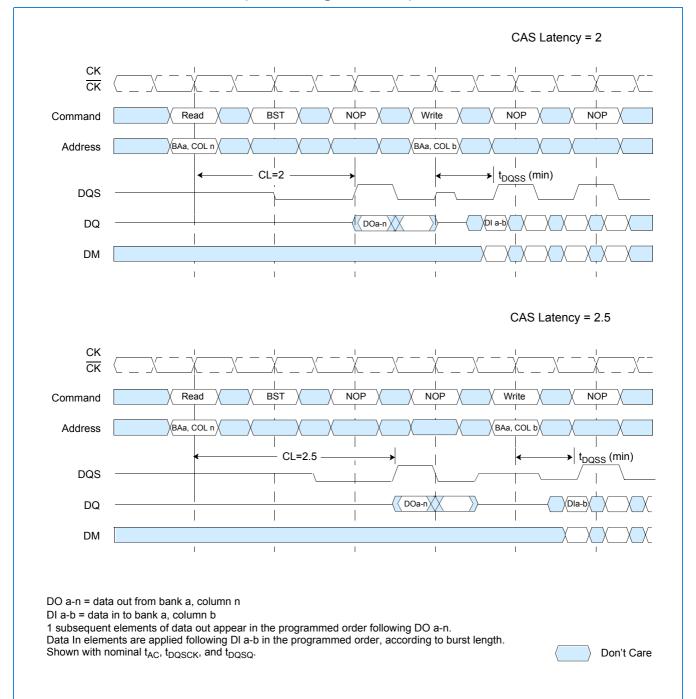

Read to Write: CAS Latencies (Burst Length = 4 or 8)



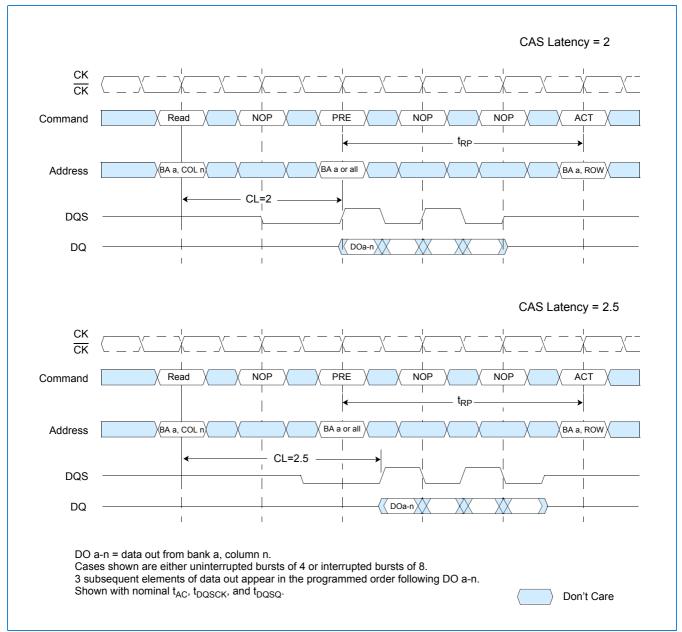

Read to Precharge: CAS Latencies (Burst Length = 4 or 8)



Writes

Write bursts are initiated with a Write command, as shown in timing figure Write Command on page 29.

The starting column and bank addresses are provided with the Write command, and Auto Precharge is either enabled or disabled for that access. If Auto Precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic Write commands used in the following illustrations, Auto Precharge is disabled.

During Write bursts, the first valid data-in element is registered on the first rising edge of DQS following the write command, and subsequent data elements are registered on successive edges of DQS. The Low state on DQS between the Write command and the first rising edge is known as the write preamble; the Low state on DQS following the last data-in element is known as the write postamble. The time between the Write command and the first corresponding rising edge of DQS (t_{DQSS}) is specified with a relatively wide range (from 75% to 125% of one clock cycle), so most of the Write diagrams that follow are drawn for the two extreme cases (i.e. t_{DQSS} (min) and t_{DQSS} (max)). Timing figure *Write Burst (Burst Length = 4)* on page 30 shows the two extremes of t_{DQSS} for a burst of four. Upon completion of a burst, assuming no other commands have been initiated, the DQs and DQS enters High-Z and any additional input data is ignored.

Data for any Write burst may be concatenated with or truncated with a subsequent Write command. In either case, a continuous flow of input data can be maintained. The new Write command can be issued on any positive edge of clock following the previous Write command. The first data element from the new burst is applied after either the last element of a completed burst or the last desired data element of a longer burst which is being truncated. The new Write command should be issued x cycles after the first Write command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). Timing figure *Write to Write (Burst Length = 4)* on page 31 shows concatenated bursts of 4. An example of nonconsecutive Writes is shown in timing figure *Write to Write: Max DQSS, Non-Consecutive (Burst Length = 4)* on page 32. Full-speed random write accesses within a page or pages can be performed as shown in timing figure *Random Write Cycles (Burst Length = 2, 4 or 8)* on page 33. Data for any Write burst may be followed by a subsequent Read command. To follow a Write without truncating the write burst, t_{WTR} (Write to Read) should be met as shown in timing figure *Write to Read: Non-Interrupting (CAS Latency = 2; Burst Length = 4)* on page 34.

Data for any Write burst may be truncated by a subsequent (interrupting) Read command. This is illustrated in timing figures "Write to Read: Interrupting (CAS Latency =2; Burst Length = 8)", "Write to Read: Minimum D_{QSS} , Odd Number of Data (3 bit Write), Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", as shown in the diagrams noted previously.


Data for any Write burst may be followed by a subsequent Precharge command. To follow a Write without truncating the write burst, t_{WR} should be met as shown in timing figure *Write to Precharge: Non-Interrupting (Burst Length = 4)* on page 38.

Data for any Write burst may be truncated by a subsequent Precharge command, as shown in timing figures *Write to Pre-charge: Interrupting (Burst Length = 4 or 8)* on page 39 to *Write to Precharge: Nominal DQSS (2 bit Write), Interrupting (Burst Length = 4 or 8)* on page 41. Note that only the data-in pairs that are registered prior to the t_{WR} period are written to the internal array, and any subsequent data in should be masked with DM. Following the Precharge command, a subsequent command to the same bank cannot be issued until t_{RP} is met.

In the case of a Write burst being executed to completion, a Precharge command issued at the optimum time (as described above) provides the same operation that would result from the same burst with Auto Precharge. The disadvantage of the Precharge command is that it requires that the command and address busses be available at the appropriate time to issue the command. The advantage of the Precharge command is that it can be used to truncate bursts.




Write Command

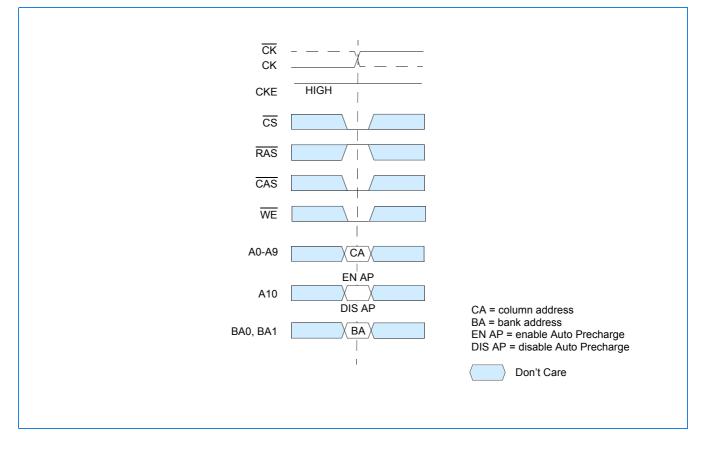




Write Burst (Burst Length = 4)

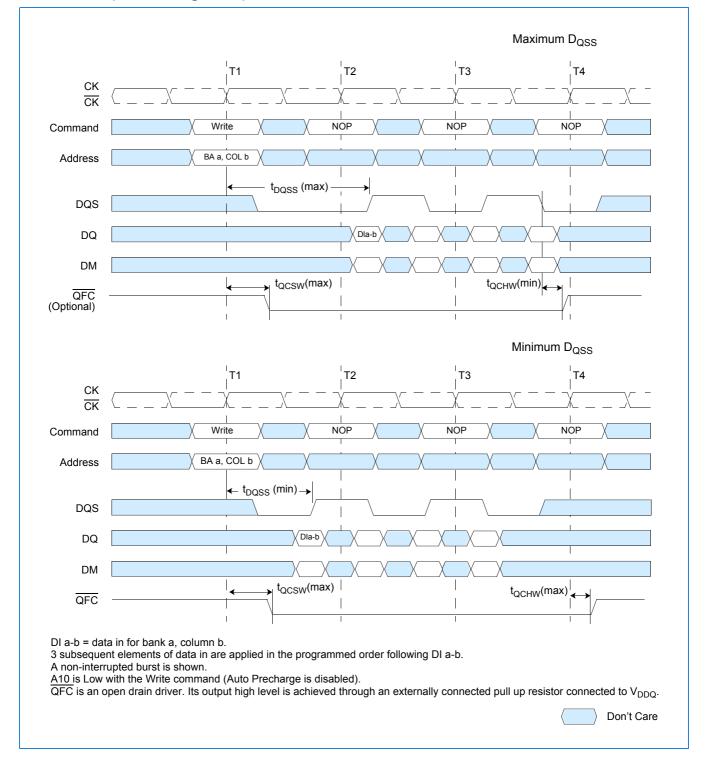




Write to Write (Burst Length = 4)

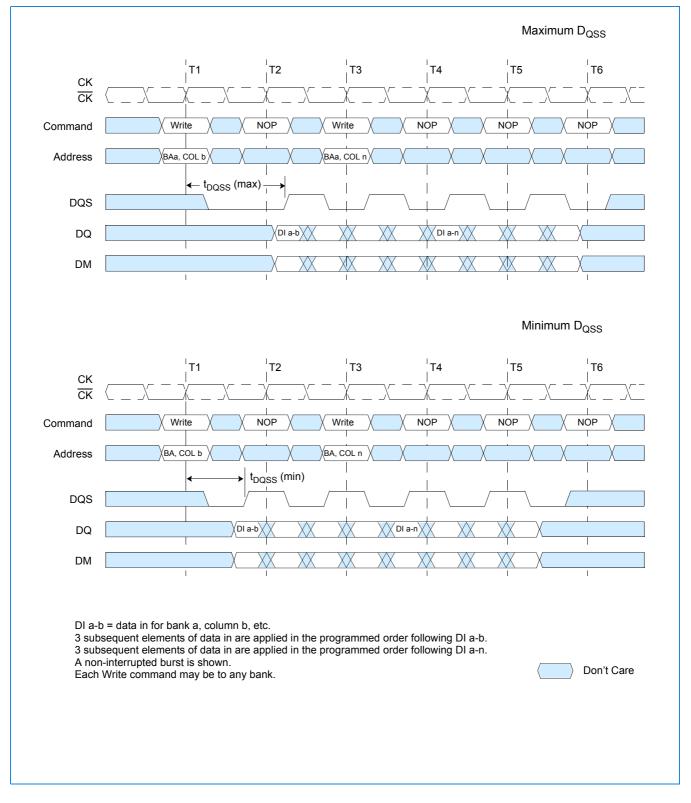




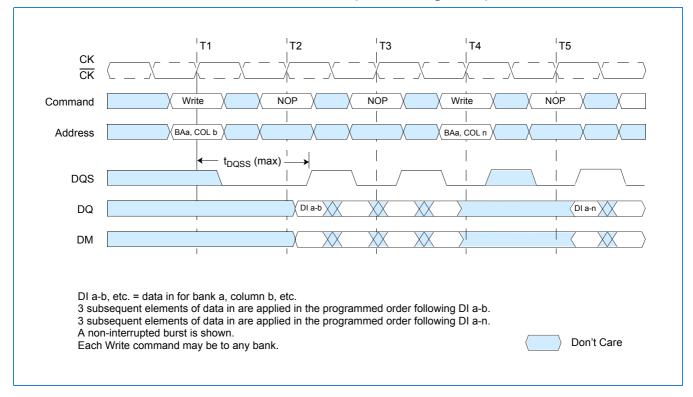


Write to Write: Max DQSS, Non-Consecutive (Burst Length = 4)



Random Write Cycles (Burst Length = 2, 4 or 8)

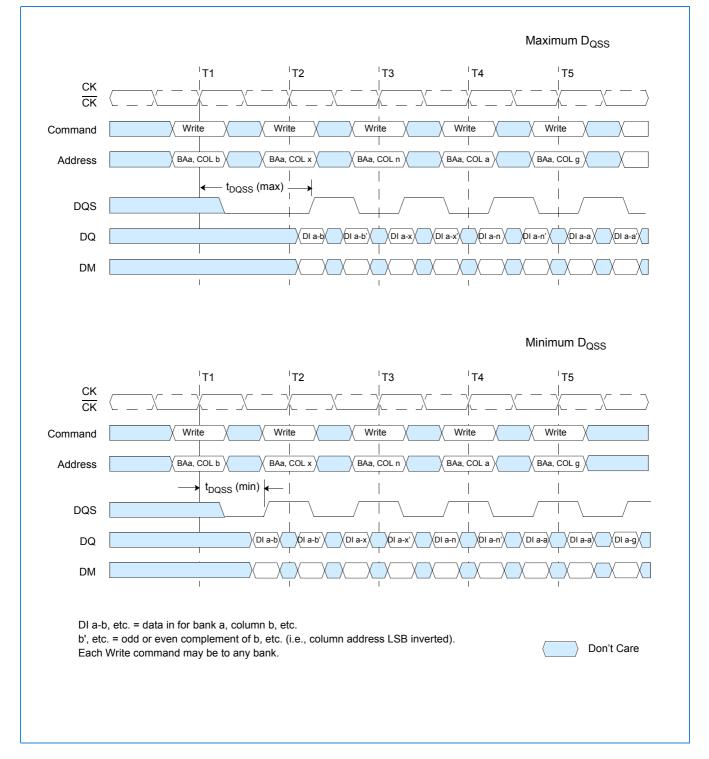




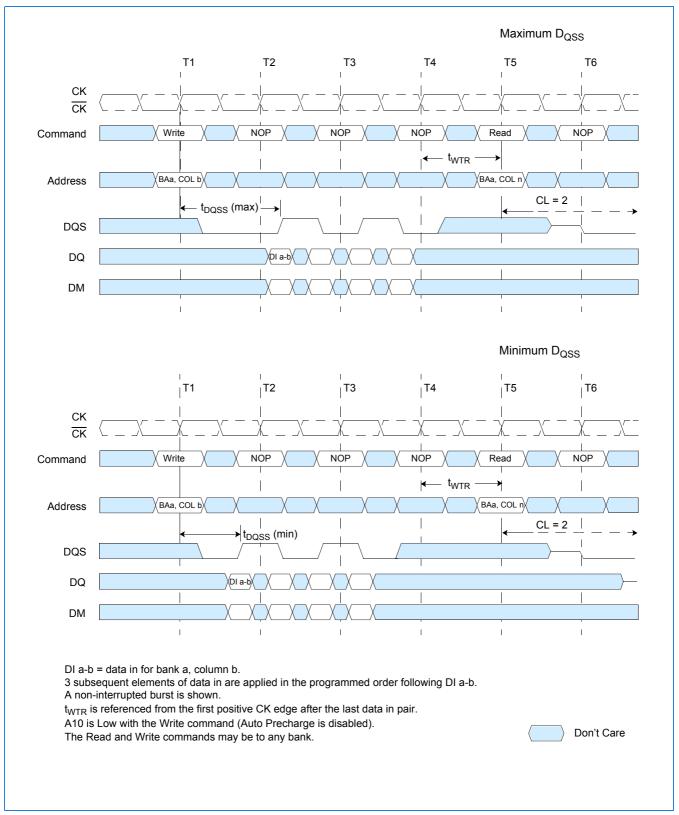

Write to Read: Non-Interrupting (CAS Latency = 2; Burst Length = 4)




Write to Read: Interrupting (CAS Latency = 2; Burst Length = 8)

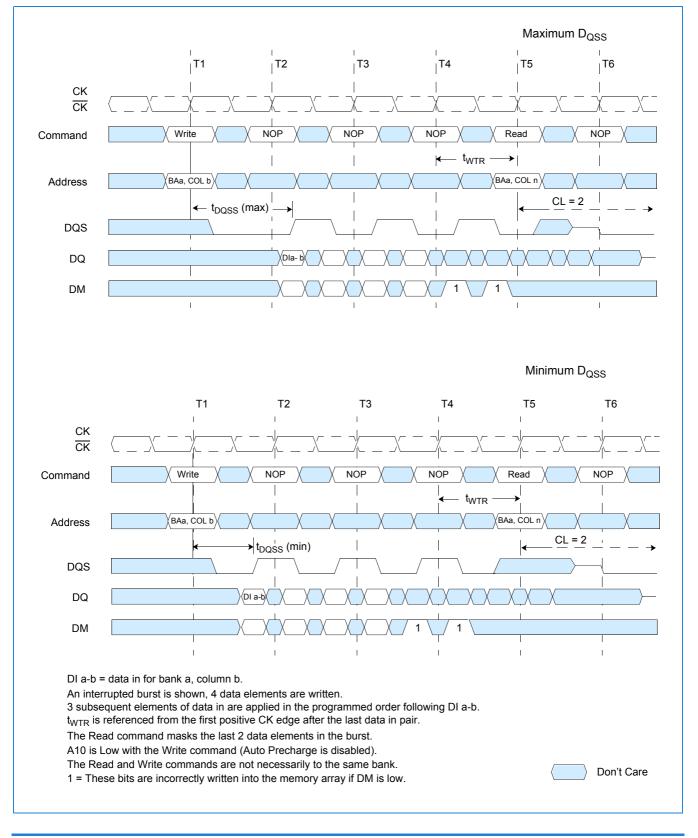




Write to Read: Minimum DQSS, Odd Number of Data (3 bit Write), Interrupting (CAS Latency = 2; Burst Length = 8)

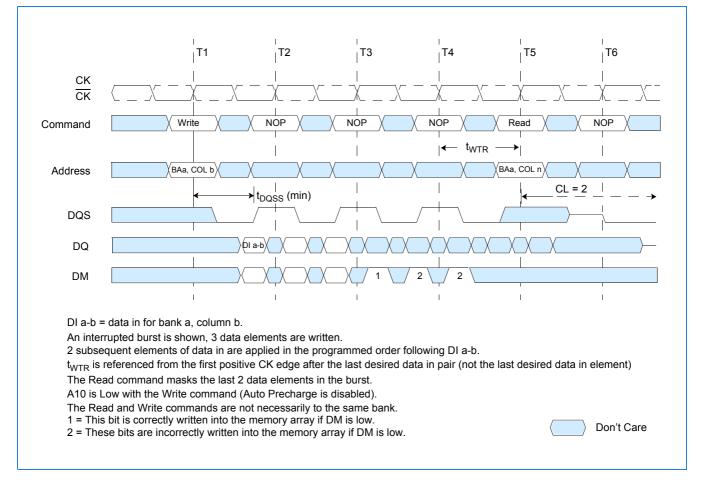



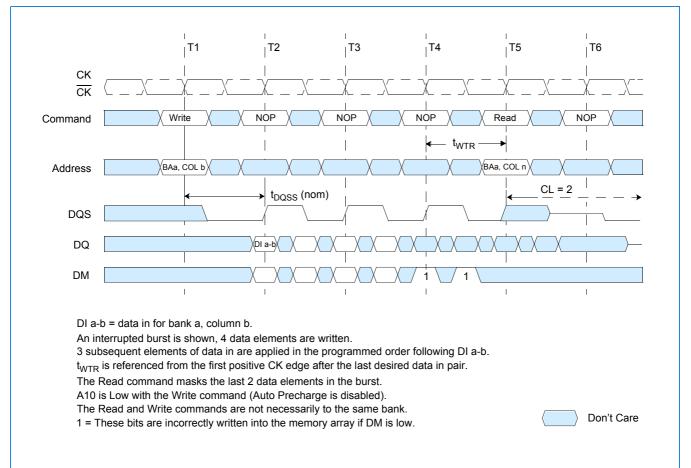

Write to Read: Nominal DQSS, Interrupting (CAS Latency = 2; Burst Length = 8)




Maximum D_{QSS} Τ2 T3 T4 ₁T1 T5 T6 СК CK Write NOF NOF NOF NOF PRE Command t_{WR} ≻ BA a, COL b BA (a or all) Address _ t_{RP}. t_{DQSS} (max) DQS DQ DI a-b DM T I I 1 T Minimum D_{QSS} 1 T T3 |T1 T2 T4 |T5 T6 CK CK Command Write NOP NOP NOP NOP PRE t_{WR} Address BA a, COL b (BA (a or all) t_{RP} . t_{DQSS} (min) DQS DIa-b DQ DM I 1 1 T 1 1 DI a-b = data in for bank a, column b. 3 subsequent elements of data in are applied in the programmed order following DI a-b. A non-interrupted burst is shown. $t_{\rm WR}$ is referenced from the first positive CK edge after the last data in pair. Don't Care A10 is Low with the Write command (Auto Precharge is disabled).


Write to Precharge: Non-Interrupting (Burst Length = 4)



Write to Precharge: Interrupting (Burst Length = 4 or 8)

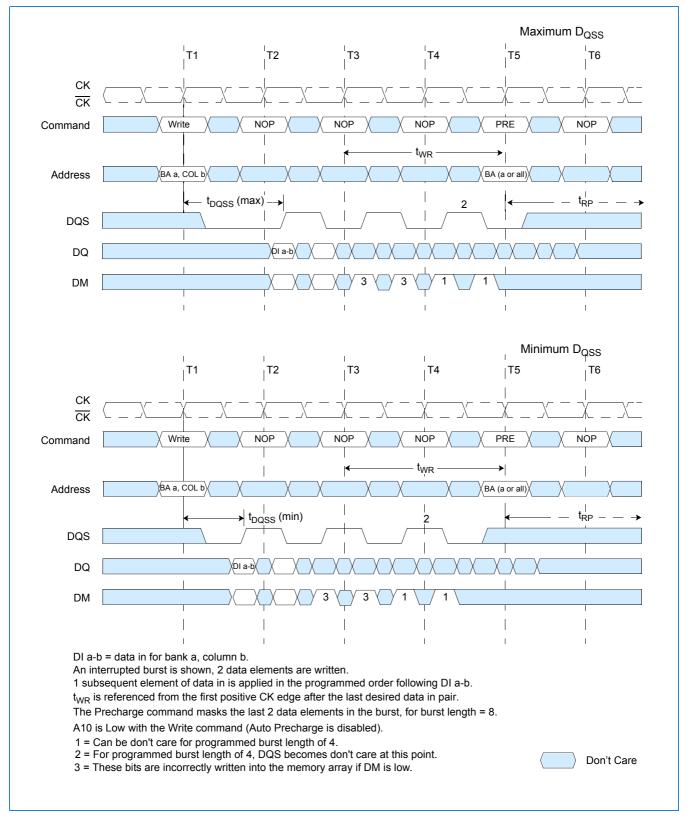




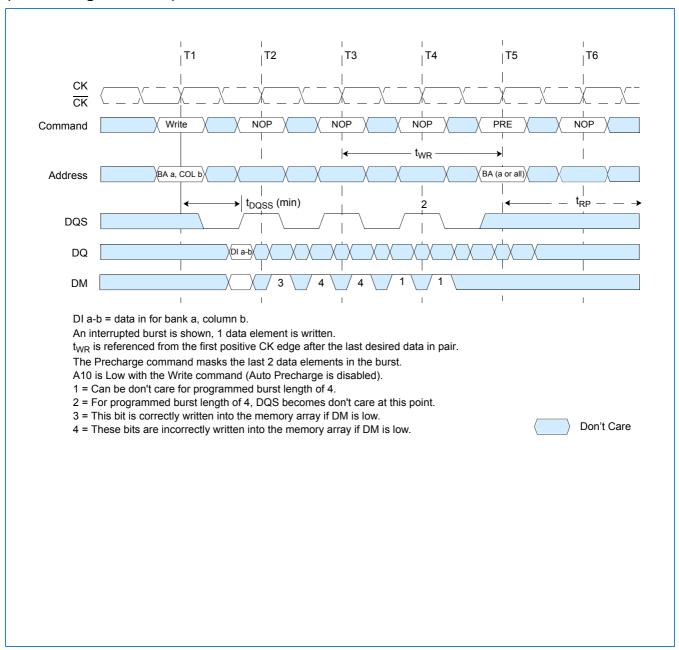

Write to Precharge: Minimum DQSS, Odd Number of Data (1 bit Write), Interrupting (Burst Length = 4 or 8)




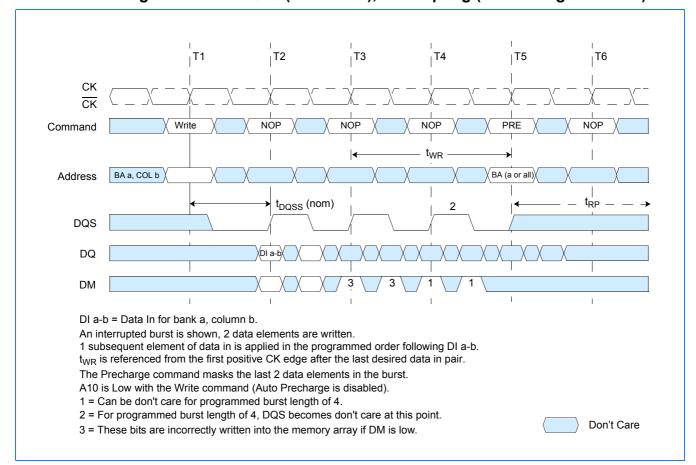

Write to Precharge: Nominal DQSS (2 bit Write), Interrupting (Burst Length = 4 or 8)



Precharge Command

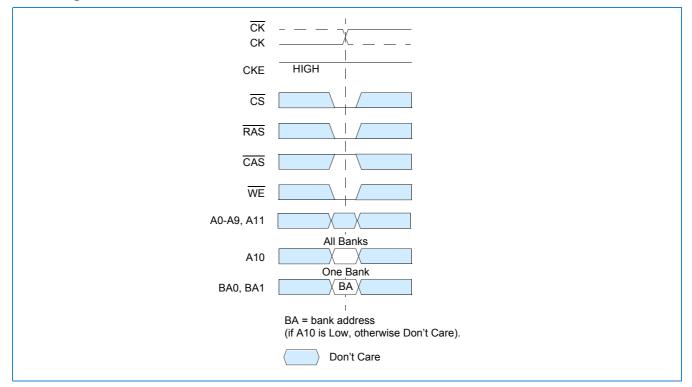

Precharge

The Precharge command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) is available for a subsequent row access some specified time (t_{RP}) after the Precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, inputs BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any Read or Write commands being issued to that bank.




Power Down

Power Down is entered when CKE is registered low (no accesses can be in progress). If Power Down occurs when all banks are idle, this mode is referred to as Precharge Power Down; if Power Down occurs when there is a row active in any bank, this mode is referred to as Active Power Down. Entering Power Down deactivates the input and output buffers, excluding CK, CK and CKE. The DLL is still running in Power Down mode, so for maximum power savings, the user has the option of disabling the DLL prior to entering Power Down. In that case, the DLL must be enabled after exiting Power Down, and 200 clock cycles must occur before a Read command can be issued. In Power Down mode, CKE Low and a stable clock signal must be maintained at the inputs of the DDR SDRAM, and all other input signals are "Don't Care". However, Power Down duration is limited by the refresh requirements of the device, so in most applications, the self refresh mode is preferred over the DLL-disabled Power Down mode.

The Power Down state is synchronously exited when CKE is registered high (along with a Nop or Deselect command). A valid, executable command may be applied one clock cycle later.

Power Down

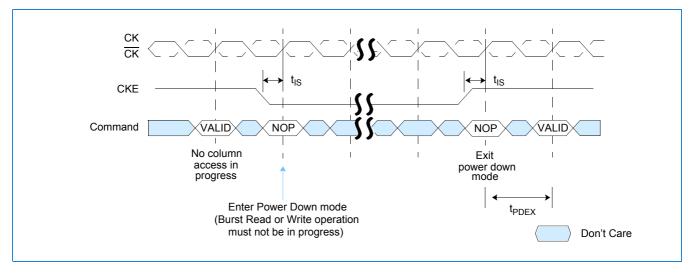



Truth Table 2: Clock Enable (CKE)

- 1. CKE n is the logic state of CKE at clock edge n: CKE n-1 was the state of CKE at the previous clock edge.
- 2. Current state is the state of the DDR SDRAM immediately prior to clock edge n.
- 3. Command n is the command registered at clock edge n, and action n is a result of command n.
- 4. All states and sequences not shown are illegal or reserved.

	CKE n-1	CKEn			
Current State	Previous Cycle	Current Cycle	Command n	Action n	Notes
Self Refresh	L	L	Х	Maintain Self-Refresh	
Self Refresh	L	н	Deselect or NOP Exit Self-Refresh		1
Power Down	L	L	X	Maintain Power Down	
Power Down	L	Н	Deselect or NOP	Exit Power Down	
All Banks Idle	н	L	Deselect or NOP	Precharge Power Down Entry	
All Banks Idle	Н	L	Auto Refresh	Self Refresh Entry	
Bank(s) Active	н	L	Deselect or NOP	Active Power Down Entry	
	н	н	See "Truth Table 3: Current State Bank n - Command to Bank n (Same Bank)" on page 45		

 Deselect or NOP commands should be issued on any clock edges occurring during the Self Refresh Exit (t_{XSNR}) period. A minimum of 200 clock cycles are needed before applying a read command to allow the DLL to lock to the input clock.



Truth Table 3: Current State Bank n - Command to Bank n (Same Bank)

Current State	CS	RAS	CAS	WE	Command	Action	Notes
Any	Н	Х	Х	Х	Deselect	NOP. Continue previous operation	1-6
Ally	L	Н	Н	Н	No Operation	NOP. Continue previous operation	1-6
	L	L	н	н	Active	Select and activate row	1-6
ldle	L	L	L	Н	Auto Refresh		1-7
	L	L	L	L	Mode Register Set		1-7
	L	Н	L	Н	Read	Select column and start Read burst	1-6, 10
Row Active	L	н	L	L	Write	Select column and start Write burst	1-6, 10
	L	L	н	L	Precharge	Deactivate row in bank(s)	1-6, 8
Deed	L	Н	L	Н	Read	Select column and start new Read burst	1-6, 10
Read (Auto Precharge	L	L	н	L	Precharge	Truncate Read burst, start Precharge	1-6, 8
Disabled)	L	Н	н	L	Burst Terminate	Burst Terminate	1-6, 9
	L	Н	L	Н	Read	Select column and start Read burst	1-6, 10, 11
Write (Auto Precharge	L	Н	L	L	Write	Select column and start Write burst	1-6, 10
Disabled)	L	L	Н	L	Precharge	Truncate Write burst, start Precharge	1-6, 8, 11
Read: Write: 4. The following Precharging:	A W states n	/rite burs nust not	t has be be interr	en initia upted b	ted, with Auto Precharge disat y a command issued to the sa	bled, and has not yet terminated or been term bled, and has not yet terminated or been term me bank. when t _{RP} is met. Once t _{RP} is met, the bank is	inated.
Row Activatin	state	e.	-		-	nen t _{RCD} is met. Once t _{RCD} is met, the bank is	
Read w/Auto I	Prechar		led: Star		egistration of a Read comman nk is in the idle state.	d with Auto Precharge enabled and ends whe	n t _{RP} has bee
Write w/Auto I	Prechar	ge Enab	led: Star	ts with r		d with Auto Precharge enabled and ends whe	n t _{RP} has bee
Deselect or N	OP com	imands,	or allow	able con	nmands to the other bank show	uld be issued on any clock edge occurring du ned by its current state and according to Truth	•
5. The following clock edge du Refreshing:	states n ring the Star	nust not se states	be interr s. egistratio	upted by on of an	any executable command; De	eselect or NOP commands must be applied of nds when $t_{\rm RFC}$ is met. Once $t_{\rm RFC}$ is met, the D	n each positiv
-	met	, the DD	R SDRA	M is in t	he "all banks idle" state.	mmand and ends when t_{MRD} has been met. (
Precharging A	ll: Star state		egistratio	on of a F	Precharge All command and er	nds when $t_{\rm RP}$ is met. Once $t_{\rm RP}$ is met, all bank	ks is in the idl
6. All states and	•			-			
 Not bank-spec May or may n 		•				ny must be in a valid state for precharging.	
		•		-	most recent Read burst, regard		
			Comman	d/Action	column include Reads or Write	tes with Auto Precharge enabled and Reads of	or Writes with
Auto Precharg			kina				

11. Requires appropriate DM masking.



Truth Table 4: Current State Bank n - Command to Bank m (Different bank) (Part 1 of 2)

Current State	CS	RAS	CAS	WE	Command	Action	Notes
Any	Н	Х	Х	Х	Deselect	NOP/continue previous operation	1-6
Any	L	н	н	н	No Operation	NOP/continue previous operation	1-6
Idle	х	х	х	х	Any Command Otherwise Allowed to Bank m		1-6
	L	L	Н	н	Active	Select and activate row	1-6
Row Activating,	L	н	L	н	Read	Select column and start Read burst	1-7
Active, or Precharging	L	н	L	L	Write	Select column and start Write burst	1-7
	L	L	Н	L	Precharge		1-6
Read	L	L	Н	н	Active	Select and activate row	1-6
(Auto Precharge	L	н	L	Н	Read	Select column and start new Read burst	1-7
Disabled)	L	L	н	L	Precharge		1-6
	L	L	Н	Н	Active	Select and activate row	1-6
Write	L	н	L	Н	Read	Select column and start Read burst	1-8
(Auto Precharge Disabled)	L	н	L	L	Write	Select column and start new Write burst	1-7
	L	L	Н	L	Precharge		1-6

1. This table applies when CKE n-1 was high and CKE n is high (see Truth Table 2: Clock Enable (CKE) and after t_{XSNR /} t_{XSRD} has been met (if the previous state was self refresh).

2. This table describes alternate bank operation, except where noted, i.e., the current state is for bank n and the commands shown are those allowed to be issued to bank m (assuming that bank m is in such a state that the given command is allowable). Exceptions are covered in the notes below.

3. Current state definitions:

Idle:

The bank has been precharged, and t_{RP} has been met.

Row Active: A row in the bank has been activated, and t_{RCD} has been met. No data bursts/accesses and no register accesses are in progress.

Read: A Read burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.

Write: A Write burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.

Read with Auto Precharge Enabled: See note 10.

Write with Auto Precharge Enabled: See note 10. 4. Auto Refresh and Mode Register Set commands may only be issued when all banks are idle.

A Burst Terminate command cannot be issued to another bank; it applies to the bank represented by the current state only.

All states and sequences not shown are illegal or reserved.

7. Reads or Writes listed in the Command/Action column include Reads or Writes with Auto Precharge enabled and Reads or Writes with Auto Precharge disabled.

- 8. Requires appropriate DM masking.
- 9. A Write command may be applied after the completion of data output.
- 10. The Read with Auto Precharge enabled or Write with Auto Precharge enabled states can each be broken into two parts: the access period and the precharge period. For Read with Auto Precharge, the precharge period is defined as if the same burst was executed with Auto Precharge disabled and then followed with the earliest possible Precharge command that still accesses all of the data in the burst. For Write with Auto Precharge, the precharge period begins when t_{WR} ends, with t_{WR} measured as if Auto Precharge was disabled. The access period starts with registration of the command and ends where the precharge period (or t_{RP}) begins. During the precharge period of the Read with Auto Precharge Enabled or Write with Auto Precharge Enabled states, Active, Precharge, Read, and Write commands to the other bank may be applied; during the access period, only Active and Precharge commands to the other bank may be applied. In either case, all other related limitations apply (e.g. contention between Read data and Write data must be avoided).



Truth Table 4: Current State Bank n - Command to Bank m (Different bank) (Part 2 of 2)

Current State	CS	RAS	CAS	WE	Command	Action	Notes
	L	L	Н	Н	Active	Select and activate row	1-6
Read (With	L	н	L	н	Read	Select column and start new Read burst	1-7,10
Auto Precharge)	L	н	L	L	Write	Select column and start Write burst	1-7,9,10
	L	L	Н	L	Precharge		1-6
	L	L	Н	н	Active	Select and activate row	1-6
Write (With	L	н	L	н	Read	Select column and start Read burst	1-7,10
Auto Precharge)	L	н	L	L	Write	Select column and start new Write burst	1-7,10
	L	L	Н	L	Precharge		1-6

1. This table applies when CKE n-1 was high and CKE n is high (see Truth Table 2: Clock Enable (CKE) and after t_{XSNR /} t_{XSRD} has been met (if the previous state was self refresh).

2. This table describes alternate bank operation, except where noted, i.e., the current state is for bank n and the commands shown are those allowed to be issued to bank m (assuming that bank m is in such a state that the given command is allowable). Exceptions are covered in the notes below.

3. Current state definitions:

Idle: The bank has been precharged, and t_{RP} has been met.

Row Active: A row in the bank has been activated, and t_{RCD} has been met. No data bursts/accesses and no register accesses are in progress.

Read: A Read burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.

Write: A Write burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.

Read with Auto Precharge Enabled: See note 10. Write with Auto Precharge Enabled: See note 10.

4. Auto Refresh and Mode Register Set commands may only be issued when all banks are idle.

5. A Burst Terminate command cannot be issued to another bank; it applies to the bank represented by the current state only.

6. All states and sequences not shown are illegal or reserved.


7. Reads or Writes listed in the Command/Action column include Reads or Writes with Auto Precharge enabled and Reads or Writes with Auto Precharge disabled.

- 8. Requires appropriate DM masking.
- 9. A Write command may be applied after the completion of data output.

10. The Read with Auto Precharge enabled or Write with Auto Precharge enabled states can each be broken into two parts: the access period and the precharge period. For Read with Auto Precharge, the precharge period is defined as if the same burst was executed with Auto Precharge disabled and then followed with the earliest possible Precharge command that still accesses all of the data in the burst. For Write with Auto Precharge, the precharge period begins when t_{WR} ends, with t_{WR} measured as if Auto Precharge was disabled. The access period starts with registration of the command and ends where the precharge period (or t_{RP}) begins. During the precharge period of the Read with Auto Precharge Enabled or Write with Auto Precharge Enabled states, Active, Precharge, Read, and Write commands to the other bank may be applied; during the access period, only Active and Precharge commands to the other bank may be applied. In either case, all other related limitations apply (e.g. contention between Read data and Write data must be avoided).



Simplified State Diagram

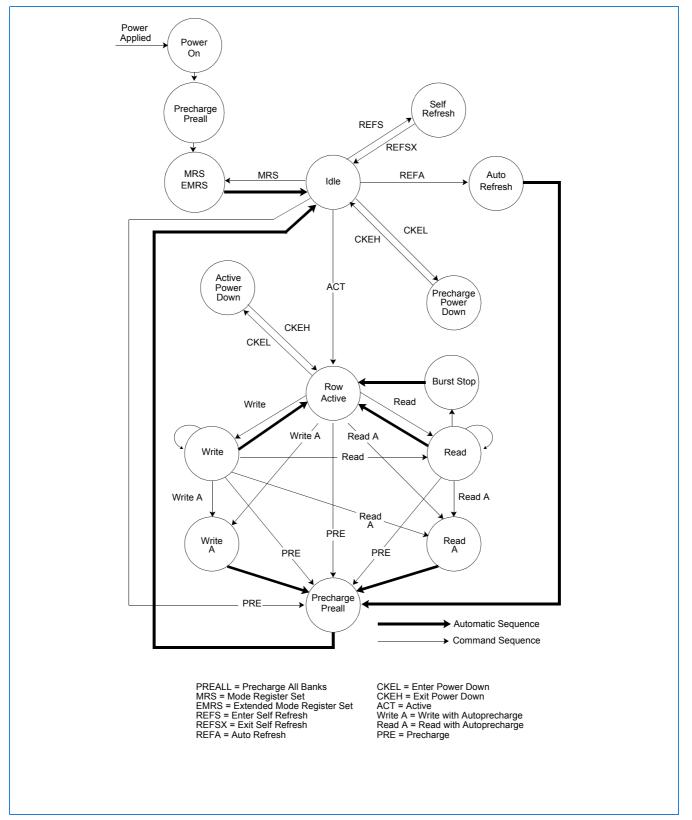

REV 0.5 May 06, 2005 Preliminary



Absolute Maximum Ratings

Symbol	Parameter	Rating	Units
V _{IN} , V _{OUT}	Voltage on I/O pins relative to V _{SS}	-0.5 to V _{DDQ} + 0.5	V
V _{IN}	Voltage on Inputs relative to V _{SS}	-0.5 to +3.6	V
V_{DD}	Voltage on V_{DD} supply relative to V_{SS}	-0.5 to +3.6	V
V _{DDQ}	Voltage on V_{DDQ} supply relative to V_{SS}	-0.5 to +3.6	V
Τ _Α	Operating Temperature (Ambient)	0 to +70	°C
T _{STG}	Storage Temperature (Plastic)	-55 to +150	°C
PD	Power Dissipation	1.0	W
I _{OUT}	Short Circuit Output Current	50	mA

Note: Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

DQS/DQ/DM Slew Rate

Parameter	Symbol	DDR266 (75B)		DDR333 (6K)		DDR400 (5T)		DDR466 (43)		Unit	Notes
	-	Min	Max	Min	Max	Min	Max	Min	Max		
DCS/DQ/DM input slew rate	DC _{SLEW}	0.5	4.0	0.5	4.0	0.5	4.0	0.5	4.0	V/ns	1, 2

1. Measured between V IH (DC), V IL (DC), and V IL (DC), V IH (DC).

2. DQS, DQ, and DM input slew rate is specified to prevent double clocking of data and preserve setup and hold times. Signal transition through the DC region must be monotonic.



Capacitance

Parameter	Symbol	Min.	Max.	Units	Notes
Input Capacitance: CK, CK	Cl ₁	2.0	3.0	pF	1
Delta Input Capacitance: CK, CK	delta CI ₁		0.25	pF	1
Input Capacitance: All other input-only pins (except DM)	Cl ₂	2.0	3.0	pF	1
Delta Input Capacitance: All other input-only pins (except DM)	delta Cl ₂		0.5	pF	1
Input/Output Capacitance: DQ, DQS, DM	C _{IO}	4.0	5.0	pF	1, 2
Delta Input/Output Capacitance: DQ, DQS, DM	delta C _{IO}		0.5	pF	1

1. $V_{DDQ} = V_{DD} = 2.5V \pm 0.2V$ (minimum range to maximum range), f = 100MHz, $T_A = 25^{\circ}C$, $VO_{DC} = V_{DDQ/2}$, $VO_{Peak - Peak} = 0.2V$.

2. Although DM is an input-only pin, the input capacitance of this pin must model the input capacitance of the DQ and DQS pins. This is required to match input propagation times of DQ, DQS and DM in the system.

DC Electrical Characteristics and Operating Conditions

(0°C £ T_A £ 70×C; V_{DDQ} = 2.5V ± 0.2V, V_{DD} = + 2.5V ± 0.2V, see AC Characteristics)

Symbol	Parameter	Min	Max	Units	Notes
V _{DD}	Supply Voltage	2.3	2.7	V	1
V _{DDQ}	I/O Supply Voltage	2.3	2.7	V	1
V _{SS} , V _{SSQ}	Supply Voltage I/O Supply Voltage	0	0	v	
V _{REF}	I/O Reference Voltage	0.49 x V _{DDQ}	0.51 x V _{DDQ}	V	1, 2
V _{TT}	I/O Termination Voltage (System)	V _{REF} – 0.04	V _{REF} + 0.04	V	1, 3
V _{IH(DC)}	Input High (Logic1) Voltage	V _{REF} + 0.15	V _{DDQ} + 0.3	V	1
V _{IL(DC)}	Input Low (Logic0) Voltage	- 0.3	V _{REF} – 0.15	V	1
V _{IN(DC)}	Input Voltage Level, CK and CK Inputs	- 0.3	V _{DDQ} + 0.3	V	1
V _{ID(DC)}	Input Differential Voltage, CK and CK Inputs	0.30	V _{DDQ} + 0.6	V	1, 4
V _{IX(DC)}	Input Crossing Point Voltage, CK and \overline{CK} Inputs	0.30	V _{DDQ} + 0.6	V	1, 4
VI _{Ratio}	V-I Matching Pullup Current to Pulldown Current Ratio	0.71	1.4		5
lı	Input Leakage Current Any input 0V \leq V $_{IN}$ \leq V $_{DD}$; (All other pins not under test = 0V)	- 5	5	μA	1
I _{OZ}	Output Leakage Current (DQs are disabled; 0V $\leq V_{out} \leq V_{DDQ}$	- 5	5	μΑ	1
I _{ОН}	Output Current: Nominal Strength Driver	- 16.8		mA	1
I _{OL}	High current (V _{OUT} = V _{DDQ} -0.373V, min V _{REF} , min V _{TT}) Low current (V _{OUT} = 0.373V, max V _{REF} , max V _{TT})	16.8		IIIA	1

1. Inputs are not recognized as valid until V_{REF} stabilizes.

2. V_{REF} is expected to be equal to 0.5 V_{DDQ} of the transmitting device, and to track variations in the DC level of the same. Peak-to-peak noise on V_{REF} may not exceed ± 2% of the DC value.

3. V_{TT} is not applied directly to the device. V_{TT} is a system supply for signal termination resistors, is expected to be set equal to V_{REF}, and must track variations in the DC level of V_{REF}.

4. V_{ID} is the magnitude of the difference between the input level on CK and the input level on \overline{CK} .

5. The ratio of the pullup current to the pulldown current is specified for the same temperature and voltage, over the entire temperature and voltage range, for device drain to source voltages for 0.25 volts to 1.0 volts. For a given output, it represents the maximum difference between pullup and pulldown drivers due to process variation.



DC Electrical Characteristics and Operating Conditions

 $(0^{\circ}C \pounds T_A \pounds 70 \times C; V_{DDQ} = 2.5V \pm 0.2V, V_{DD} = +2.5V \pm 0.2V, see AC Characteristics)$

Symbol	Parameter	Min	Max	Units	Notes
I _{OHW}	Output Current: Half- Strength Driver	- 9.0			4
I _{OLW}	High current (V _{OUT} = V _{DDQ} -0.763V, min V _{REF} , min V _{TT}) Low current (V _{OUT} = 0.763V, max V _{REF} , max V _{TT})	9.0		mA	1


1. Inputs are not recognized as valid until $\mathrm{V}_{\mathrm{REF}}$ stabilizes.

- V_{REF} is expected to be equal to 0.5 V_{DDQ} of the transmitting device, and to track variations in the DC level of the same. Peak-to-peak noise on V_{REF} may not exceed ± 2% of the DC value.
- 3. V_{TT} is not applied directly to the device. V_{TT} is a system supply for signal termination resistors, is expected to be set equal to V_{REF}, and must track variations in the DC level of V_{REF}.
- 4. V_{ID} is the magnitude of the difference between the input level on CK and the input level on \overline{CK} .
- 5. The ratio of the pullup current to the pulldown current is specified for the same temperature and voltage, over the entire temperature and voltage range, for device drain to source voltages for 0.25 volts to 1.0 volts. For a given output, it represents the maximum difference between pullup and pulldown drivers due to process variation.

Normal Strength Driver Pulldown and Pullup Characteristics


- 1. The full variation in driver pulldown current from minimum to maximum process, temperature and voltage will lie within the outer bounding lines of the V-I curve.
- 2. It is recommended that the "typical" IBIS pulldown V-I curve lie within the shaded region of the V-I curve.

Normal Strength Driver Pulldown Characteristics

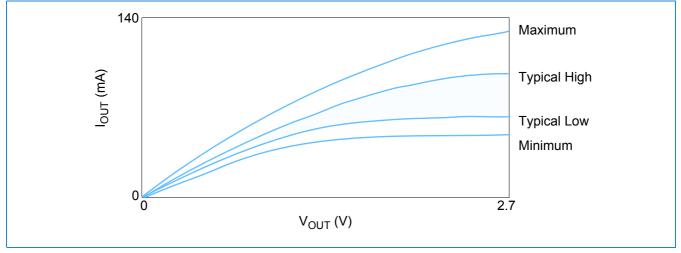

- 3. The full variation in driver pullup current from minimum to maximum process, temperature and voltage will lie within the outer bounding lines of the V-I curve.
- 4. It is recommended that the "typical" IBIS pullup V-I curve lie within the shaded region of the V-I curve.



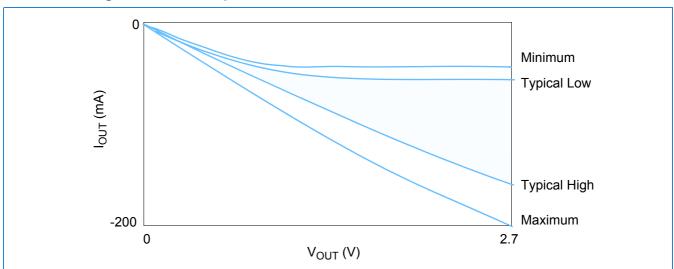

Normal Strength Driver Pullup Characteristics

5. The full variation in the ratio of the maximum to minimum pullup and pulldown current will not exceed 1.7, for device drain to source voltages from 0.1 to 1.0.

6. The full variation in the ratio of the "typical" IBIS pullup to "typical" IBIS pulldown current should be unity <u>+</u> 10%, for device drain to source voltages from 0.1 to 1.0. This specification is a design objective only. It is not guaranteed.

- 7. These characteristics are intended to obey the SSTL_2 class II standard.
- 8. This specification is intended for DDR SDRAM only.



Normal Strength Driver Pulldown and Pullup Currents

		Pulldown C	urrent (mA)		Pullup Current (mA)				
Voltage (V)	Typical Low	Typical High	Min	Max	Typical Low	Typical High	Min	Max	
0.1	6.0	6.8	4.6	9.6	-6.1	-7.6	-4.6	-10.0	
0.2	12.2	13.5	9.2	18.2	-12.2	-14.5	-9.2	-20.0	
0.3	18.1	20.1	13.8	26.0	-18.1	-21.2	-13.8	-29.8	
0.4	24.1	26.6	18.4	33.9	-24.0	-27.7	-18.4	-38.8	
0.5	29.8	33.0	23.0	41.8	-29.8	-34.1	-23.0	-46.8	
0.6	34.6	39.1	27.7	49.4	-34.3	-40.5	-27.7	-54.4	
0.7	39.4	44.2	32.2	56.8	-38.1	-46.9	-32.2	-61.8	
0.8	43.7	49.8	36.8	63.2	-41.1	-53.1	-36.0	-69.5	
0.9	47.5	55.2	39.6	69.9	-43.8	-59.4	-38.2	-77.3	
1.0	51.3	60.3	42.6	76.3	-46.0	-65.5	-38.7	-85.2	
1.1	54.1	65.2	44.8	82.5	-47.8	-71.6	-39.0	-93.0	
1.2	56.2	69.9	46.2	88.3	-49.2	-77.6	-39.2	-100.6	
1.3	57.9	74.2	47.1	93.8	-50.0	-83.6	-39.4	-108.1	
1.4	59.3	78.4	47.4	99.1	-50.5	-89.7	-39.6	-115.5	
1.5	60.1	82.3	47.7	103.8	-50.7	-95.5	-39.9	-123.0	
1.6	60.5	85.9	48.0	108.4	-51.0	-101.3	-40.1	-130.4	
1.7	61.0	89.1	48.4	112.1	-51.1	-107.1	-40.2	-136.7	
1.8	61.5	92.2	48.9	115.9	-51.3	-112.4	-40.3	-144.2	
1.9	62.0	95.3	49.1	119.6	-51.5	-118.7	-40.4	-150.5	
2.0	62.5	97.2	49.4	123.3	-51.6	-124.0	-40.5	-156.9	
2.1	62.9	99.1	49.6	126.5	-51.8	-129.3	-40.6	-163.2	
2.2	63.3	100.9	49.8	129.5	-52.0	-134.6	-40.7	-169.6	
2.3	63.8	101.9	49.9	132.4	-52.2	-139.9	-40.8	-176.0	
2.4	64.1	102.8	50.0	135.0	-52.3	-145.2	-40.9	-181.3	
2.5	64.6	103.8	50.2	137.3	-52.5	-150.5	-41.0	-187.6	
2.6	64.8	104.6	50.4	139.2	-52.7	-155.3	-41.1	-192.9	
2.7	65.0	105.4	50.5	140.8	-52.8	-160.1	-41.2	-198.2	

Normal Strength Driver Evaluation Conditions

	Typical	Minimum	Maximum
Temperature (T _{ambient})	25 °C	70 °C	0 °C
V _{DDQ}	2.5V	2.3V	2.7V
Process conditions	typical process	slow-slow process	fast-fast process




AC Characteristics

(Notes 1-5 apply to the following Tables; Electrical Characteristics and DC Operating Conditions, AC Operating Conditions, I_{DD} Specifications and Conditions, and Electrical Characteristics and AC Timing.)

- 1. All voltages referenced to $\ensuremath{\mathsf{V}_{\text{SS}}}$.
- 2. Tests for AC timing, I_{DD}, and electrical, AC and DC characteristics, may be conducted at nominal reference/supply voltage levels, but the related specifications and device operation are guaranteed for the full voltage range specified.
- 3. Outputs measured with equivalent load. Refer to the AC Output Load Circuit below.
- 4. AC timing and I_{DD} tests may use a V_{IL} to V_{IH} swing of up to 1.5V in the test environment, but input timing is still referenced to V_{REF} (or to the crossing point for CK, CK), and parameter specifications are guaranteed for the specified AC input levels under normal use conditions. The minimum slew rate for the input signals is 1V/ns in the range between V_{IL(AC)} and V_{IH(AC)}.
- V_{IH(AC)}.
 5. The AC and DC input level specifications are as defined in the SSTL_2 Standard (i.e. the receiver effectively switches as a result of the signal crossing the AC input level, and remains in that state as long as the signal does not ring back above (below) the DC input low (high) level.

AC Output Load Circuit Diagrams

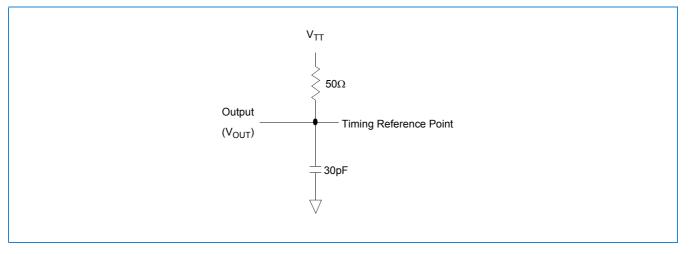



AC Input Operating Conditions

(0 °C \leq T_A \leq 70 °C; V_{DD} = V_{DDQ} = 2.5V \pm 0.2V (6K/75B); V_{DD} = V_{DDQ} = 2.6V \pm 0.1V (5T/43), See AC Characteristics)

Symbol	Parameter/Condition	Min	Max	Unit	Notes
V _{IH(AC)}	Input High (Logic 1) Voltage, DQ, DQS, and DM Signals	V _{REF} + 0.31		V	1, 2
V _{IL(AC)}	Input Low (Logic 0) Voltage, DQ, DQS, and DM Signals		V _{REF} – 0.31	V	1, 2
V _{ID(AC)}	Input Differential Voltage, CK and CK Inputs	0.62	V _{DDQ} + 0.6	V	1, 2, 3
V _{IX(AC)}	Input Crossing Point Voltage, CK and CK Inputs	$0.5^{*}V_{DDQ} - 0.2$	$0.5^{*}V_{DDQ} + 0.2$	V	1, 2, 4

1. Input slew rate = 1V/ns.

2. Inputs are not recognized as valid until $\mathsf{V}_{\mathsf{REF}}$ stabilizes.

3. V_{ID} is the magnitude of the difference between the input level on CK and the input level on \overline{CK} .

4. The value of V_{IX} is expected to equal 0.5* V_{DDQ} of the transmitting device and must track variations in the DC level of the same.

I_{DD} Specifications and Conditions

(0 °C \leq T_A \leq 70 °C; V_{DD} = V_{DDQ} = 2.5V \pm 0.2V(6K/75B); V_{DD} = V_{DDQ} = 2.6V \pm 0.1V (5T/43), See AC Characteristics)

Symbol	Parameter/Condition		DDR333 (6K) t _{CK} =6ns	DDR400 (5T) t _{CK} =5.0ns	DDR466 (43) t _{CK} =4.3ns	Unit	Notes
I _{DD0}	Operating Current : one bank; active / precharge; $t_{RC} = t_{RC}$ (min); DQ, DM, and DQS inputs changing twice per clock cycle; address and control inputs changing once per clock cycle	135	155	180	180	mA	1
I _{DD1}	Operating Current : one bank; active / read / precharge; Burst = 2; $t_{RC} = t_{RC}$ (min); CL = 2.5; $I_{OUT} = 0$ mA; address and control inputs changing once per clock cycle	165	185	210	210	mA	1
I _{DD2P}	Precharge Power Down Standby Current: all banks idle; Power Down mode; CKE \leq V _{IL} (max)	3	3	3.5	3.5	mA	1
I _{DD2N}	$\label{eq:linear} \begin{array}{l} \mbox{Idle Standby Current: } \overline{CS} \geq V_{IH} \mbox{ (min); all banks idle; } CKE \geq V_{IH} \mbox{ (min); } \\ \mbox{address and control inputs changing once per clock cycle} \end{array}$		60	65	65	mA	1
I _{DD3P}	Active Power Down Standby Current: one bank active; Power Down mode; CKE \leq V _{IL} (max)	50	55	65	65	mA	1
I _{DD3N}	Active Standby Current: one bank; active / precharge; $\overline{CS} \ge V_{IH}$ (min); CKE $\ge V_{IH}$ (min); t _{RC} = t _{RAS} (max); DQ, DM, and DQS inputs changing twice per clock cycle; address and control inputs changing once per clock cycle	105	120	140	140	mA	1
I _{DD4R}	Operating Current: one bank; Burst = 2; reads; continuous burst; address and control inputs changing once per clock cycle; DQ and DQS outputs changing twice per clock cycle; CL = 2.5; I _{OUT} = 0mA	230	255	300	300	mA	1
I _{DD4W}	Operating Current : one bank; Burst = 2; writes; continuous burst; address and control inputs changing once per clock cycle; DQ and DQS inputs changing twice per clock cycle; CL = 2.5	215	250	290	290	mA	1
I _{DD5}	Auto-Refresh Current: t _{RC} = t _{RFC} (min)	195	210	230	240	mA	1
I _{DD6}	Self-Refresh Current: CKE ≤ 0.2V	3	3	3	4	mA	1, 2
I _{DD7}	Operating current : four bank; four bank interleaving with BL = 4, address and control inputs randomly changing; 50% of data changing at every transfer; t RC = t RC (min); I OUT = 0mA.	365	395	430	430	mA	1

Enables on-chip refresh and address counters.



Electrical Characteristics & AC Timing - Absolute Specifications (0 °C \leq T_A \leq 70 °C; V_{DD} = V_{DDQ} = 2.5V \pm 0.2V (6K/75B); V_{DD} = V_{DDQ} = 2.6V \pm 0.1V (5T/43), See AC Characteristics) (Part 1 of 2)

Symbol	Para	meter		R266 5B	DDF 6	R333 K		R400 T		R466 ·3	Unit	Notes
-			Min	Max	Min	Max	Min	Max	Min	Max		
t _{AC}	DQ output access time fr	om CK/CK	- 0.75	+ 0.75	- 0.70	+ 0.70	- 0.65	+ 0.65	- 0.6	+ 0.6	ns	1-4
t _{DQSCK}	DQS output access time from CK/CK		- 0.75	+ 0.75	- 0.60	+ 0.60	- 0.55	+ 0.55	- 0.5	+ 0.5	ns	1-4
t _{CH}	CK high-level width		0.45	0.55	0.45	0.55	0.45	0.55	0.45	0.55	t _{CK}	1-4
t _{CL}	CK low-level width		0.45	0.55	0.45	0.55	0.45	0.55	0.45	0.55	t _{CK}	1-4
		CL = 3	-	-	-	-	5	8	4	10		
t _{CK}	Clock cycle time	CL = 2.5	7.5	12	6	12	5	12	4.3	8.6	ns	1-4
		CL = 2.0	10	12	7.5	12	-	-	-	-		
t _{DH}	DQ and DM input hold tir	ne	0.5		0.45		0.4		0.4		ns	1-4, 15, 16
t _{DS}	DQ and DM input setup t	lime	0.5		0.45		0.4		0.4		ns	1-4, 15, 16
t _{IPW}	Input pulse width		2.2		2.2		2.2		2.2		ns	2-4, 12
t _{DIPW}	DQ and DM input pulse v	width (each input)	1.75		1.75		1.75		1.75		ns	1-4
t _{HZ}	Data-out high-impedance	e time from CK/ CK	- 0.75	+ 0.75	- 0.7	+ 0.7	- 0.6	+ 0.6	- 0.6	+ 0.6	ns	1-4, 5
t_{LZ}	Data-out low-impedance	time from CK/CK	- 0.75	+ 0.75	- 0.7	+ 0.7	- 0.6	+ 0.6	- 0.6	+ 0.6	ns	1-4, 5
t _{DQSQ}	DQS-DQ skew (DQS & associated DQ signals)	TSOP Package		+ 0.5		+ 0.45		+ 0.4		+ 0.4	ns	1-4
t _{HP}	Minimum half clk period defined by clk high (t _{CH})		min (t _{CL} , t _{CH})		min (t _{CL} , t _{CH})		min (t _{CL} , t _{CH})		min (t _{CL} , t _{CH})		^t ск	1-4
t _{QH}	Data output hold time fro	m DQS	t _{HP} - t _{QHS}		t _{HP} - t _{QHS}		t _{HP} - t _{QHS}		t _{HP} - t _{QHS}		^t ск	1-4
t _{QHS}	Data hold Skew Factor	TSOP Package		0.75		0.55		0.5		0.5	t _{CK}	1-4
t _{DQSS}	Write command to 1st De transition	QS latching	0.75	1.25	0.75	1.25	0.72	1.28	0.72	1.28	t _{СК}	1-4
t _{DQSH}	DQS input high pulse wid	th (write cycle)	0.35		0.35		0.35		0.35		t _{CK}	1-4
t _{DQSL}	DQS input low pulse wid	th (write cycle)	0.35		0.35		0.35		0.35		t _{CK}	1-4
t _{DSS}	DQS falling edge to CK s	setup time (write cycle)	0.2		0.2		0.2		0.2		t _{CK}	1-4
t _{DSH}	DQS falling edge hold tin	ne from CK (write cycle)	0.2		0.2		0.2		0.2		t _{CK}	1-4
t _{MRD}	Mode register set comma	and cycle time	2		2		2		2		t _{CK}	1-4
t _{WPRES}	Write preamble setup tim	ne	0		0		0		0		ns	1-4, 7
t _{WPST}	Write postamble		0.40	0.60	0.40	0.60	0.40	0.60	0.40	0.60	t _{CK}	1-4, 6
t _{WPRE}	Write preamble		0.25		0.25		0.25		0.25		t _{CK}	1-4
t _{IH}	Address and control input (fast slew rate)	It hold time	0.9		0.75		0.6		0.6		ns	2-4, 9 11, 12
t _{IS}	Address and control inpu (fast slew rate)	it setup time	0.9		0.75		0.6		0.6		ns	2-4, 9 11, 12



Electrical Characteristics & AC Timing - Absolute Specifications (0 °C \leq T_A \leq 70 °C; V_{DD} = V_{DDQ} = 2.5V \pm 0.2V (6K/75B); V_{DD} = V_{DDQ} = 2.6V \pm 0.1V (5T/43), See AC Characteristics) (Part 2 of Characteristics) 2)

Symbol	Parameter		DDR266 75B		DDR333 6K		DDR400 5T		DDR466 43		Notes
-			Min Max		Min Max		Мах	Min	Max		
t _{IH}	Address and control input hold time (slow slew rate)	1.0		0.8		0.7		0.7		ns	2-4, 10, 11, 12, 14
t _{IS}	Address and control input setup time (slow slew rate)	1.0		0.8		0.7		0.6		ns	2-4, 10, 11, 12, 14
t _{RPRE}	Read preamble	0.9	1.1	0.9	1.1	0.9	1.1	0.9	1.1	t _{ск}	1-4
t _{RPST}	Read postamble	0.40	0.60	0.40	0.60	0.40	0.60	0.40	0.60	t _{СК}	1-4
t _{RAS}	Active to Precharge command	45	120,0 00	42	120,0 00	40	120,0 00	40	120,0 00	ns	1-4
t _{RC}	Active to Active/Auto-refresh command period	65		60		60		60		ns	1-4
t _{RFC}	Auto-refresh to Active/Auto-refresh command period	12		12		13		15		t _{CK}	1-4
t _{RCD}	Active to Read or Write delay	3		3		3		4		t _{СК}	1-4
t _{RAP}	Active to Read Command with Autoprecharge	3		3		3		4		t _{ск}	1-4
t _{RP}	Precharge command period	3		3		3		3		t _{CK}	1-4
t _{RRD}	Active bank A to Active bank B command	2		2		2		3		t _{CK}	1-4
t _{WR}	Write recovery time	3		3		3		3		t _{CK}	1-4
t _{DAL}	Auto precharge write recovery + precharge time	(t _{WR} /t СК) + (t _{RP} /t _C К)		(t _{WR} /t CK) + (t _{RP} /t _C K)		(t _{WR} /t CK) + (t _{RP} /t _{C K})		(t _{WR} /t CK) + (t _{RP} /t _{C K})		t _{CK}	1-4, 13
t _{WTR}	Internal write to read command delay	1		1		1		2		t _{СК}	1-4
t _{PDEX}	Power down exit time	7.5		6		5		5		ns	1-4
t _{XSNR}	Exit self-refresh to non-read command	13		13		10		10		t _{CK}	1-4
t _{XSRD}	Exit self-refresh to read command	200		200		200		200		t _{CK}	1-4
t _{REFI}	Average Periodic Refresh Interval		7.8		7.8		7.8		7.8	μS	1-4, 8

1. Input slew rate = 1V/ns

2. The CK/CK input reference level (for timing reference to CK/CK) is the point at which CK and CK cross: the input reference level for signals other than CK/CK, is V_{REF.}

3. Inputs are not recognized as valid until $\mathsf{V}_{\mathsf{REF}}$ stabilizes.

4. The Output timing reference level, as measured at the timing reference point indicated in AC Characteristics (Note 3) is V_{TT}.

5. t_{HZ} and t_{LZ} transitions occur in the same access time windows as valid data transitions. These parameters are not referred to a specific voltage level, but specify when the device is no longer driving (HZ), or begins driving (LZ).



Electrical Characteristics & AC Timing - Absolute Specifications Notes

- 1. Input slew rate = 1V/ns.
- 2. The CK/CK input reference level (for timing reference to CK/CK) is the point at which CK and CK cross; the input reference level for signals other than CK/CK is V_{REF}.
- 3. Inputs are not recognized as valid until V_{REF} stabilizes.
- 4. The Output timing reference level, as measured at the timing reference point indicated in AC Characteristics (Note 3) is V_{TT}.
- t_{HZ} and t_{LZ} transitions occur in the same access time windows as valid data transitions. These parameters are not referred to a specific voltage level, but specify when the device is no longer driving (HZ), or begins driving (LZ).
- 6. The maximum limit for this parameter is not a device limit. The device operates with a greater value for this parameter, but system performance (bus turnaround) degrades accordingly.
- 7. The specific requirement is that DQS be valid (high, low, or some point on a valid transition) on or before this CK edge. A valid transition is defined as monotonic and meeting the input slew rate specifications of the device. When no writes were previously in progress on the bus, DQS will be transitioning from Hi-Z to logic LOW. If a previous write was in progress, DQS could be HIGH, LOW, or transitioning from high to low at this time, depending on t_{DQSS}.
- 8. A maximum of eight Autorefresh commands can be posted to any given DDR SDRAM device.
- 9. For command/address input slew rate \geq 1.0V/ns. Slew rate is measured between V_{OH} (AC) and V_{OL} (AC).
- 10. For command/address input slew rate \ge 0.5V/ns and < 1.0V/ns. Slew rate is measured between V_{OH} (AC) and V_{OL} (AC).
- 11. CK/ \overline{CK} slew rates are \geq 1.0V/ns.
- 12. These parameters guarantee device timing, but they are not necessarily tested on each device, and they may be guaranteed by design or tester characterization.
- For each of the terms in parentheses, if not already an integer, round to the next highest integer. t_{CK} is equal to the actual system clock cycle time. For example, for DDR266B at CL = 2.5, t_{DAL} = (15ns/7.5ns) + (20ns/7.5ns) = 2 + 3 = 5.



14. An input setup and hold time derating table is used to increase t_{IS} and t_{IH} in the case where the input slew rate is below 0.5 V/ns.

Input Slew Rate	delta (t _{IS})	delta (t _{IH})	Unit	Notes
0.5 V/ns	0	0	ps	1,2
0.4 V/ns	+50	0	ps	1,2
0.3 V/ns	+100	0	ps	1,2

1. Input slew rate is based on the lesser of the slew rates determined by either V IH (AC) to V IL (AC) or V IH (DC) to V IL (DC), similarly for rising transitions.

2. These derating parameters may be guaranteed by design or tester characterization and are not necessarily tested on each device.

15. An input setup and hold time derating table is used to increase t_{DS} and t_{DH} in the case where the I/O slew rate is below 0.5 V/ns.

Input Slew Rate	delta (t _{DS})	delta (t _{DH})	Unit	Notes
0.5 V/ns	0	0	ps	1,2
0.4 V/ns	+75	+75	ps	1,2
0.3 V/ns	+150	+150	ps	1,2

1. I/O slew rate is based on the lesser of the slew rates determined by either V IH (AC) to V IL (AC) or V IH (DC) to V IL (DC), similarly for rising transitions.

2. These derating parameters may be guaranteed by design or tester characterization and are not necessarily tested on each device.

16. An I/O Delta Rise, Fall Derating table is used to increase t_{DS} and t_{DH} in the case where DQ, DM, and DQS slew rates differ.

Input Slew Rate	delta (t _{DS})	delta (t _{DH})	Unit	Notes
0.0 V/ns	0	0	ps	1,2,3,4
0.25 V/ns	+50	+50	ps	1,2,3,4
0.5 V/ns	+100	+100	ps	1,2,3,4

1. Input slew rate is based on the lesser of the slew rates determined by either V IH (AC) to V IL (AC) or V IH (DC) to V IL (DC), similarly for rising transitions.

2. Input slew rate is based on the larger of AC to AC delta rise, fall rate and DC to DC delta rise, fall rate.

3. The delta rise, fall rate is calculated as: [1/(slew rate 1)] - [1/(slew rate 2)]

For example: slew rate 1 = 0.5 V/ns; slew rate 2 = 0.4 V/ns

Delta rise, fall = (1/0.5) - (1/0.4) [ns/V]


= -0.5 ns/V

Using the table above, this would result in an increase in t $\ensuremath{\text{DS}}$ and t $\ensuremath{\text{DH}}$ of 100 ps.


4. These derating parameters may be guaranteed by design or tester characterization and are not necessarily tested on each device.



Data Input (Write) (Timing Burst Length = 4)

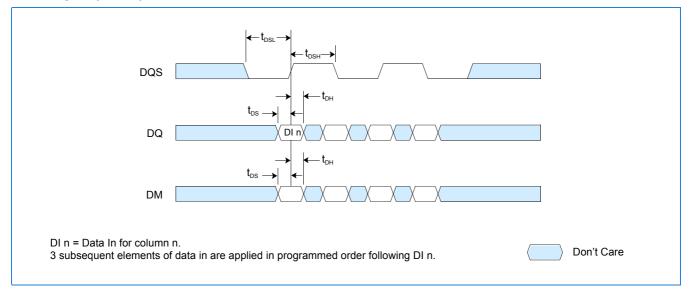


Data Output (Read) (Timing Burst Length = 4)

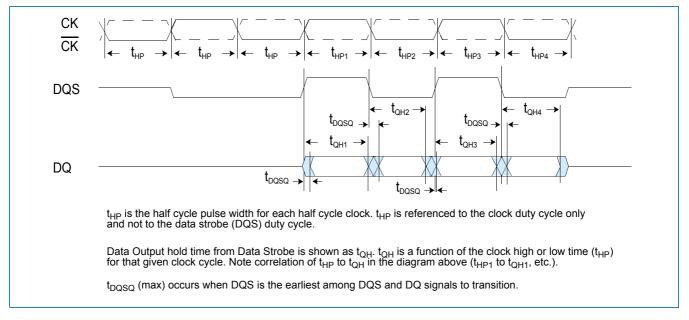




Initialize and Mode Register Sets

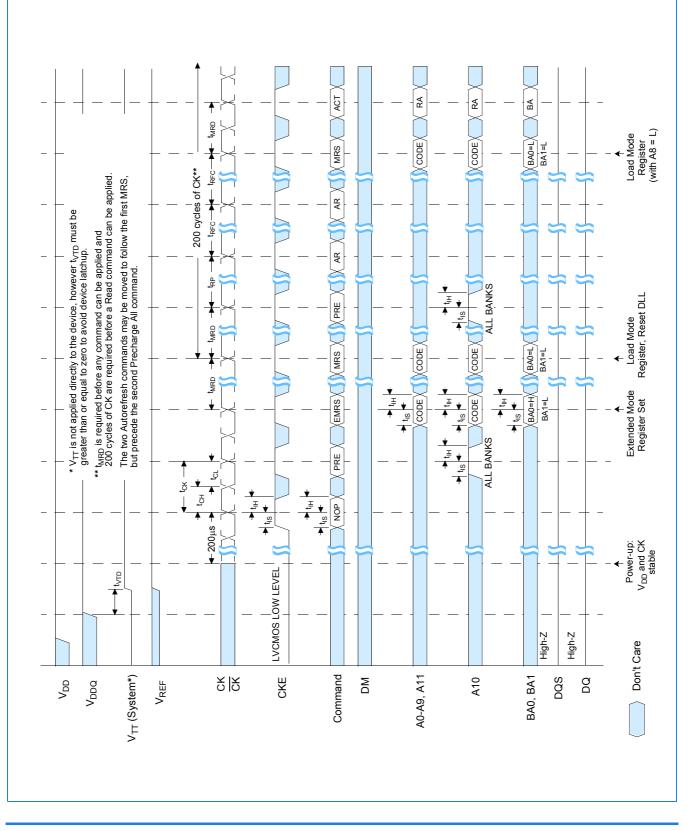



Power Down Mode

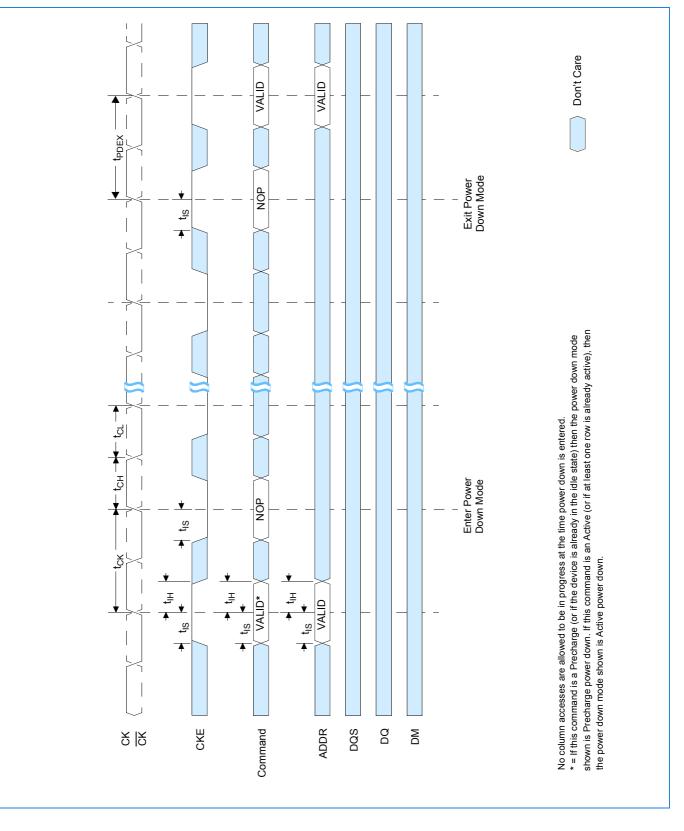


REV 0.5 May 06, 2005 Preliminary

© NANYA TECHNOLOGY CORP. All rights reserved. NANYA TECHNOLOGY CORP. reserves the right to change Products and Specifications without notice.



Auto Refresh Mode

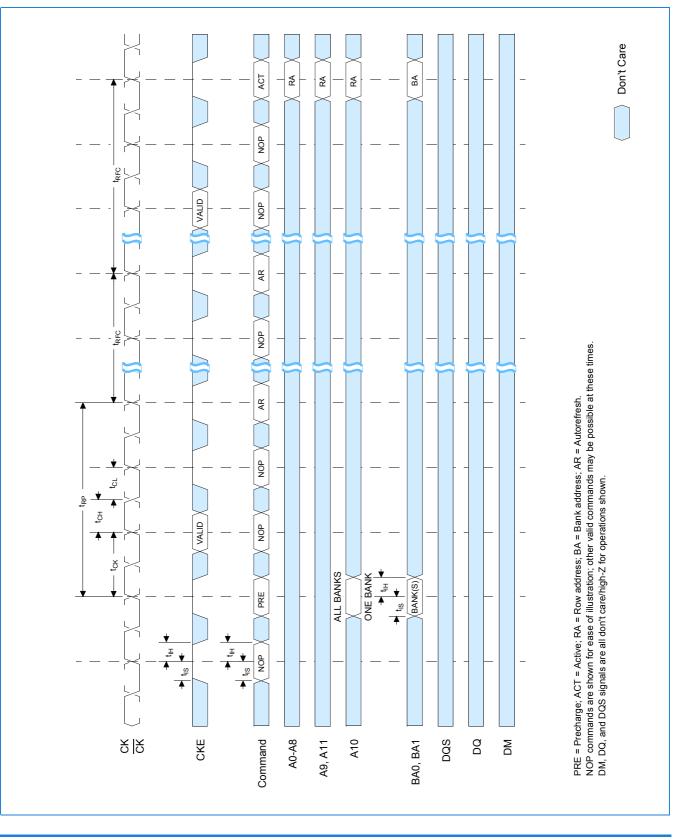


REV 0.5 May 06, 2005 Preliminary

© NANYA TECHNOLOGY CORP. All rights reserved. NANYA TECHNOLOGY CORP. reserves the right to change Products and Specifications without notice.



Self Refresh Mode

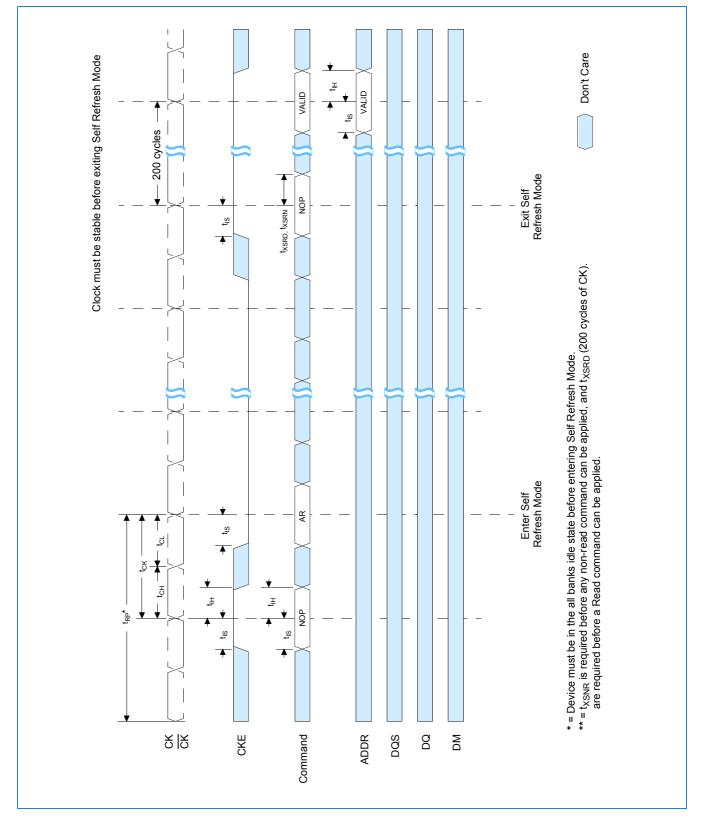

REV 0.5 May 06, 2005 Preliminary

© NANYA TECHNOLOGY CORP. All rights reserved. NANYA TECHNOLOGY CORP. reserves the right to change Products and Specifications without notice.



Read without Auto Precharge (Burst Length = 4) NOP Don't Care NOP NOP BA× ACT Å Å t_{HZ} (max) 3 subsequent elements of data out are provided in the programmed order following DO n. DIS AP = Disable Auto Precharge. * = Don't care if A10 is High at this point. PRE = Precharge; ACT = Active; RA = Row address; BA = Bank address. NOP commands are shown for ease of illustration; other commands may be valid at these times. t_{HZ} (min) RPST Ē NOP t tposck (min) tRPST NOP AC (max) ŧ 4 t_{AC} (min) ⊣ DOn ALL BANKS n Od ONE BANK BA X* ŧ PRE 4 t_{LZ} (max) t_{RPRE} لر t_{LZ} (max) t_{LZ} (min) ¥ trpre Ę CL=2 NOP ţ tis + COLN DIS AP Read BA× DO n = data out from column n. Ŧ ts tis NOP <u>s</u> СKЕ A10 DQS ğ DQS A0-A9, A11 Δ ğ Command BA0, BA1 윗옷 t_{AC}/t_{DQSCK} = min Case 2: t_{AC}/t_{DQSCK} = max

REV 0.5 May 06, 2005 Preliminary



Read with Auto Precharge (Burst Length = 4) VALID NOP Don't Care VALID NOP VALID NOP BA× ACT RA RA t_{HZ} (max) t_{HZ} (min) RPST 1 ± t NOP - t_{DQSCK} (min) DOSOK NOP ¥ ¥ . t_{AC} (max) t_{AC} (min) DO n DO n NOP ¥ t_{LZ} (max) t_{RPRE} t_{RPRE} t_{RPRE} t_{RPRE} t_M 4 4 لت لو t_{LZ} (max) ↓ t_{LZ} (min) lt_{HZ} (min) ¥ ⊢ t_{RPRE} Ę CL=2 NOP ţ ♦ t_{IS} ♦ t_{IH} ♦ Part tis time to the time to tis time Read . Ŧ ÷ NOP tis ♦ ls t Ā СKЕ DQS DQS A0-A9, A11 A10 ΜQ ğ BA0, BA1 ğ 5 5 Command t_{AC}/t_{DQSCK} = min Case 2: t_{AC}/t_{DQSCK} = max

Bank Read Access (Burst Length = 4)

128Mb DDR SDRAM



Don't Care NOP BA× ACT RA R t_{HZ} (max) t_{HZ} (min) RPST (max) NOP t_Dasck (min trpst tpasck t_{RP} Ā Ť NOP ¥ ¥ t_{AC} (max) **→** . ٨ t_{AC} (min) DOn ALL BANKS ONE BANK DOn BA X* PRE t_{LZ} (max) A ↓ t_{LZ} (min) tRPRE t_{LZ} (max) t_{LZ} (min) trpre fr K NOP -CL=2 4 DO n = data out from column n. I I I I I I 2. 3 subsequent elements of data out are provided in the programmed order following DO n. I DIS AP = disable Auto Precharge. * = Don't care if A10 is High at this point. PRE = Precharge: ACT = Active. FA = Row address; BA = Bank address. NOP commands are shown for ease of illustration; other commands may be valid at these times. . ♦ t[±]H COL n DIS AP Read ♦ t_{IS} BA× 000 Ę 4 f NOP -52 ţ Ē ♦ t_{is} ♦ BA x ACT ¥ Å RA tıs . E ± t ¥ NOP * ts t_{IS} . A10 СKE Command BA0, BA1 DQS DQS g ΣΩ g A0-A9, A11 ЯŖ Case 2: t_{AC}/t_{DQSCK} = max Case 1: t_{AC}/t_{DQSCK} = min

© NANYA TECHNOLOGY CORP. All rights reserved. NANYA TECHNOLOGY CORP. reserves the right to change Products and Specifications without notice.



Don't Care ACT BA RA RA NOP t_{RP} VALID NOP ALL BANKS ONE BANK BA x* PRE PRE = Precharge; ACT = Active; RA = Row address; BA = Bank address. NOP commands are shown for ease of illustration; other valid commands may be possible at these times. NOP 3 subsequent elements of data in are applied in the programmed order following DIn. DIS AP = Disable Auto Precharge. ŧ NOP ▲ t_{DSH} twpst NOP 1 لر DQSL Ť Ę. DQSH NOP E ğ t_{DQSS} * = Don't care if A10 is High at this point. DIS AP , ≣ T _<u>∓</u> COL n t_{IS} BA× ¥ Write twpres ts t_{DQSS} = min. DIn = Data in for column n. Ŧ Ē NOP ¥ ¥. ts t_{IS} . CKE Command A10 DQS ğ MD A0-A9, A11 BA0, BA1 ЯŖ

Write without Auto Precharge (Burst Length = 4)

REV 0.5 May 06, 2005 Preliminary



Don't Care RA BA ACT RA NOP Å, VALID NOP tDAL VALID NOP DIn = Data in for column n. 3 subsequent elements of data in are applied in the programmed order following DIn. EN AP = Enable Auto Precharge. ACT = Active; RA = Row address; BA = Bank address. NOP commands are shown for ease of illustration; other valid commands may be possible at these times. VALID NR. NOP NOP DSH twpst NOP t t tbast t^c NOP tpash 4 믭 ţ tpass * * • ⊥ ≣ tis ↓ col n EN AP /PRE ₽ ΒA x ¥ ¥ Write **MPRES** À ţ ts Ŧ Ŧ NOP t_{ls} t_{ls} t_{DQSS} = min. . СKЕ A10 DQS Command ğ <u>ર્</u>ચ ક A0 - 09, A11 BA0, BA1 MD

Write with Auto Precharge (Burst Length = 4)


REV 0.5 May 06, 2005 Preliminary

69

 $\ensuremath{\mathbb{C}}$ NANYA TECHNOLOGY CORP. All rights reserved. NANYA TECHNOLOGY CORP. reserves the right to change Products and Specifications without notice.




Bank Write Access (Burst Length = 4)

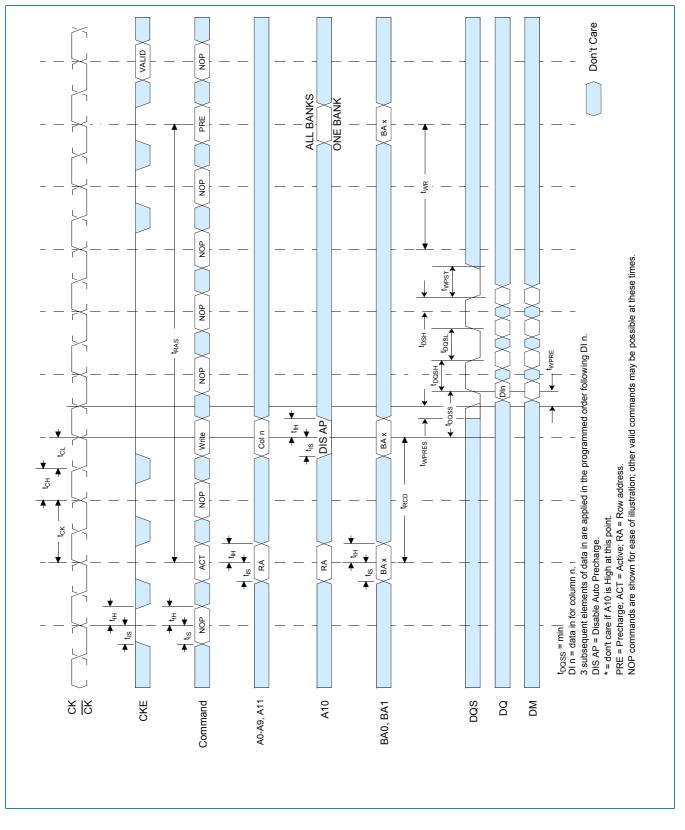





Write DM Operation (Burst Length = 4)

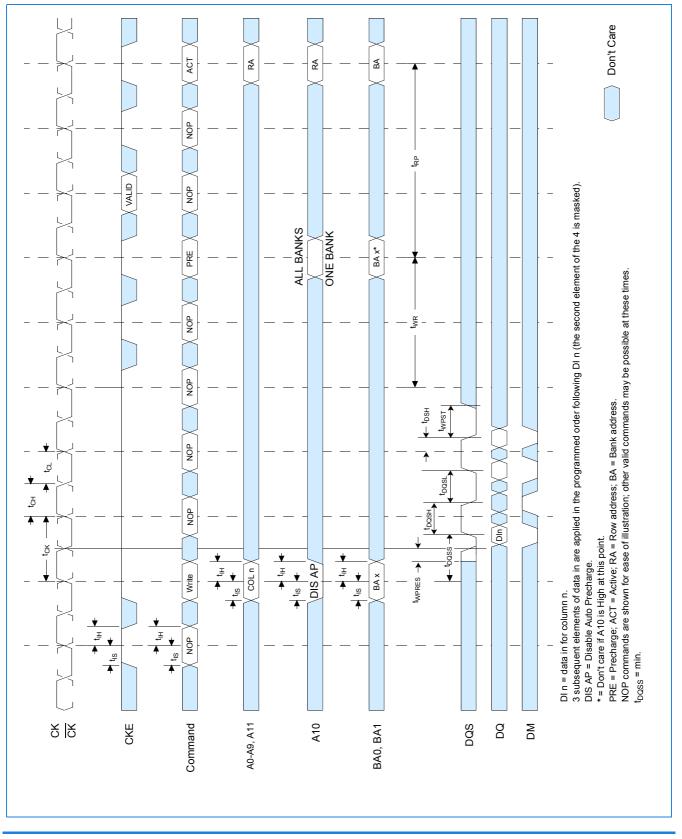

REV 0.5 May 06, 2005 Preliminary





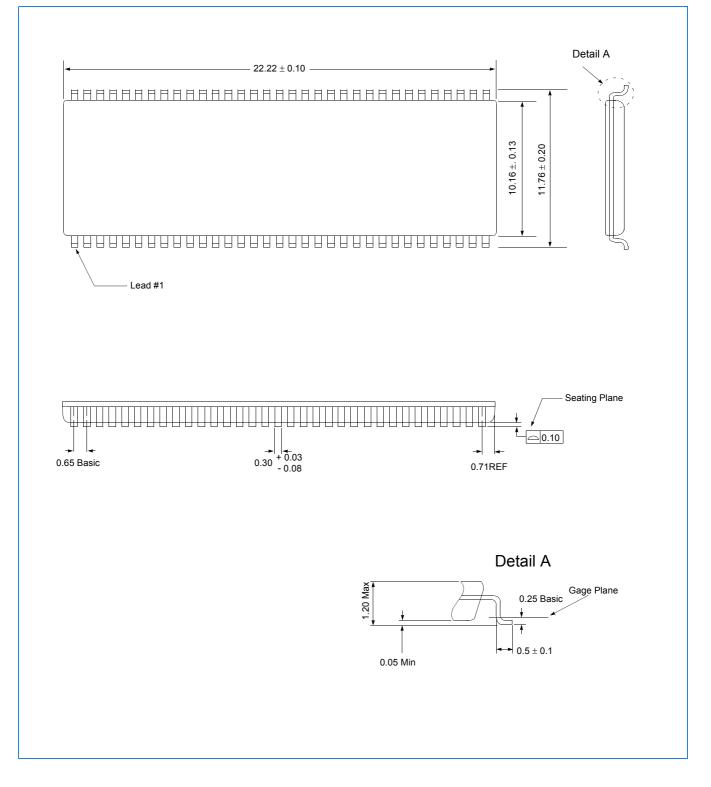



Revision Log

Rev	Date	Modification
0.1	30 Mar 2005	Preliminary Release
0.2	11 Apr 2005	Updated Idd Specifications and Conditions
0.3	21 Apr 2005	Updated all AC Timing
0.4	26 Apr 2005	Updated DQS/DQ/DM Slew rate
0.5	06 May 2005	Added operation Frequency DDR466, remove DDR500





Nanya Technology Corporation.

All rights reserved. Printed in Taiwan, R.O.C.

The following are trademarks of NANYA TECHNOLOGY CORPORATION in R.O.C, or other countries, or both. NANYA NANYA logo

Other company, product and service names may be trademarks or service marks of others.

NANYA TECHNOLOGY CORPORATION (NTC) reserves the right to make changes without notice. NTC warrants performance of its semiconductor products and related software to the specifications applicable at the time of sale in accordance with NTC's standard warranty. Testing and other quality control techniques are utilize to the extent NTC deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Certain applications using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage ("Critical Applications").

NTC SEMICONDUCTOR PRODUCTS ARE NOT DESIGNED, INTEND, AUTHORIZED, OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS OR OTHER CRITICAL APPLICATIONS.

Inclusion of NTC products in such applications is understood to be fully at the risk of the customer. Use of NTC products in such applications requires the written approval of an appropriate NTC officer. Question concerning potential risk applications should be directed to NTC through a local sales office.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards should be provided by customer to minimize the inherent or procedural hazards.

NTC assumes no liability of applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does NTC warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of NTC covering or relating to any combination, machine, or process in which such semiconductor products or services might be or are used.

NANYA TECHNOLOGY CORPORATION HWA YA Technology Park 669, FU HSING 3rd Rd., Kueishan, Taoyuan, Taiwan, R.O.C.

The NANYA TECHNOLOGY CORPORATION home page can be found at http://www.nanya.com