

## **AC Current transducer AT-B420L**

Split-core transducer for the electronic measurement of AC waveform currents, with galvanic isolation between the primary circuit (power) and the secondary circuit (measurement). 4-20 mA current output proportional to the RMS value of the primary current.







# $I_{PN} = 5 ... 150 A$



## **Electrical data**

Primary nominal current rms	Output current	Туре	
I <sub>PN</sub> (A.t.Rms)	I <sub>OUT</sub> (mA)		
5	4-20	AT 5 B420L	
10	4-20	AT 10 B420L	
20	4-20	AT 20 B420L	
50	4-20	AT 50 B420L	
100	4-20	AT 100 B420L	
150	4-20	AT 150 B420L	
R <sub>L</sub> Load resistan	ce, with $\mathbf{V}_{c} = + 24 \text{ V DC}^{1)}$	< 600	Ω
V <sub>C</sub> Supply voltage (loop-powered)		+ 20 30	V DC
I <sub>SL</sub> Output current limitation		< 30	mA
	ability - continuous	120	% of $I_{_{\mathrm{PN}}}$
,	- 1 min	150	% of I <sub>PN</sub>


#### Performance data

X	Accuracy @ $I_{PN}$ , $T_A = 25^{\circ}C$ (excluding offset)	< ± 1.5	% of I <sub>PN</sub>
$\epsilon_{\scriptscriptstyle L}$	Linearity error	$< \pm 0.5$	% of I <sub>PN</sub>
I <sub>OE</sub>	Electrical offset current, T <sub>A</sub> = 25°C	$4 \pm 0.2$	mA
t,	Response time to 90% of I <sub>PN</sub> step	< 100	ms
BW	Frequency bandwidth	50/60	Hz

## General data

$T_{_{A}}$	Ambient operating temperature	- 20 + 60	°C
T <sub>s</sub>	Ambient storage temperature	- 20 + 85	°C
m	Mass	90	g
<b>IPxx</b>	Protection degree	IP40	

Note: 1) Max. Load Resistance vs. Supply Voltage

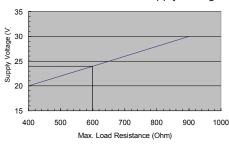

#### **Features**

- RMS output
- Loop-powered 4-20mA current output
- Split-core type
- Ø 16 mm sensing aperture for non-contact measurement
- Terminal output
- Isolated plastic case recognized according to UL 94-V0.

## **Advantages**

- High isolation between primary and secondary circuits
- Compact case
- · Cost-effective solution
- Easy installation

#### **Applications**

- Automation and Supervision
   Current measurement for process regulation by distributed PLCs or remote control (e.g. SCADA software)
- Safety and Condition Monitoring

Load monitoring for protection systems and predictive maintenance (e.g. conveyers, pumps or HVAC motors)

Energy management
 Convenient connection to power consumption sub-meters

## **Application domain**

Energy and Automation



#### **Current Transducer AT-B420L**

Iso	olation characteristics		
<b>V</b> <sub>b</sub>	Rated isolation voltage rms <sup>2)</sup> with IEC 61010-1 standards and following conditions: - Reinforced isolation - Over voltage category CAT III - Pollution degree PD2 - Heterogeneous field	300	V
V <sub>d</sub> dCp	Rms voltage for AC isolation test 3, 50Hz, 1min. Creepage distance	3.5 6	kV mm
dCI CTI	Clearance distance Comparative tracking index (Group I)	6 600	mm

Notes: <sup>2)</sup> If insulated cable is used for the primary circuit, the voltage category could be improved according to the primary cable insulation category (please refer to the cable manufacturer's indications)

## Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly!

Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications.

Ensure you get up-to-date technical information that can be found in the latest associated datasheet under www.lem.com.



## Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage!

The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training.

The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor.

The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety rquirements and in accordance with all the related systems and components manufacturers' operating instructions.



## Caution! Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (e.g. primary conductor, power supply).

The user shall ensure to take all measures necessary to protect against electrical shock.

The transducer is a built-in device containing conducting parts that shall not be accessible after installation. A protective enclosure or additional insulation barrier may be necessary.

The transducer shall not be put into operation if the jaw opening is open (split core version) or the installation is not completed.


Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.

<sup>3)</sup> between primary (completely filling the hole) and secondary.



## **Dimensions AT-B420L** (in mm. 1 mm = 0.0394 inch)

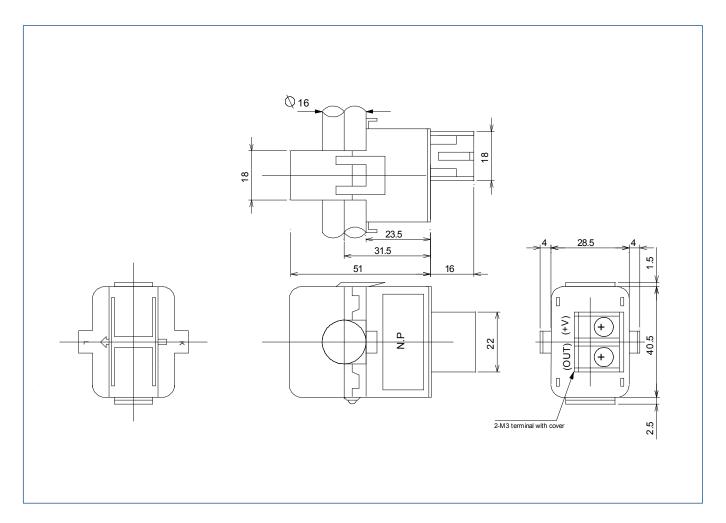

## **Mechanical characteristics**

General tolerance

Primary aperture

Fastening

± 1 mm Ø 16 mm


Cable tie


## Remarks

• ATTENTION: contact areas (air gap) must be kept clean (particle free) to ensure proper performance

## Connections

• Wires up to 2 mm Ø

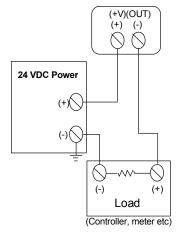

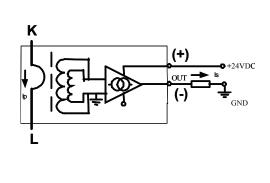

Page 3/3