




CERAMIC FILTER (CERAFIL®) For FM Receivers

SFE10.7/SFT10.7/CDA10.7 Series

CERAMIC
FILTER
(CERAFIL®)

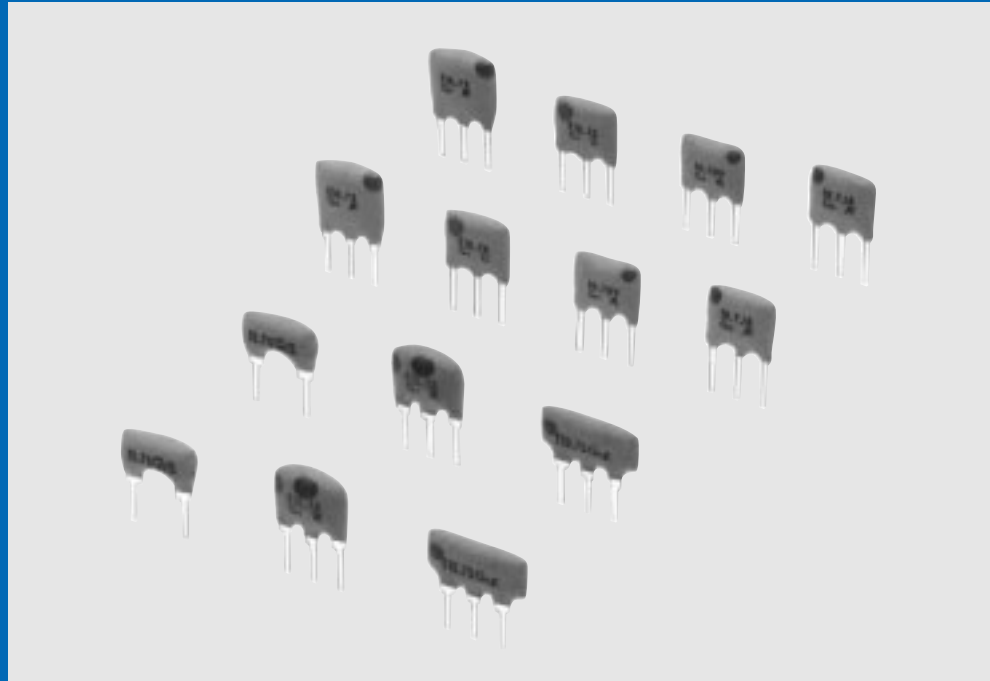

*Innovator
in Electronics*

Murata
Manufacturing Co., Ltd.

Cat.No.P61E-5

■Index

- Introduction 1
- For FM Receiver SFE10.7 Series 2-4
- For FM Receiver Chip Type SFECV10.7 Series 5-6
- Wide Bandwidth / Narrow Bandwidth Type SFE10.7 Series 7
- Low Loss Type A10 Series 8
- Low Profile Type C10 Series 9
- 3-element Type SFT10.7 Series 10
- For Stereo Tuners SFE10.7 Series 11-12
- For FM Detection CDA10.7 Series 13-15
- For FM Detection Chip Type CDACV10.7 Series 16-18
- Example of applied circuit 19-20

■ISO9000 CERTIFICATIONS

Manufacturing plants of these products in this catalog have obtained the ISO9002 quality system certificate.

| Plants | Certified Date | Organization | Registration No. |
|-------------------------------------|----------------|--------------|------------------|
| Himi Murata Manufacturing Co., Ltd. | Jul. 29. 1992 | RCJ *1 | RCJ-86M-07 |
| Taiwan Murata Electronics Co., Ltd. | Nov. 26. 1993 | BCIQ *2 | 5E8Y001-00 |

*1 RCJ : Reliability Center for Electronic Components of Japan

*2 BCIQ : Bureau of Commodity Inspection and Quarantine

Introduction

FM-broadcasting generally has high fidelity and a high S/N ratio. In Europe and North America, there is a particularly large number of FM-broadcasting stations. The performance of FM-receivers is, therefore, greatly dependent on the characteristics of the intermediate frequency filter (selectivity, waveform symmetry, group delay time, etc.).

Murata's ceramic filter SFE 10.7/SFT 10.7 Series for FM-receivers are monolithic type ceramic filters which use the energy trapped thickness vibration-mode of the piezoelectric ceramic.

Ceramic filters are compact and of simple structure, with high selectivity, excellent temperature and environmental characteristics, and favorable waveform symmetry. Because of these excellent features,

Murata's ceramic filter has stable receiving performance.

In recent years, FM-receiver technology has progressed rapidly;

- Electronic tuners have replaced mechanical tuners.
- Tuners have progressively been given higher selectivity and better functions for car-radio receivers.
- High fidelity characteristics have rapidly improved for home audio equipment.

- One-chip, non-adjustment ICs have been developed.
- Compact and low profile because of many chip components used (e. g. for headphone audio).
- Automatic insertion technology for taped components has progressed.

Various types of ceramic filters for FM receivers (SFE 10.7/SFT 10.7 series) are available to meet the needs of divers types of FM receivers.

■NOTICE

- Matching condition should be evaluated to perform stable electrical characteristics which are specified
- Covering filter with over coat, conditions, such as material of resin cure temperature and so on be evaluated well.
- Conformal coating of filter is not acceptable due to unsealed construction.
- Filter might be damaged when an excess stress will be applied.
- We can no warrant against defects caused by any use of the filter which deviates from the intended use as described in this catalog. Please contact us for any other characteristics, using conditions or application to the device which need to be extremely reliable.

■Part Numbering (*Please specify the part numbers when ordering.)

(Ex.)

| | | | | | | |
|----|---|-------|----|---|---|---|
| SF | E | 10.7M | A5 | H | - | Z |
| ① | ② | ③ | ④ | ⑤ | | ⑥ |

① Application, Function.

② Appearance, Shape, Dimensions

E : 2 section filter on 1 wafer

T : 3 section filter on 1 wafer

③ Center Frequency

"M" is added at the end when unit is MHz.

ex.) 10.7MHz → 10.7 M

④ Rating, Characteristics. (Customers Specifications)

⑤ Tolerance of Center Frequency

| | |
|--------|---------|
| ±30kHz | No Code |
| ±25kHz | H |
| ±20kHz | K |

⑥ Rank of Center Frequency

| Code | 30kHz Step | 25kHz Step |
|------|---------------------------|-----------------|
| D | 10.64MHz±30kHz | 10.650MHz±25kHz |
| B | 10.67MHz±30kHz | 10.675MHz±25kHz |
| A | 10.70MHz±30kHz | 10.700MHz±25kHz |
| C | 10.73MHz±30kHz | 10.725MHz±25kHz |
| E | 10.76MHz±30kHz | 10.750MHz±25kHz |
| Z | Combination A, B, C, D, E | |
| M | Combination A, B, C | |

- Two center-frequency series are available : 30kHz step and 25kHz step. The 25kHz series is designated by the letter "H" at the end of the part number.

Ex : SFE10.7MS3H-A

- Center frequency series ±20kHz step is available for synthesizer tuners. These are designated by the letter "K" at the end of the part number.

Ex : SFE10.7MS3K-A



CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.




For FM Receiver **SFE10.7** Series

FEATURES


1. These miniature filters have high mechanical strength.
2. Low loss, favorable waveform symmetry, and high selectivity
3. Various band widths are available for applications in wide to narrow bands.
4. Small dispersion and stable characteristics.
5. Change in center frequency is typically within $\pm 30\text{ppm}/^\circ\text{C}$ at -20 to $+80^\circ\text{C}$.
6. High reliability.



DIMENSIONS

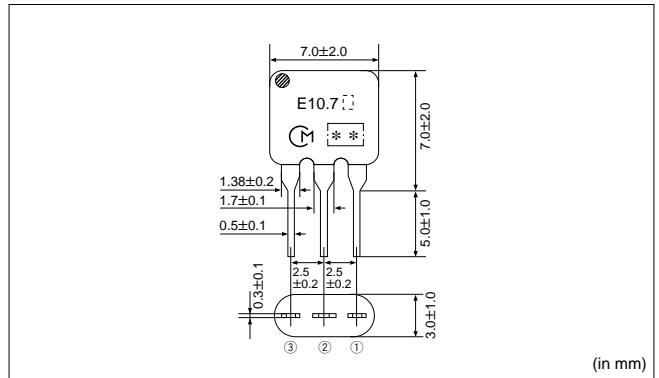

MEASURING CIRCUIT

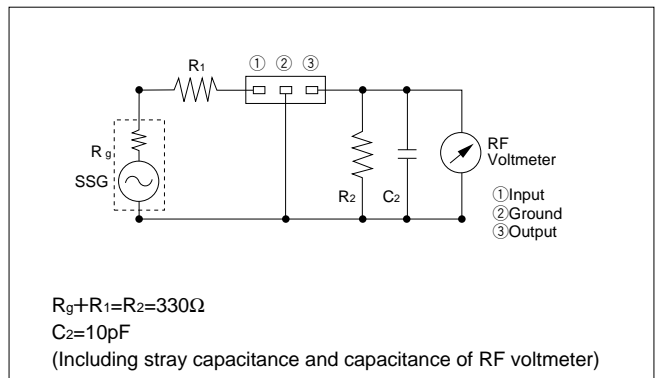


SPECIFICATIONS

| Part Number | 3dB Band Width (kHz) | 20dB Band width (kHz) max. | Insertion Loss (dB) | Spurious Attenuation (9-12MHz) (dB) min. |
|---------------------|----------------------|----------------------------|---------------------|--|
| SFE10.7MA5-Z | 280±50 | 650 (520) | 6 (4) | 30 (43) |
| SFE10.7MS2-Z | 230±50 | 600 (420) | 6 (4) | 40 (45) |
| SFE10.7MS3-Z | 180±40 | 520 (380) | 7 (4.5) | 40 (45) |


• Input/output matching impedance : 330Ω

()Typ.value


■ FREQUENCY CHARACTERISTICS

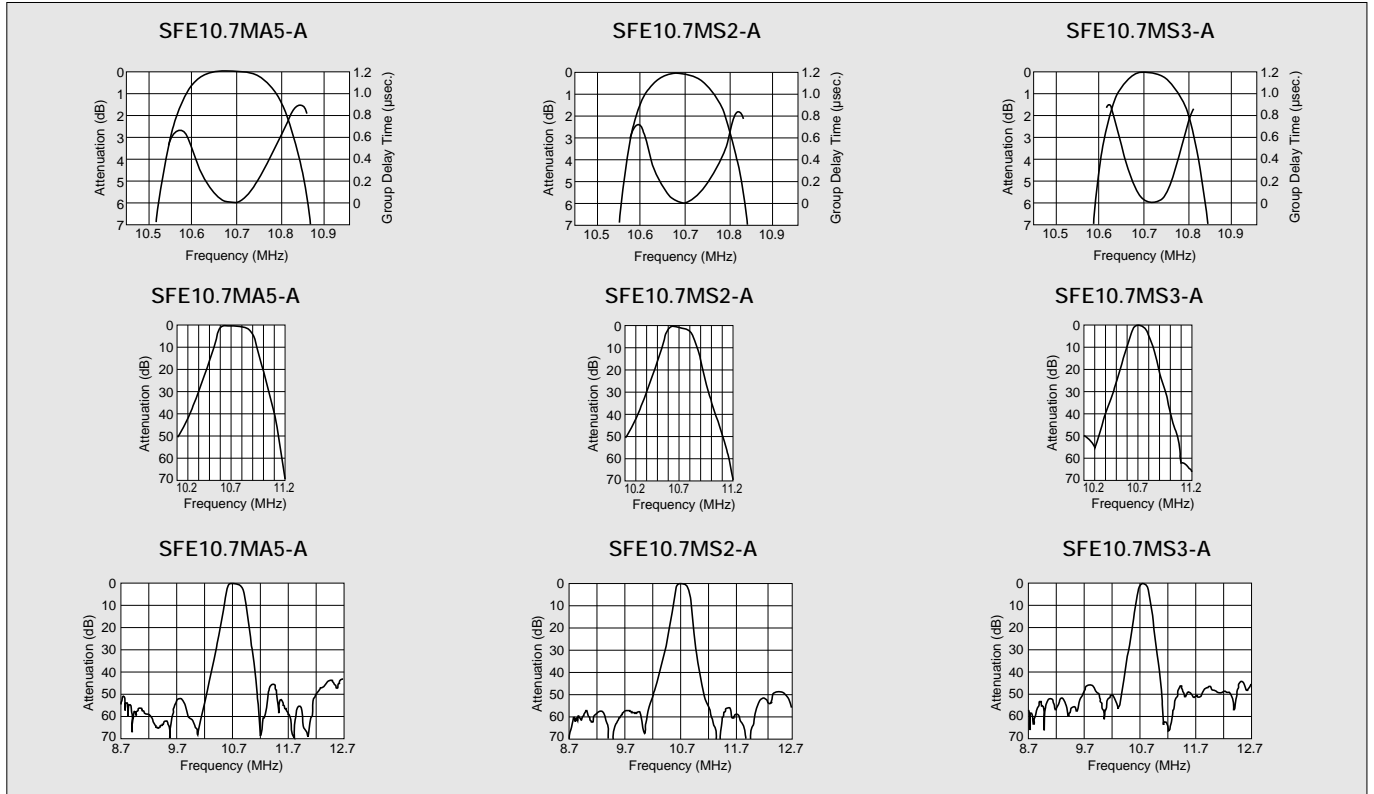

■ SPURIOUS RESPONSE

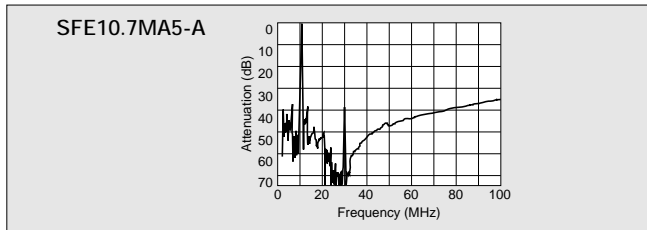


■ TEMPERATURE CHARACTERISTICS

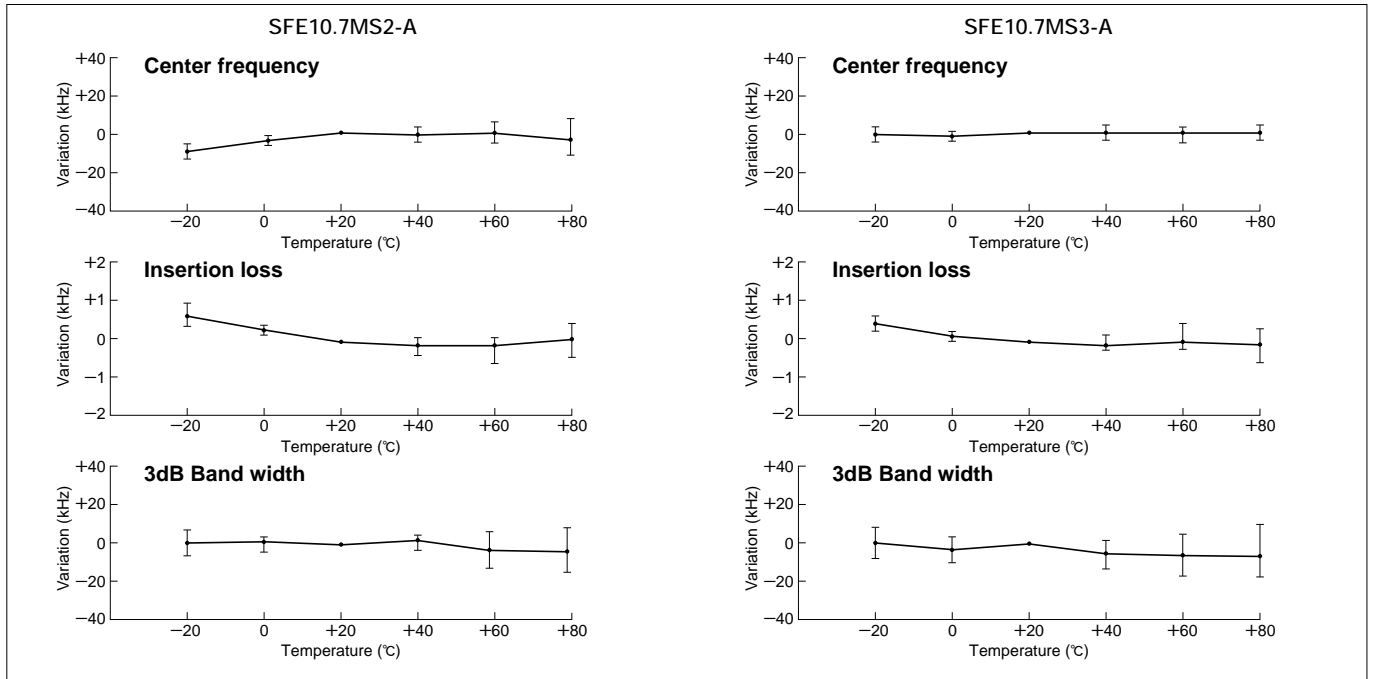


■MATCHING CONDITIONS

- When using ceramic filters, it is most important to match the input/output load to impedance 330Ω (pure resistance). Waveform symmetry is damaged when reactance is added to the input/output load.
- Two ceramic filters directly connected can be used for high selectivity. For reducing waveform variation, it is recommended to input a buffer AMP between ceramic filters.
- The SFE 10.7 and SFT 10.7 series are of input/output symmetric structure so that in theory there is no input/output directionality. Actual circuits may use different input/output loading conditions (for example, mismatched impedance) or capacitance load. In such cases, the waveform will be a little changed by the direction of the input/output of the ceramic filters.

Load resistance and waveform of SFE10.7MS2-A ($R_g + R_l = 330\Omega$)

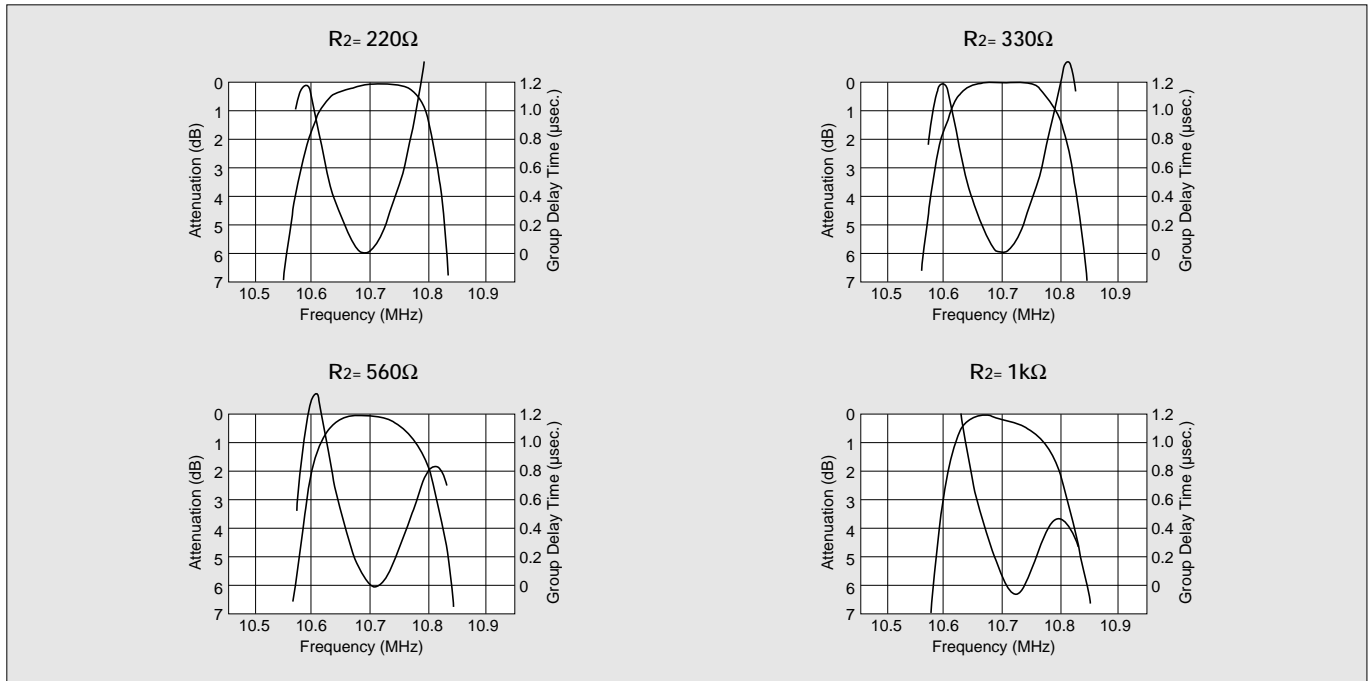

Loaded capacitance and waveform for SFE10.7MS2-A ($R_l + R_g = R_2 = 330\Omega$)

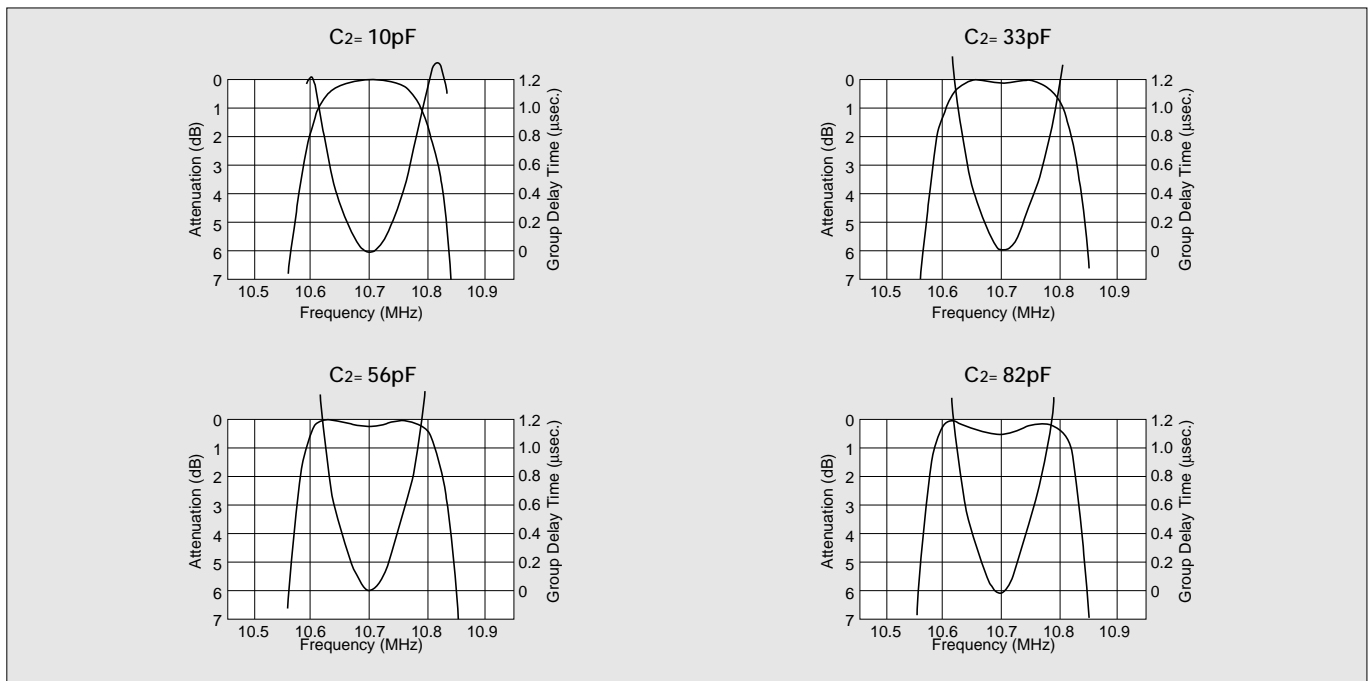



CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.




Chip Ceramic Filter SFECV10.7 Series

Contributing to the Reduction of AM/FM IF Circuit

The chip CERAFIL® SFECV series is high performance filter compare to the conventional series (SFECA). Together with the PFWCC455 filter series for AM, the SFECV10.7 filter series reduces the size of IF circuit in AM/FM radios.

FEATURES


1. Super-thin. Only 1.5mm. The most suitable ceramic filter available for thinning substrates.
2. Heat resistant. Reflow soldering can be performed because of its excellent heat resistance.
3. The piezoelectric element is connected in the sandwich shape by heat resistant substrates, thus it has excellent mechanical strength, and it is suitable for automatic mounting.
4. Various band-widths are available. Select a suitable type in accordance with the desired selectivity.
5. Electrical characteristics are the same as conventional Cerafil®.

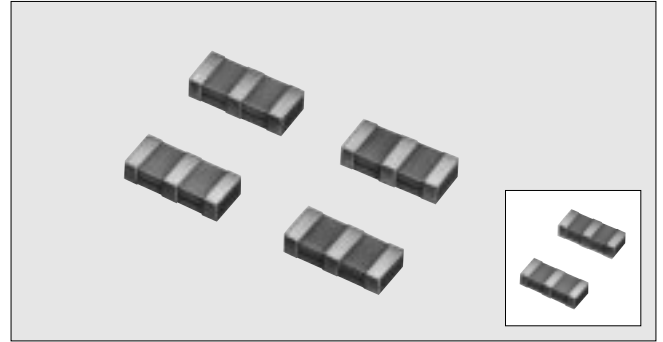


APPLICATIONS

1. Small, thin radios
2. Headphone stereos
3. CAR radios


DIMENSIONS

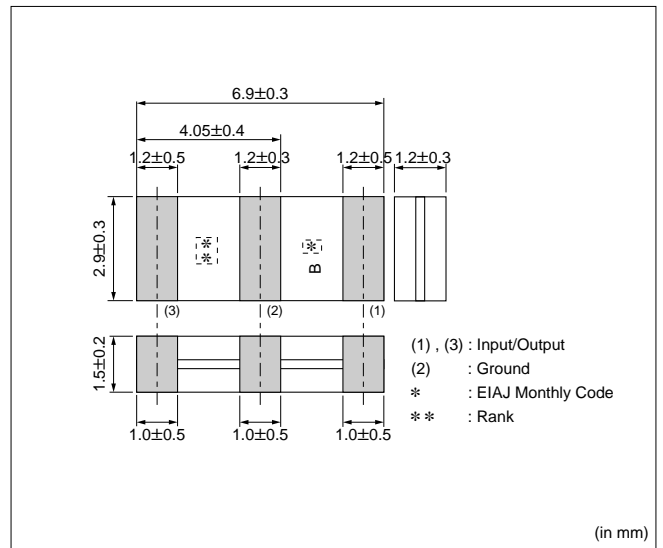

FREQUENCY CHARACTERISTICS

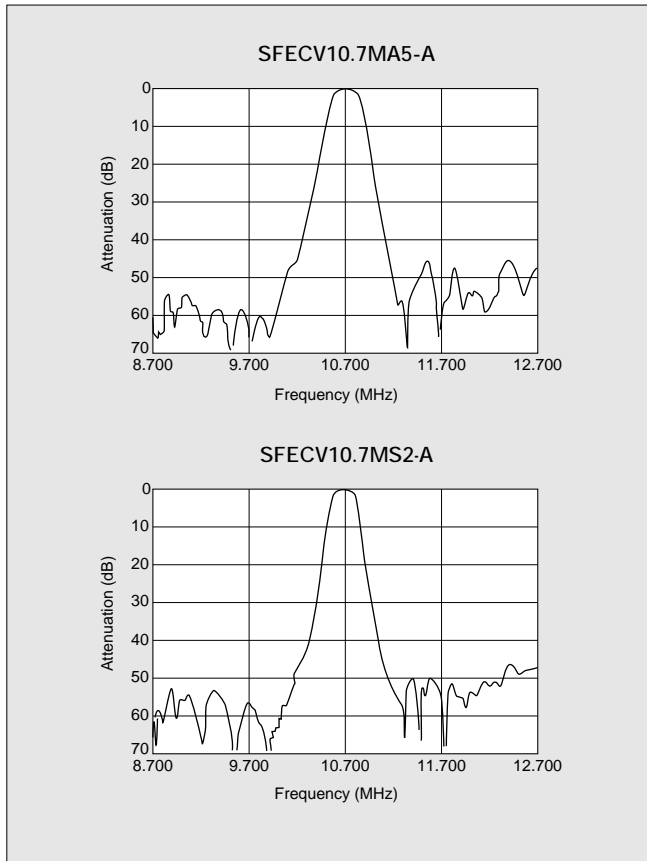

DIMENSIONS OF PLASTICS TAPE

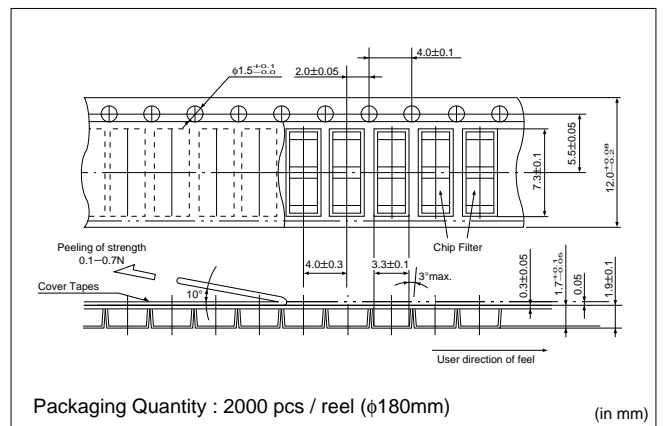


■SPECIFICATIONS

| Part Number Char. | SFECV10.7MA5-Z | SFECV10.7MS2-Z | SFECV10.7MS3-Z | SFECV10.7MJ-Z |
|---------------------------------|---|----------------|----------------|---------------|
| Center Frequency(f_0) | A : 10.700MHz±30kHz max. B : 10.670MHz±30kHz max. C : 10.730MHz±30kHz max. D : 10.640MHz±30kHz max. E : 10.760MHz±30kHz max. Provided that the center point of 3dB band width should be the center frequency and identified by the letters : A, B, C, D or E | | | |
| 3dB Pass Band Width | 280±50kHz | 230±50kHz | 180±40kHz | 150±40kHz |
| 20dB Attenuation Band Width | 590kHz max. | 510kHz max. | 470kHz max. | 380kHz max. |
| Insertion Loss | 3.0±2.0dB | 3.5±2.0dB | 4.0±2.0dB | 5.5±2.0dB |
| Spurious Attenuation (9-12 MHz) | 35dB mn. | 35dB min. | 35dB min. | 35dB min. |
| Input/Output Matching Impedance | 330Ω | | | |

■APPLICATIONS

(1) Standard Land Dimensions

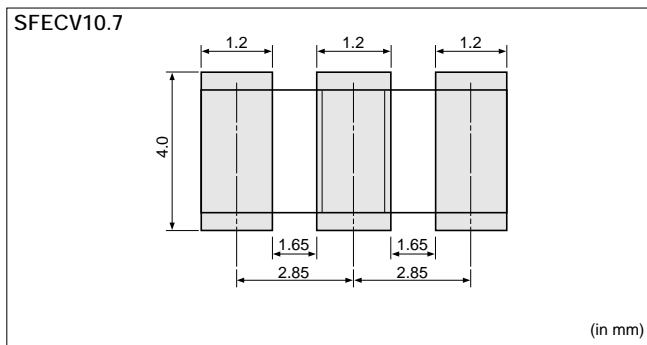


(3) Cleaning conditions

Please avoid cleaning this chip ceramic filter with vapor or immersion because this type is not perfectly shielded.

(2) Soldering Conditions

● Standard soldering conditions

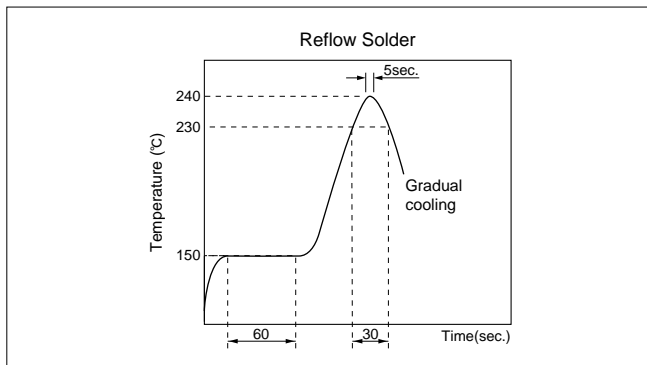

● Soldering with iron

Soldering conditions : Soldering iron temperature 300°C
Soldering time less than 3 seconds.

Note : Please solder this chip ceramic filter so that the soldering iron should not touch the chip body directly.



CERAMIC FILTER


*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.




Wider/Narrow Band-width Type **SFE10.7** Series

FEATURES

1. Realizes wider or narrower band characteristics not obtained by conventional ceramic filters.
2. Temperature characteristics are the best available, the same as those of Murata's conventional ceramic filters. Thus, even in the case of narrow band filters, the center frequency is stable even if temperature changes.

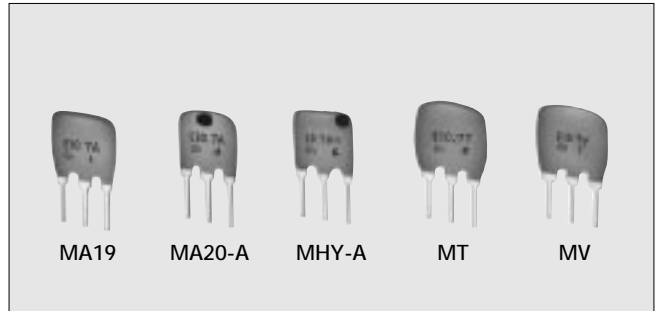

DIMENSIONS

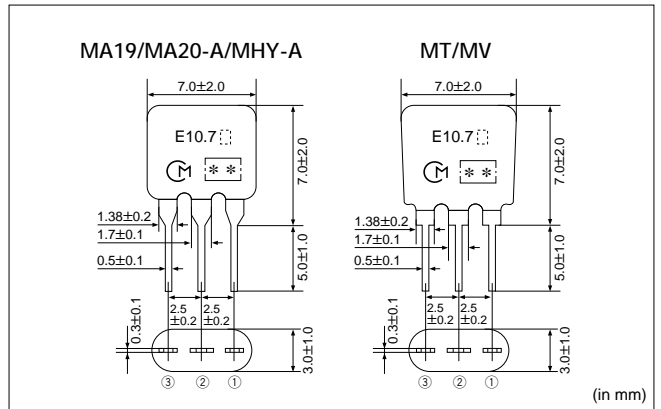


SPECIFICATIONS

| Part Number | 3dB Band Width (kHz) | 20dB Band Width (kHz) max. | Insertion Loss (dB) | Spurious Attenuation (9—12MHz) (dB) |
|----------------------|----------------------|----------------------------|---------------------|-------------------------------------|
| SFE10.7MA19 | 350 min. (450) | 950 max. (750) | 3±2 | 20 min. (30) |
| SFE10.7MA20-A | 330±50 | 680 max. (615) | 4±2 | 30 min. (40) |
| SFE10.7MHY-A | 110±30 | 350 max. (260) | 7±2 | 30 min. (42) |
| SFE10.7MT | ±25kHz min. (82) | 200 max. (160) | 6.5±2.5 | 30 min. (48) |
| SFE10.7MV | ±13kHz min. (56) | 135 max. (110) | 6±2 | 30 min. (41) |

• Input/output matching impedance : 330Ω (MA20-A, MHY-A, MT, MV), 470Ω (MA19) ()Typ.value

FREQUENCY CHARACTERISTICS

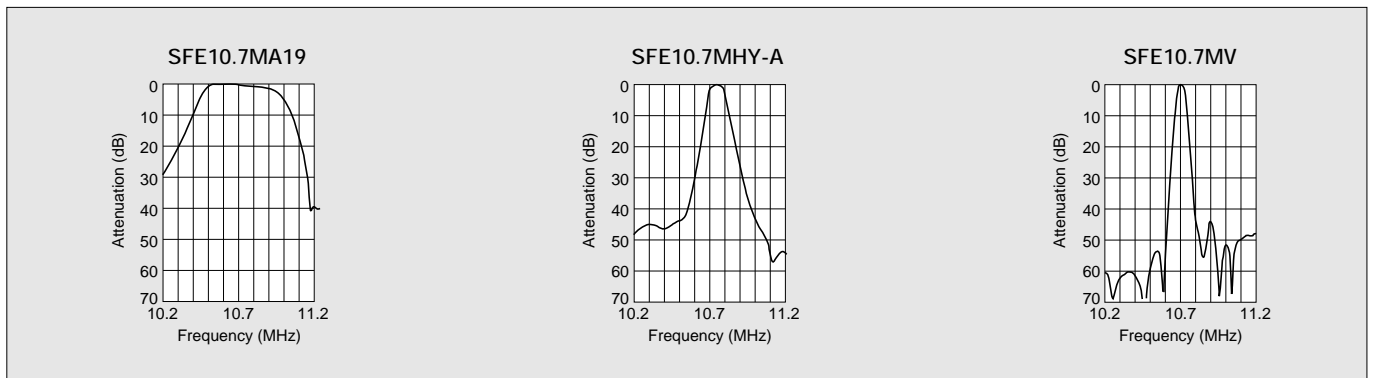



CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.



Low Loss Type SFE10.7□A10 Series


FEATURES

1. Insertion loss is 1—1.5dB lower than conventional products. This types are useful for elevating the sensitivity of sets.
2. Excellent shape factor of frequency response.
3. Good waveform symmetry.


SPECIFICATIONS

| Part Number | 3dB Band Width (kHz) | 20dB Band Width (kHz) max. | Insertion Loss (dB) | Spurious Attenuation (9—12MHz) (dB) min. |
|-----------------|----------------------|----------------------------|---------------------|--|
| SFE10.7MA5A10-Z | 280±50 | 590 (480) | 2.5±2.0 | 30 (42) |
| SFE10.7MS2A10-Z | 230±50 | 520 (400) | 3.0±2.0 | 35 (43) |
| SFE10.7MS3A10-Z | 180±40 | 470 (360) | 3.5±1.5 | 35 (43) |
| SFE10.7MJA10-Z | 150±30 | 360 (290) | 4.0±2.0 | 35 (44) |


● Input/output matching impedance : 330Ω ()Typ.value

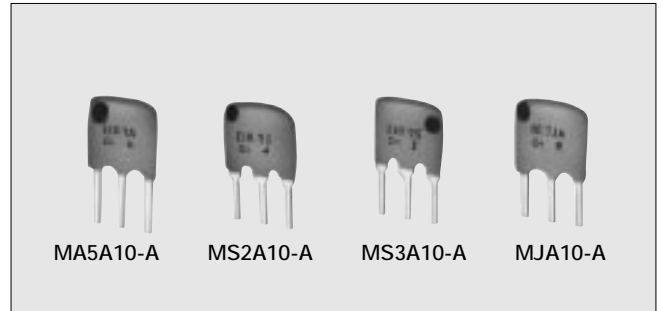

DIMENSIONS

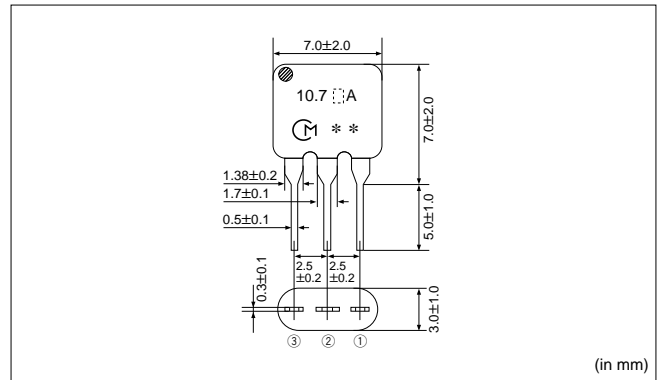

FREQUENCY CHARACTERISTICS

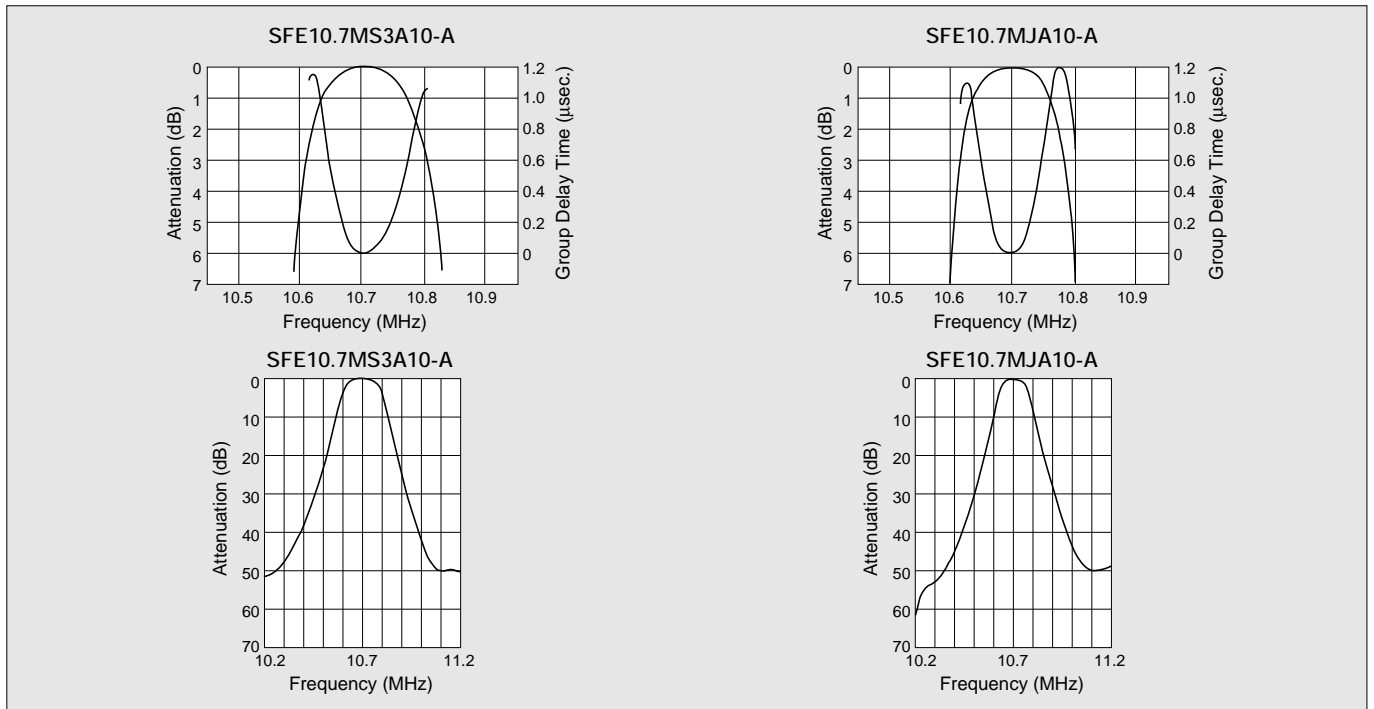



CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.



Low Profile Type SFE10.7□C10 Series


FEATURES

1. Installed height is 5 mm, making it well suited for compact, thin sets.
2. Electrical characteristics and performance are the same as those of the ceramic filter SFE 10.7 series.


SPECIFICATIONS

| Part Number | 3dB Band Width (kHz) | 20dB Band Width (kHz) max. | Insertion Loss (dB) | Spurious Attenuation (9-12MHz) (dB) min. |
|-----------------|----------------------|----------------------------|---------------------|--|
| SFE10.7MA5C10-Z | 280±50 | 650 (546) | 3.0±2.0 | 30 (47) |
| SFE10.7MS2C10-Z | 230±50 | 570 (474) | 3.0±2.0 | 40 (48) |
| SFE10.7MS3C10-Z | 180±40 | 470 (360) | 3.5±2.0 | 35 (45) |


• Input/output matching impedance : 330Ω ()Typ.value

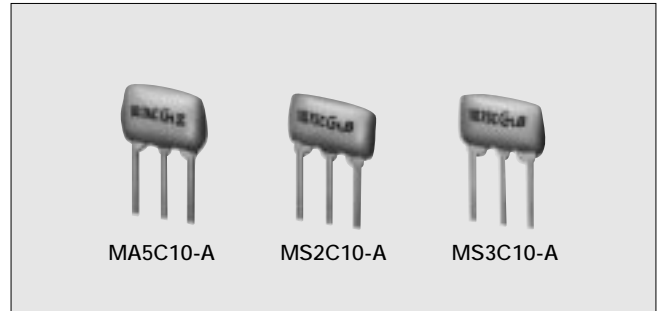


DIMENSIONS

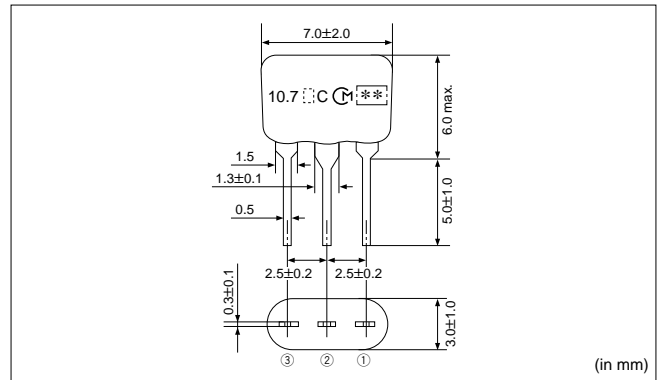

FREQUENCY CHARACTERISTICS

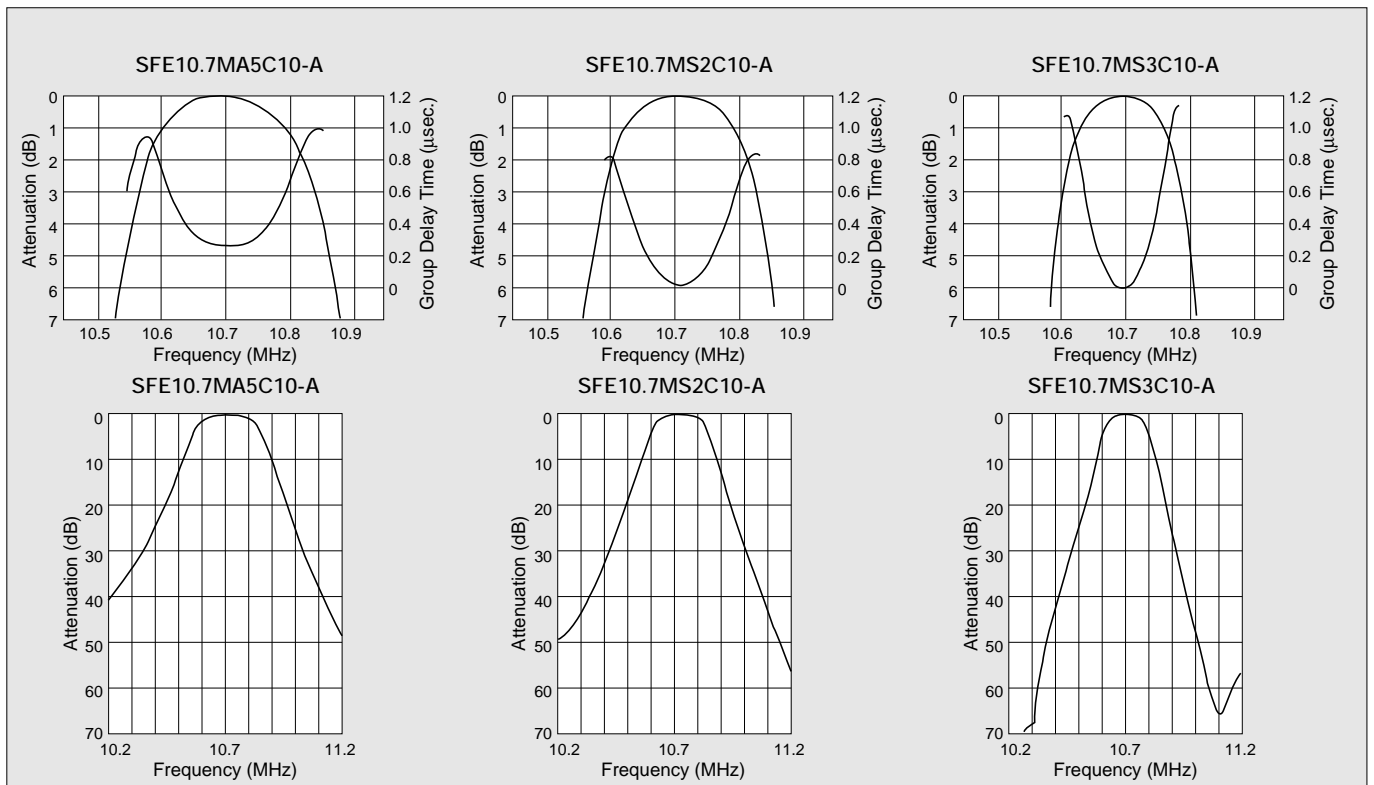

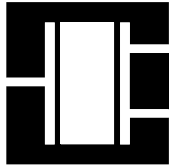

CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.



3-element Type SFT10.7 Series


FEATURES

1. It has an excellent shape factor, and it is possible to obtain 1.5 times more excellent selectivity than SFE 10.7 series (by detuning ±300 or 400kHz).
2. Good performance of spurious suppression.
3. Having the same terminal pitch as the SFE 10.7 series, it easily replaces that series.
4. By replacing two SFE 10.7 series filters with one SFT 10.7 filter, more compact sets can be made.
5. Well-suited for 1-chip ICs.


SPECIFICATIONS

| Part Number | 3dB Band Width (kHz) | 40dB Band Width (kHz) max. | Insertion Loss (dB) | Spurious Attenuation (9—12MHz) (dB) min. |
|--------------|----------------------|----------------------------|---------------------|--|
| SFT10.7MA5-Z | 280±50 | 700 (630) | 6±2 | 50 (60) |
| SFT10.7MS2-Z | 230±40 | 650 (580) | 6±2 | 50 (60) |
| SFT10.7MS3-Z | 180±40 | 550 (500) | 8±2 | 50 (60) |


- Input/output matching impedance : 330Ω () Typ. value
- SFT10.7 series is good to replace with SFE10.7 series because of its higher selectivity.

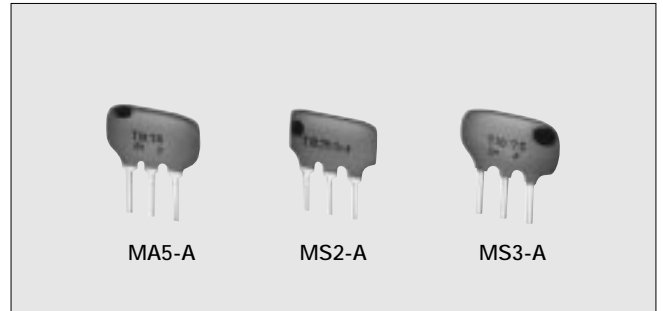


DIMENSIONS

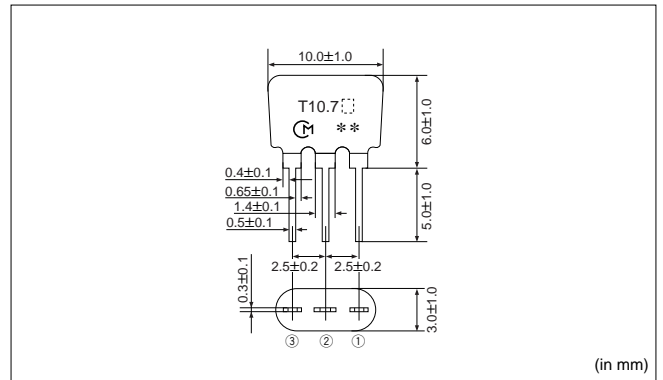

FREQUENCY CHARACTERISTICS

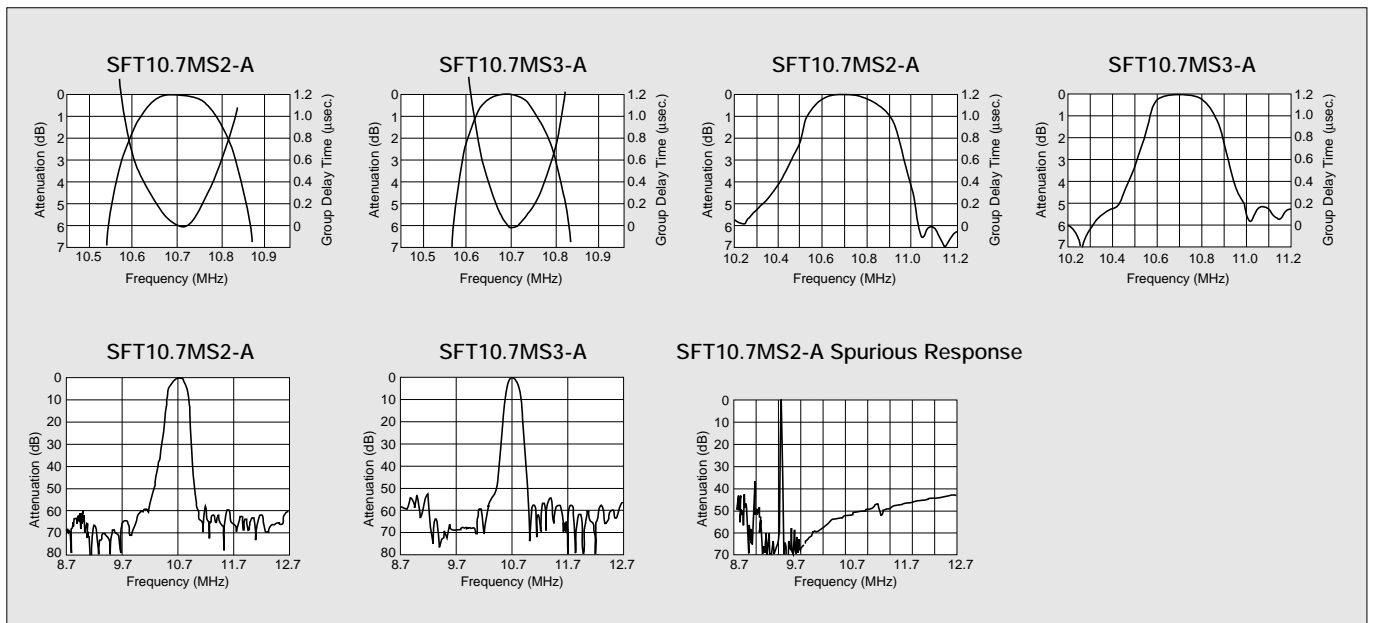

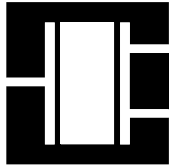


CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.




For Stereo Tuners (G. D. T. Waveform Control Product) **SFE10.7 Series**

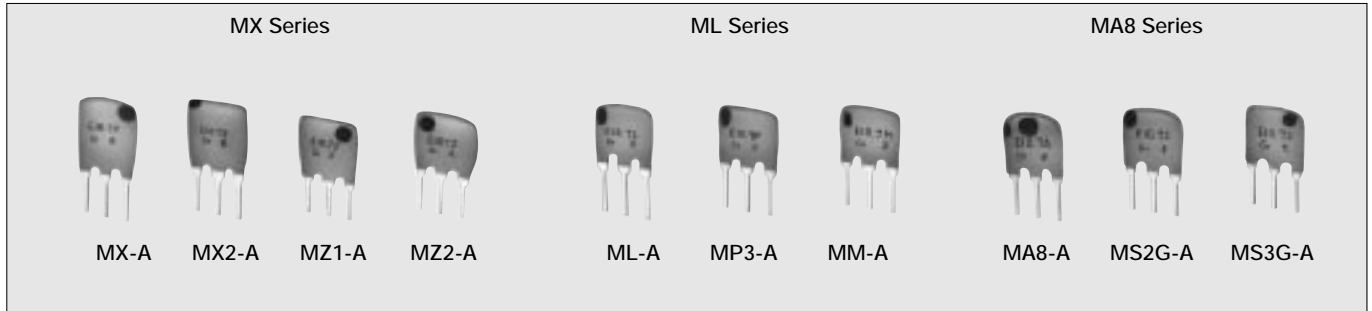

FEATURES

1. Little dispersion of amplitude characteristics and phase characteristics(G. D. T. characteristics)
2. The SFE 10.7 MX series has G.D.T characteristics and is useful for obtaining low distortion.
SFE 10.7 ML series, in these ceramic filters, being in harmony with flatness of G.D.T., roundness of the amplitude and selectivity characteristics, therefore, these ceramic filters are suitable to high-grade stereo tuners. Even if mismatching condition, they can keep little distortion because of low Qm of ceramic material. The SFE 10.7 MA8 series is based on SFE 10.7 MA5/MS2 /MS3, and it obtains high selectivity with low loss. There is little dispersion of amplitude and G.D.T. characteristics, and low distortion rate can be obtained.
3. All products are inspected for symmetry and roundness of amplitude characteristics, and the flatness of G.D.T. characteristics.

DIMENSIONS

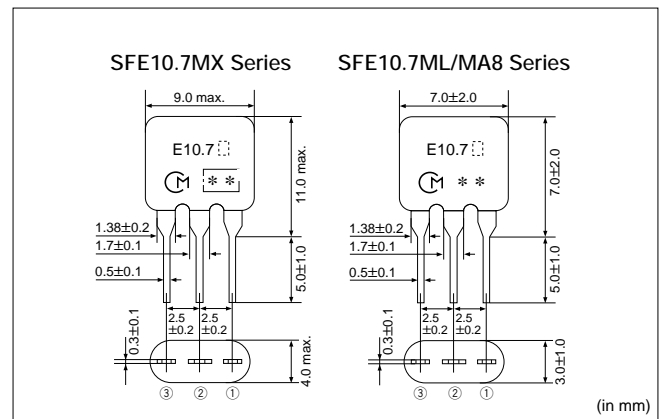

SPECIFICATIONS

| | Char. | 3dB Band Width (kHz) | 20dB Band Width (kHz) max. | Insertion Loss (dB) max. | Spurious Attenuation. min. | G. D. T. Band Width (kHz) min. |
|------------|---------------|----------------------|----------------------------|--------------------------|----------------------------|--|
| MX Series | SFE10.7MX-Z | 250±40 | 670 (620) | 12 (10) | 25 (33) | Deviation : 0.2µ sec. max. (Within of ±110kHz) |
| | SFE10.7MX2-Z | 220±40 | 610 (560) | 12.5 (10.5) | 30 (37) | Deviation : 0.15µ sec. max. (Within of ±80kHz) |
| | SFE10.7MZ1-Z | 180±30 | 530 (460) | 14 (12.3) | 33 (38) | Deviation : 0.15µ sec. max. (Within of ±60kHz) |
| | SFE10.7MZ2-Z | 150±30 | 500 (420) | 14 (12.6) | 35 (41) | Deviation : 0.15µ sec. max. (Within of ±50kHz) |
| ML Series | SFE10.7ML-Z | 280±50 | 650 (610) | 9 (7) | 25 (33) | 0.25µsec. f0±70 (±105) kHz |
| | SFE10.7MP3-Z | 250±50 | 650 (550) | 10 (8) | 30 (35) | 0.25µsec. f0±65 (±90) kHz |
| | SFE10.7MM-Z | 230±50 | 600 (510) | 11 (9) | 30 (38) | 0.25µsec. f0±60 (±85) kHz |
| MA8 Series | SFE10.7MA8-Z | 280±50 | 650 (520) | 6 (4) | 30 (43) | 0.5µsec. f0±80 (±100) kHz |
| | SFE10.7MS2G-Z | 230±50 | 600 (420) | 7 (4.5) | 40 (45) | 0.5µsec. f0±60 (±75) kHz |
| | SFE10.7MS3G-Z | 180±40 | 520 (380) | 9 (5) | 40 (45) | 0.5µsec. f0±45 (±60) kHz |

● Input/output matching impedance : 330Ω

()Typ.value



CERAMIC FILTER





*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.






For Stereo Tuners (G. D. T. Waveform Control Product) **SFE10.7 Series**

FREQUENCY CHARACTERISTICS




● MX series

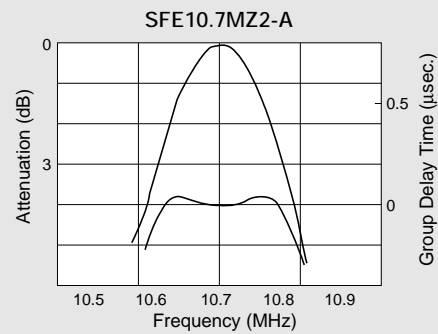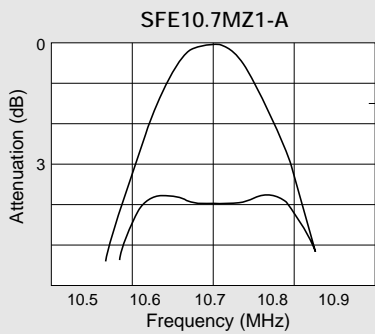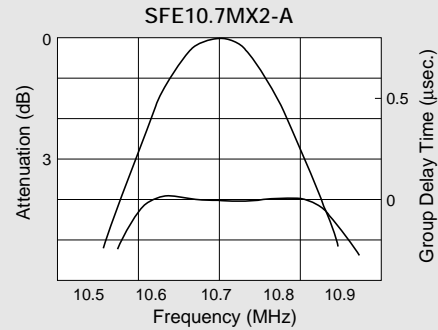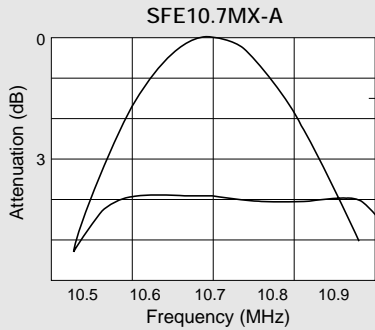

● ML series

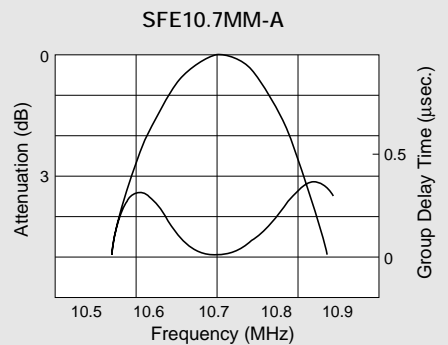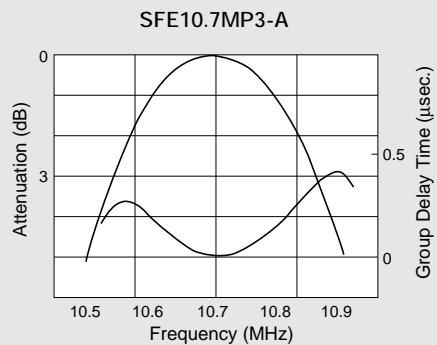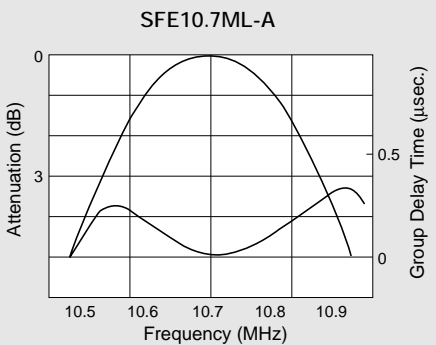

● MA8 series

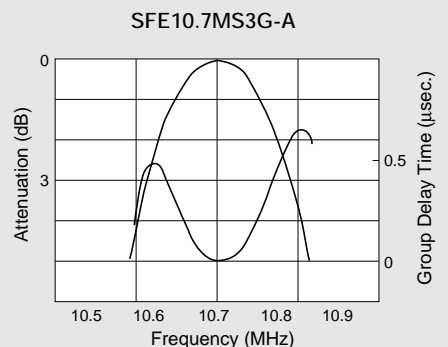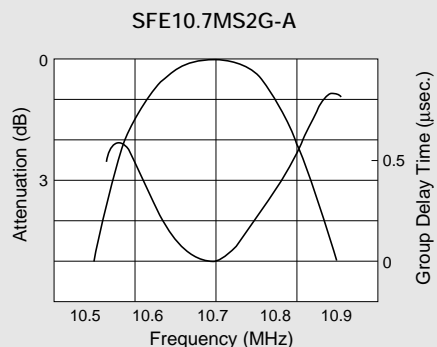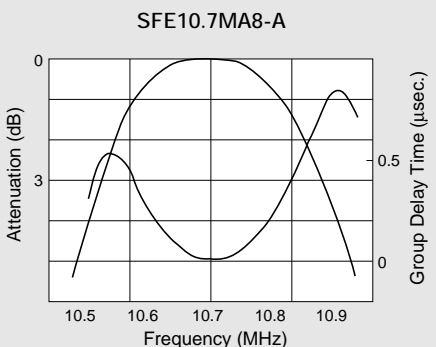



CERAMIC DISCRIMINATOR



Ceramic Discriminator **CDA10.7** Series For FM Detection

Well-suited for Miniaturization without Adjustment


In conformity with trends for higher performance audio devices, demand has grown for non-adjustment, single chip ICs.

Murata's ceramic discriminator CDA10.7 series forms a resonator on a piezoelectric ceramic substrate.


In combination with ICs, this type obtains stable demodulation characteristics in wide bandwidths.

■FEATURES

1. Compact and excellent mechanical strength.
2. Can be combined with various ICs. The IC is determined by the last number in the part number.
3. Stable demodulation characteristics can be obtained without adjustment.
4. The MG type for wide bandwidths and the MC type for narrow bandwidths are available.
5. Stable temperature characteristics.
6. We recommend kits : ceramic discriminator CDA10.7 series and Cerafi® SFE10.7 of the same frequency rank.

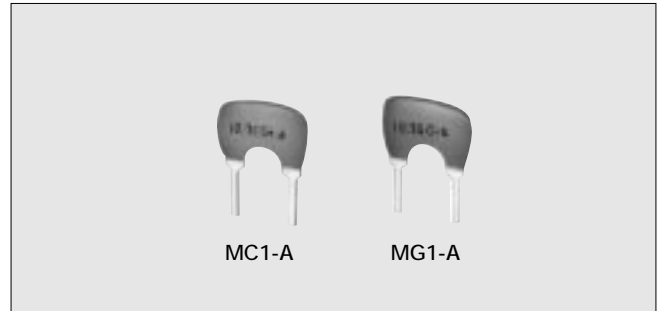

■DIMENSIONS

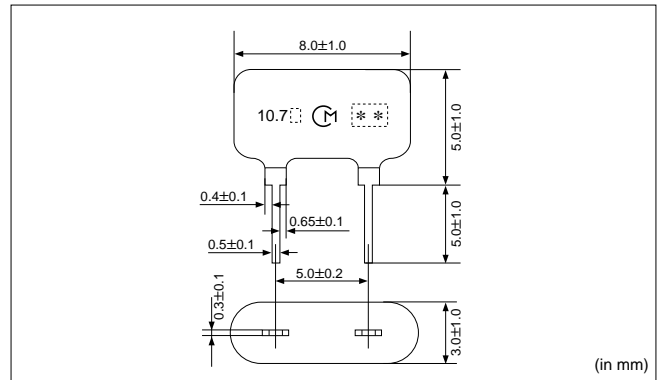

■SPECIFICATIONS

| Part Number | Demodulation Output (mV) at f ₀ | Distortion Factor (%) max. at f ₀ | Demodulation 3dB Band width (kHz) min. | Detection System | IC |
|----------------------|--|--|--|------------------|-------------|
| CDA10.7MG1-Z | 25 min. | 1.0 (0.1) | 345 (500) | Quadrature | CX20029 |
| | | | | | CX20111 |
| CDA10.7MG16-Z | 60—90 min. | 0.9 (0.5) | 300 (370) | Quadrature | TA8122AN/AF |
| CDA10.7MG48-Z | 700 min. | 1.0 (0.2) | 400 (560) | Quadrature | LA1835 |
| CDA10.7MC1-Z | 35 min. | 1.0 (0.2) | 242 (370) | Quadrature | CXA1019M |
| | | | | | CX20091 |

()Typ.value

* Input signal conditions

| | | | | | | |
|---------------|---------------|--------|-----------|--------|-----------|----------|
| CDA10.7MG1-Z | : Input Level | 100dBμ | Mod.Freq. | 400Hz | Freq.Dev. | ±22.5kHz |
| CDA10.7MG16-Z | : Input Level | 80dBμ | Mod.Freq. | 1000Hz | Freq.Dev. | ±22.5kHz |
| CDA10.7MG48-Z | : Input Level | 112dBμ | Mod.Freq. | 1000Hz | Freq.Dev. | ± 75kHz |
| CDA10.7MC1-Z | : Input Level | 100dBμ | Mod.Freq. | 400Hz | Freq.Dev. | ±22.5kHz |

● Center frequency rank

- A (Red) : 10.70MHz±30kHz
- B (Blue) : 10.67MHz±30kHz
- C (Orange) : 10.73MHz±30kHz
- D (Black) : 10.64MHz±30kHz
- E (White) : 10.76MHz±30kHz
- Z : A.B.C.D.E 5 ranks mixed.



CERAMIC DISCRIMINATOR




Ceramic Discriminator **CDA10.7** Series For FM Detection


■ FREQUENCY CHARACTERISTICS

TEST CIRCUIT OF CDA10.7MG1-Z

CDA10.7MG1-A

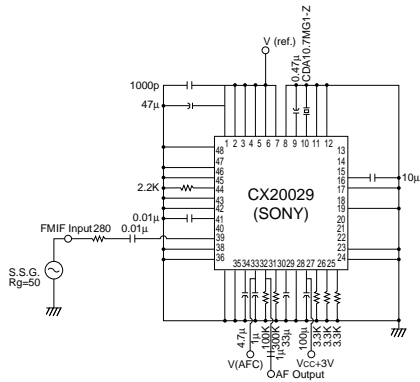


Input signal conditions
 Input Level 100dBµ
 Mod.Freq. 400Hz
 Freq.Dev. ±22.5kHz

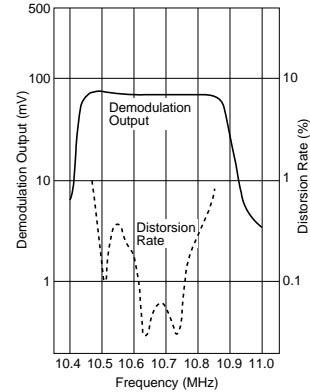


TEST CIRCUIT OF CDA10.7MG16-Z

CDA10.7MG16-A

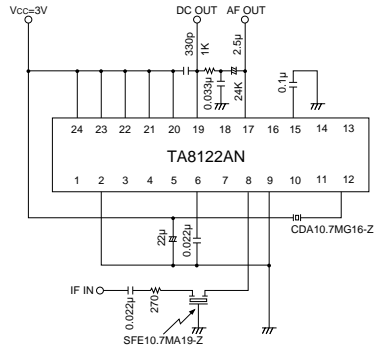


Input signal conditions
 Input Level 80dBµ
 Mod.Freq. 1000Hz
 Freq.Dev. ±22.5kHz

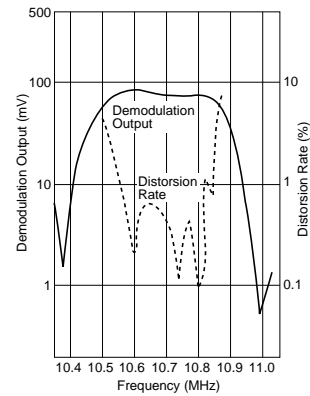


TEST CIRCUIT OF CDA10.7MG48-Z

CDA10.7MG48-A

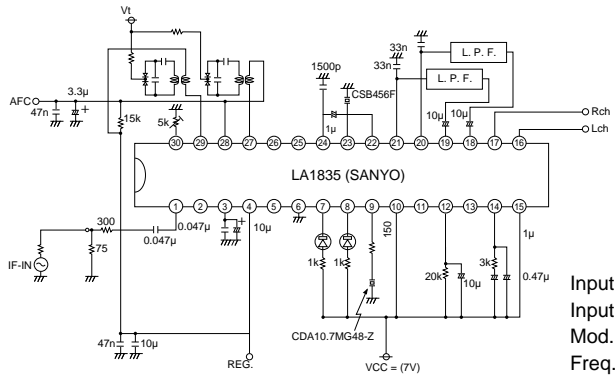


Input signal conditions
 Input Level 112dBµ
 Mod.Freq. 1000Hz
 Freq.Dev. ±75kHz

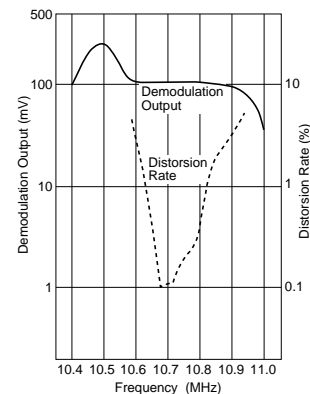


TEST CIRCUIT OF CDA10.7MC1-Z

CDA10.7MC1-A

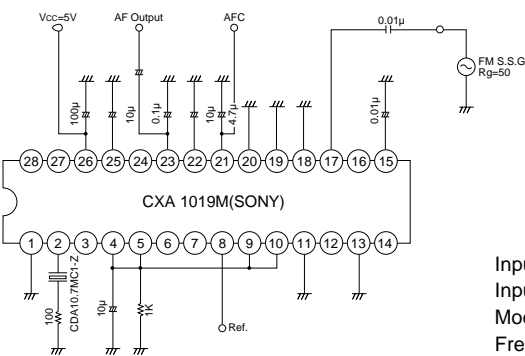

Input signal conditions
 Input Level 100dBµ
 Mod.Freq. 400Hz
 Freq.Dev. ±22.5kHz

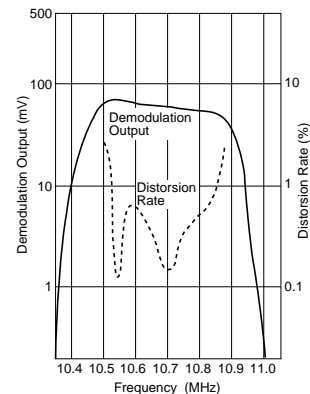



CERAMIC DISCRIMINATOR



Ceramic Discriminator **CDA10.7** Series For FM Detection

■ CERAMIC DISCRIMINATOR LIST FOR FM RECEIVER

CDA10.7MG Type

| Part Number | Corresponding IC |
|----------------|-------------------|
| CDA10.7MG1-Z | CX-20029/CX-20111 |
| CDA10.7MG2-Z | CX-831 |
| CDA10.7MG4-Z | BA4234L |
| CDA10.7MG6-Z | TA7640AP |
| CDA10.7MG7-Z | LA1260 |
| CDA10.7MG8-Z | TA7303P |
| CDA10.7MG9-Z | TA7130P |
| CDA10.7MG12-Z | CXA1030P |
| CDA10.7MG13-Z | AN7007SU |
| CDA10.7MG14A-Z | AN7006S |
| CDA10.7MG15-Z | LA1816 |
| CDA10.7MG16-Z | TA8122AN |
| CDA10.7MG17-Z | TEA5591 |
| CDA10.7MG18-Z | TA8132N |
| CDA10.7MG19-Z | BA1440 |
| CDA10.7MG20-Z | NE604 |
| CDA10.7MG21 | TBA229-2 |
| CDA10.7MG22-Z | LA1810 |
| CDA10.7MG23-Z | LA7770 |
| CDA10.7MG24 | TDA2557 |
| CDA10.7MG25V | U829B |
| CDA10.7MG26-Z | LA1805 |
| CDA10.7MG27-Z | CXA1238 |
| CDA10.7MG28-Z | U2501B |
| CDA10.7MG29 | TBA120U |
| CDA10.7MG30-Z | TE5592 |
| CDA10.7MG31-Z | TA2003 |
| CDA10.7MG32-Z | CXA1343M |
| CDA10.7MG33-Z | TA2007 |
| CDA10.7MG34V | U4490B |
| CDA10.7MG35-Z | TEA5594 |
| CDA10.7MG36-Z | TA2029 |
| CDA10.7MG37-Z | LA1830 |
| CDA10.7MG39-Z | TA8186 |
| CDA10.7MG40-Z | TEA5710 |
| CDA10.7MG41-Z | BA4220 |
| CDA10.7MG42-Z | SA605 |
| CDA10.7MG43-Z | LA1831 |
| CDA10.7MG45-Z | TA2008 |
| CDA10.7MG46-Z | LA1832 |
| CDA10.7MG47A | SA626 |
| CDA10.7MG48-Z | LA1835 |
| CDA10.7MG49-Z | MC13156 |
| CDA10.7MG50-Z | TA2022 |

| Part Number | Corresponding IC |
|---------------|------------------|
| CDA10.7MG51-Z | TDA1576T |
| CDA10.7MG52-Z | MC13173 |
| CDA10.7MG53-Z | AN7232 |
| CDA10.7MG54-Z | CXA1376 |
| CDA10.7MG55-Z | TEA5712T |
| CDA10.7MG56-Z | uPC1391H |
| CDA10.7MG57-Z | TA2057 |
| CDA10.7MG58-Z | TA2046 |
| CDA10.7MG59V | KA2244 |
| CDA10.7MG60-Z | BA1448/1449 |
| CDA10.7MG61-Z | TEA5762 |
| CDA10.7MG62-Z | TK14581 |
| CDA10.7MG63-Z | KA2292 |
| CDA10.7MG64-Z | KA2295 |
| CDA10.7MG65-Z | KA2298 |
| CDA10.7MG66-Z | BA4110 |
| CDA10.7MG67-Z | BA4240L |
| CDA10.7MG68-Z | CXA1991N |
| CDA10.7MG69-Z | CXA1538 |
| CDA10.7MG70-Z | LA1150 |
| CDA10.7MG71-Z | TA7765AF |
| CDA10.7MG72 | TA31161 |
| CDA10.7MG74-Z | LA1838 |
| CDA10.7MG75-Z | CXA1611 |
| CDA10.7MG76-Z | CXA3067M |
| CDA10.7MG77-Z | TA2111 |
| CDA10.7MG82-Z | TA2099 |

CDA10.7MC Type

| Part Number | Corresponding IC |
|----------------|-------------------|
| CDA10.7MC1-Z | CXA1019M/CX-20091 |
| CDA10.7MC2-Z | A7687P/F |
| CDA10.7MC3 | AN7220A |
| CDA10.7MC4A-Z | MC3356P |
| CDA10.7MC5A-Z | LA7770 |
| CDA10.7MC6-Z | TEA5591 |
| CDA10.7MC10-Z | TEA5594 |
| CDA10.7MC19-Z | BA1440 |
| CDA10.7MC30-Z | TEA5592 |
| CDA10.7MC40-Z | TEA5710 |
| CDA10.7MC43A-Z | LA1831 |
| CDA10.7MC55-Z | TEA5712T/N2 |



CHIP CERAMIC DISCRIMINATOR



Chip Ceramic Discriminator **CDACV10.7** Series


Chip Ceramic Discriminator For Thinner FM Radios.

When using chip components in the design of FM radios, their arrangement and space allocation can create design difficulties. To help reduce these problems, Murata has developed this series of chip ceramic discriminators. The CDACV series has the same structure as the chip CERAFIL® SFECV series, and allow the design of FM detecting circuits requiring no adjustment. Also, these discriminators have good stable demodulation characteristics. The mounting area of the discriminators have been decreased to approximately 80% of conventional models (CDAC). The series will especially contribute to downsizing, height reduction.


The CDACV10.7 series can be used as kits with the CERAFIL® SFECV10.7 series to facilitate design.

■FEATURES


1. The discriminator is only 1.5mm thick so it is well suited for thin circuit boards.
2. This discriminator can be used with a variety of ICs including the following examples : CX-20029 (Sony)
TA8122AF (Toshiba)
TA2022 (Toshiba)
CXA1538N (Sony)
3. It exhibits demodulation characteristics over a wide frequency range without the need for adjustment.
4. The series has excellent temperature characteristics and good aging stability.
5. The series has the same structure as the chip Cerafil® SFECV10.7 series. It is suitable for automatic mounting and its excellent heat resistance allows reflow soldering.
6. This series(CDACV10.7)and the chip Cerafil® SFECV10.7 series can be supplied with the equivalent center frequency as kits.

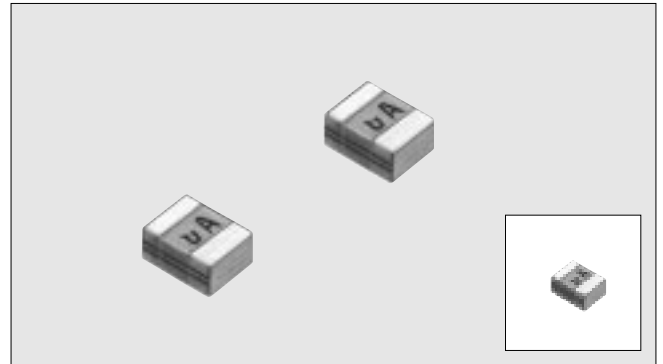

■DIMENSIONS

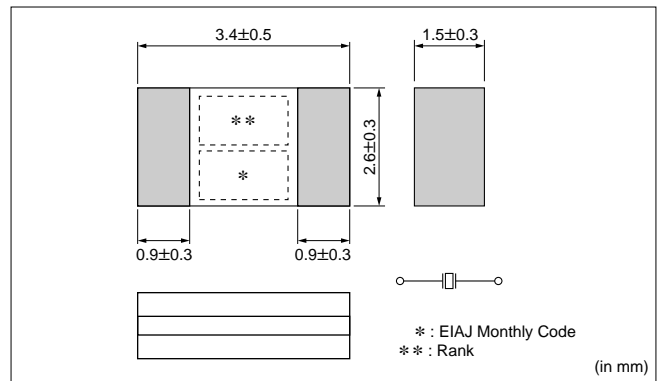

■DIMENSIONS OF PLASTIC TAPE

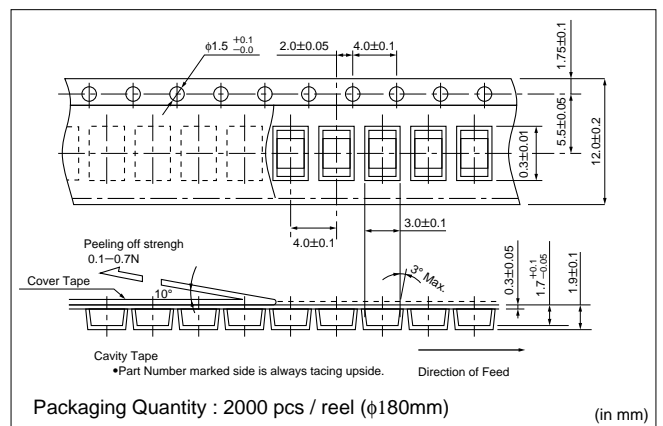



CHIP CERAMIC DISCRIMINATOR



Chip Ceramic Discriminator CDACV10.7 Series

SPECIFICATIONS

| Part Number | Demodulation Output (mV) at f_0 | Distortion Factor (%) max. at f_0 | Demodulation 3dB Band width (kHz) min. | Detection System | IC |
|------------------------|-----------------------------------|-------------------------------------|--|------------------|----------------------|
| CDACV10.7MG1-Z | 55 min. | 1.0 (0.3) | $f_0 \pm 150$ | Quadrature | CXA20029 CXA20111 |
| CDACV10.7MG16-Z | Within 60 to 90 | 0.9 (0.3) | 300 | Quadrature | TA8122F |
| CDACV10.7MG50-Z | 35 min. | 0.8 (0.2) | 200 | Quadrature | TA2022 |
| CDACV10.7MG69-Z | 80 min. | 1.0 (0.3) | 330 | Quadrature | CXA1538N |


()Typ.value

***Input signal conditions**

| | | | | |
|-----------------|---------------|-------------|-----------------|--------------------------|
| CDACV10.7MG1-Z | : Input Level | 100dB μ | Mod.Freq.1000Hz | Freq.Dev. ± 22.5 kHz |
| CDACV10.7MG16-Z | : Input Level | 80dB μ | Mod.Freq.1000Hz | Freq.Dev. ± 22.5 kHz |
| CDACV10.7MG50-Z | : Input Level | 100dB μ | Mod.Freq.1000Hz | Freq.Dev. ± 22.5 kHz |
| CDACV10.7MG69-Z | : Input Level | 100dB μ | Mod.Freq.1000Hz | Freq.Dev. ± 75 kHz |


APPLICATIONS

(1) Standard Land Dimensions

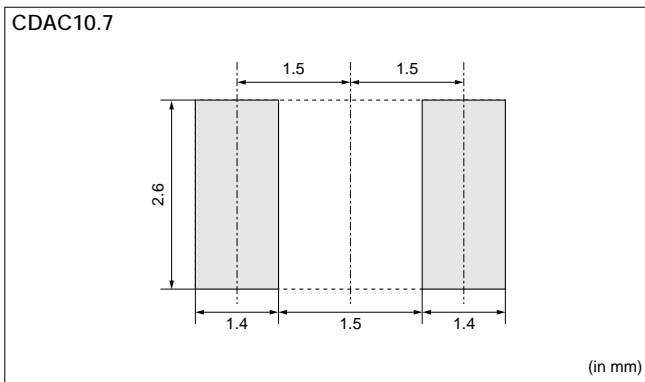

(2) Soldering Conditions

• Standard soldering conditions

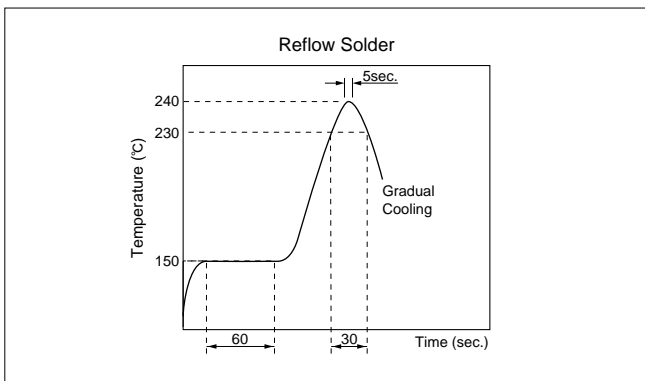

• Soldering with iron

Soldering conditions : Soldering iron temperature 280°C ;
Soldering time less than 3 seconds.


Note: Do not allow the tip of the soldering iron to directly contact the chip ceramic discriminator.

(3) Cleaning conditions

Please avoid cleaning this chip ceramic discriminator using the vapor or immersion methods because it is not perfectly shielded.

NOTICE

1. Please avoid applying an excessive stress to the ceramic filter because it might be damaged.
2. Ceramic discriminators are designed to perform as intended in conjunction with specific ICs. Please contact us for the appropriate part number of the ceramic discriminator to be matched with the IC. It is also strongly recommended to evaluate the ceramic discriminator after mounting it on your products prior to series production.
3. These ceramic discriminator are designed to be used in the portable FM radio application. Please avoid using it for Car radio and other application which require high stability over a wide temperature range.

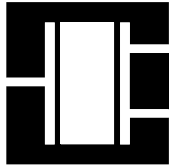

CHIP CERAMIC DISCRIMINATOR




Chip Ceramic Discriminator **CDAC10.7** Series


FREQUENCY CHARACTERISTICS

TEST CIRCUIT OF CDACV10.7MG1-Z

CDACV10.7MG1-A

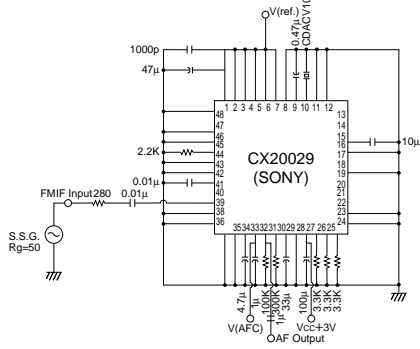


Input signal conditions
 Input Level 100dBµ
 Mod.Freq. 1000Hz
 Freq.Dev. ±22.5kHz

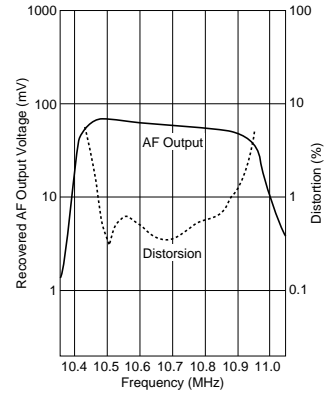


TEST CIRCUIT OF CDACV10.7MG16-Z

CDACV10.7MG16-A

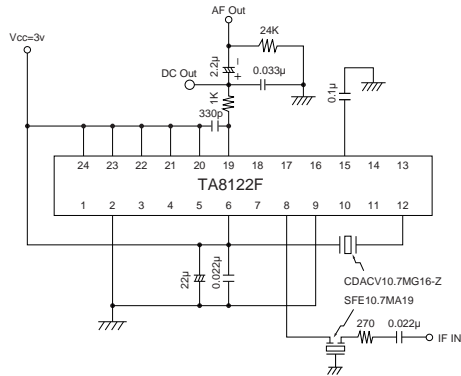


Input signal conditions
 Input Level 80dBµ
 Mod.Freq. 1000Hz
 Freq.Dev. ±22.5kHz

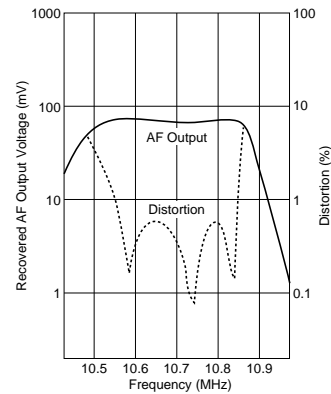


TEST CIRCUIT OF CDACV10.7MG50-Z

CDACV10.7MG50-A

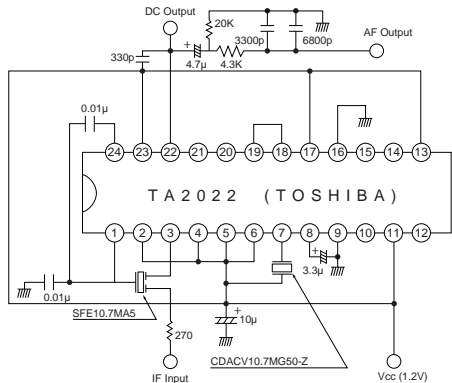


Input signal conditions
 Input Level 100dBµ
 Mod.Freq. 1000Hz
 Freq.Dev. ±22.5kHz

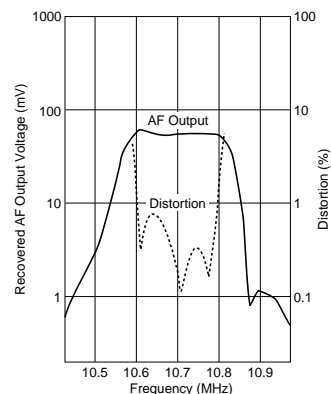



TEST CIRCUIT OF CDACV10.7MG69-Z

CDACV10.7MG69-A

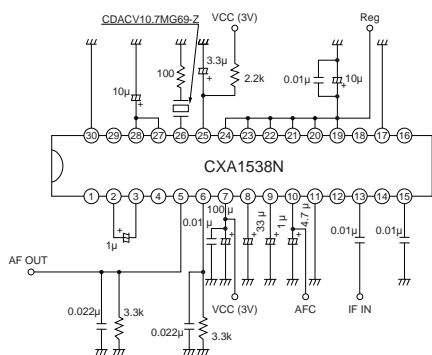

Input signal conditions
 Input Level 100dBµ
 Mod.Freq. 1000Hz
 Freq.Dev. ±75kHz

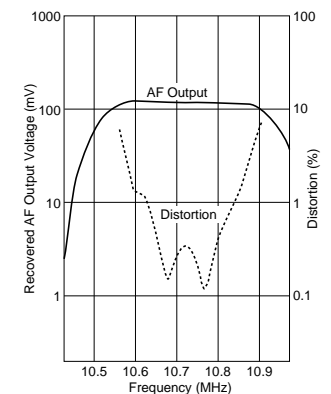

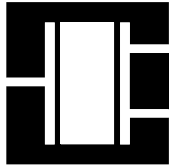


CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.




EXAMPLE OF APPLIED CIRCUIT

Application for LA1140 (Car Radio)

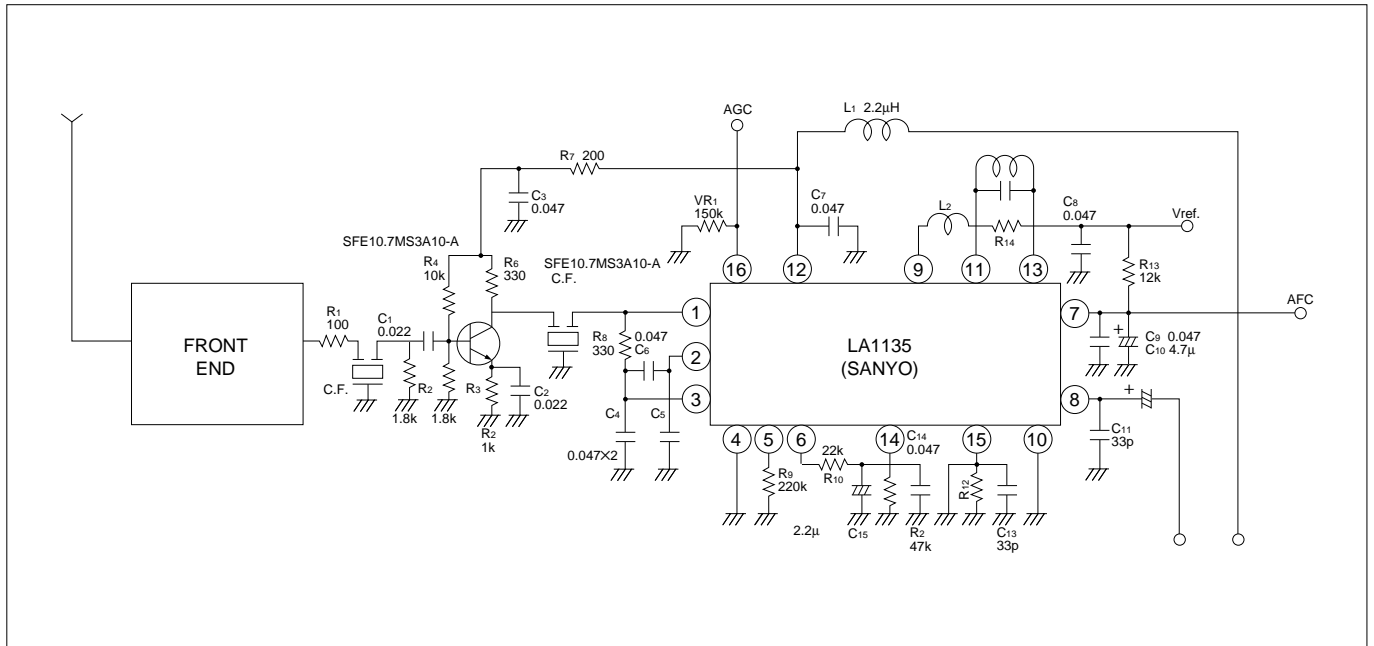

Application for CXA1019M (Radio)

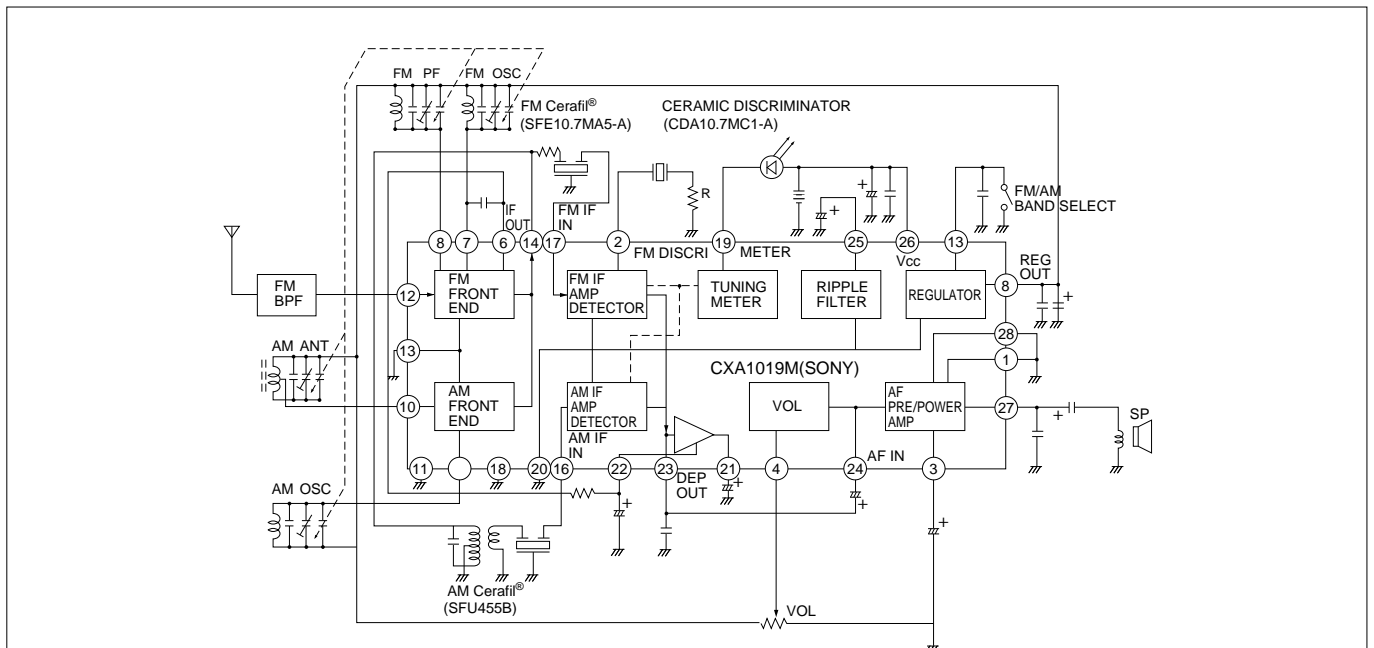

No adjustment is needed the FM detection stage due to use the ceramic discriminator.




CERAMIC FILTER

*CERAFIL® is the Registered Trademark of Murata's Ceramic Filters.



EXAMPLE OF APPLIED CIRCUIT

Application for TA8122AN/AF (Radio)

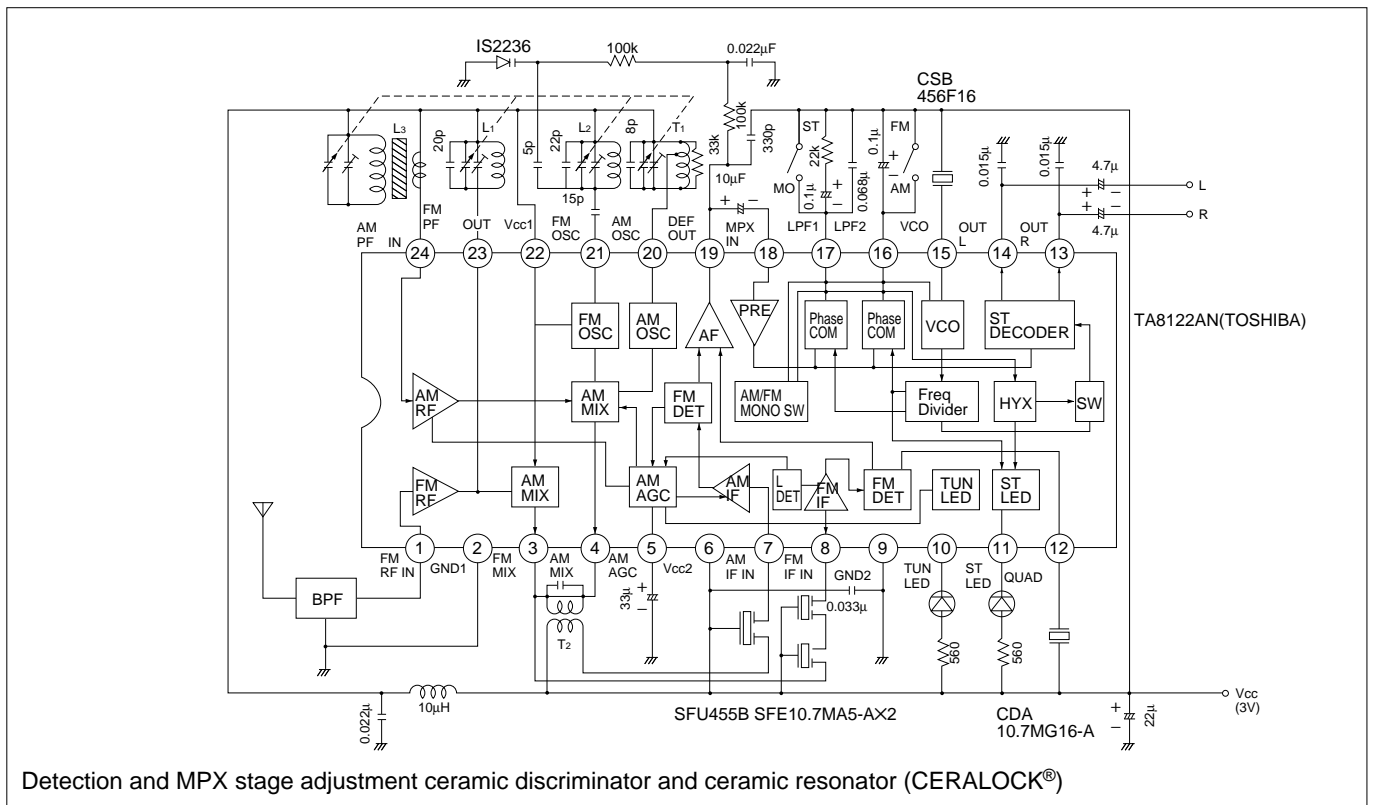

Detection and MPX stage adjustment ceramic discriminator and ceramic resonator (CERALOCK®)

**Note:****1. Export Control**

〈For customers outside Japan〉

Murata products should not be used or sold for use in the development, production, stockpiling or utilization of any conventional weapons or mass-destructive weapons (nuclear weapons, chemical or biological weapons, or missiles), or any other weapons.

〈For customers in Japan〉

For products which are controlled items subject to "the Foreign Exchange and Foreign Trade Control Law" of Japan, the export license specified by the law is required for export.

2. Please contact our sales representatives or engineers before using our products listed in this catalog for the applications requiring especially high reliability what defects might directly cause damage to other party's life, body or property (listed below) or for other applications not specified in this catalog.

- ① Aircraft equipment
- ② Aerospace equipment
- ③ Undersea equipment
- ④ Medical equipment
- ⑤ Transportation equipment (automobiles, trains, ships, etc.)
- ⑥ Traffic signal equipment
- ⑦ Disaster prevention / crime prevention equipment
- ⑧ Data-processing equipment
- ⑨ Applications of similar complexity or with reliability requirements comparable to the applications listed in the above

3. Product specifications in this catalog are as of May 1998, and are subject to change or stop the supply without notice. Please confirm the specifications before ordering any product. If there are any questions, please contact our sales representatives or engineers.**4. The categories and specifications listed in this catalog are for information only. Please confirm detailed specifications by checking the product specification document or requesting for the approval sheet for product specification, before ordering.****5. Please note that unless otherwise specified, we shall assume no responsibility whatsoever for any conflict or dispute that may occur in connection with the effect of our and/or third party's intellectual property rights and other related rights in consideration of your using our products and/or information described or contained in our catalogs. In this connection, no representation shall be made to the effect that any third parties are authorized to use the rights mentioned above under licenses without our consent.****6. None of ozone depleting substances (ODS) under the Montreal Protocol is used in manufacturing process of us.**

<http://www.murata.co.jp/products/>

Head office

2-26-10, Tenjin Nagaokakyo-shi, Kyoto 617-8555, Japan Phone:81-75-951-9111

Marketing Group

1874 Sumiyoshi-cho Kizuki, Nakahara-ku Kawasaki, 211-0021, Japan
Phone:81-44-422-5153 Fax:81-44-433-0798