

#### **Central Office Interface Circuit**

**Preliminary Information** 

Features ISSUE 3 September 1997

- Supports Loop Start and Ground Start protocols
- 2-4 Wire conversion
- Programmable Input Impedance, Network Balance Impedance and gains
- Three relay drivers
- Line state detection outputs
- 15mA operation allowing long line length capability
- On-hook reception for Caller Line Identification
- Meets FCC Part 68 Leakage Current Requirements

#### **Applications**

Interface to Central Office telephone line for

- PBX
- Key Telephone System
- · Terminal Equipment
- Digital Loop Carrier
- Wireless Local Loop

#### **Ordering Information**

MH88632B 40 Pin SIL Package MH88632BT 40 Pin 90° Package **0°C to 70°C** 

#### Description

The Mitel MH88632B Central Office Interface Circuit provides a complete analog and signalling link between audio switching equipment and a subscriber line. The device is available in a single in line package for high packing densities or in a 90° package for reduced card clearance.

The device is fabricated using thick film hybrid technology for optimum circuit design and very high reliability.

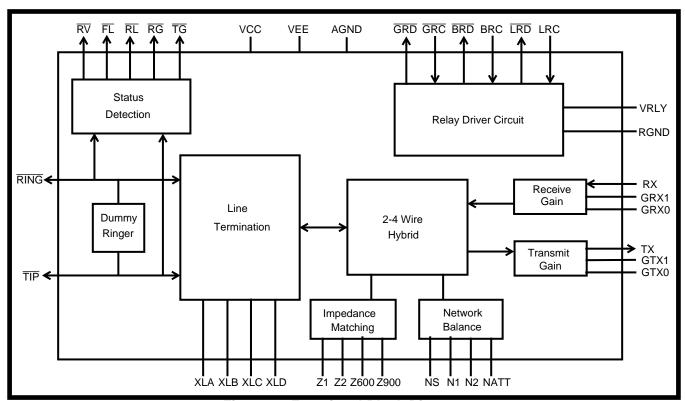


Figure 1 - Functional Block Diagram

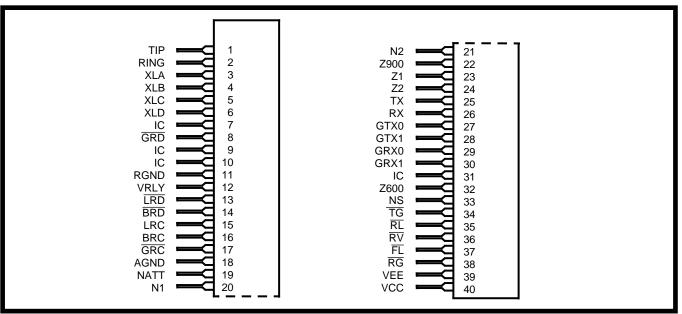


Figure 2 - Pin Connections

### **Pin Description**

Pin#	Name	Description
1	TIP	<b>Tip Lead.</b> Connects to the Tip lead of a telephone line usually via an external protection circuit.
2	RING	<b>Ring Lead.</b> Connects to the Ring lead of a telephone line usually via an external protection circuit.
3	XLA	<b>Loop Relay Contact A.</b> Connects to XLB through relay contacts (K1A) when the relay is energized.
4	XLB	<b>Loop Relay Contact B.</b> Connects to XLA through relay contacts (K1A) when the relay is energized.
5	XLC	<b>Loop Relay Contact C.</b> Connects to XLD through relay contacts (K1B) when the relay is energized.
6	XLD	<b>Loop Relay Contact D.</b> Connects to XLC through relay contacts (K1B) when the relay is energized.
7	IC	Internal Connection. No connection should be made to this pin.
8	GRD	<b>Ground Ring Lead Relay Drive (Output).</b> Connects to the Ground Ring Lead Relay coil (K3) and is controlled by GRC.
9	IC	Internal Connection. No connection should be made to this pin.
10	IC	Internal Connection. No connection should be made to this pin.
11	RGND	Relay Ground. Return path for relay supply voltage.
12	VRLY	Relay Positive Supply Voltage. Normally +5V. Connects to all relay coils and the relay supply voltage.
13	LRD	Loop Relay Drive (Output). Connects to the Loop Relay coil (K1) and is controlled by LRC.
14	BRD	Bias Relay Drive (Output). Connects to the Bias Relay coil (K2) and is controlled by BRC.
15	LRC	<b>Loop Relay Control (Input).</b> A logic 1 activates $\overline{\text{LRD}}$ . The Loop Relay (K1) is used for placing the Line Termination across Tip and Ring.

## **Pin Description (continued)**

I III Des	cription	(continued)
16	BRC	<b>Bias Relay Control (Input).</b> A logic 1 activates $\overline{BRD}$ . The Bias Relay (K2) is used to connect Tip and Ring to -48V via bias resistors. This input should be connected to logic 0 when not used.
17	GRC	<b>Ground Ring Relay Control (Input).</b> A logic 0 activates $\overline{GRD}$ . The Ground Ring Lead Relay (K3) is used to connect Ring to AGND via a bias resistor. This input should be connected to logic 1 when not used.
18	AGND	<b>Analog Ground.</b> 4-Wire Ground. Normally connects to system ground. This pin must be connected to the system ground in Ground Start applications.
19	NATT	<b>Network Balance AT&amp;T Node.</b> Used when setting the Network Balance Impedance to AT&T compromise network.
20	N1	<b>Network Balance Node 1.</b> Used when a Network Balance Impedance which differs from the Input Impedance is required or when NATT is used.
21	N2	<b>Network Balance Node 2.</b> Used when a Network Balance Impedance which differs from the Input Impedance is required.
22	Z900	Input Impedance 900 $\Omega$ Node. Connects to Z1 when selecting an Input Impedance of 900 $\Omega$ .
23	Z1	Input Impedance Node 1. Used when setting the Input Impedance.
24	Z2	Input Impedance Node 2. Used when a user defined Input Impedance is required.
25	TX	Transmit (Output). 4-Wire ground (AGND) referenced analog output.
26	RX	Receive (Input). 4-Wire ground (AGND) referenced analog input.
27	GTX0	Transmit Gain Node 0. Connects to GTX1 for 0dB transmit gain.
28	GTX1	<b>Transmit Gain Node 1.</b> Connects to GTX0 for 0dB transmit gain or via a resistor to AGND for transmit gain programming.
29	GRX0	Receive Gain Node 0. Connects to GRX1 for 0dB receive gain.
30	GRX1	<b>Receive Gain Node 1.</b> Connects to GRX0 for 0dB receive gain or via a resistor to AGND for receive gain programming.
31	IC	Internal Connection. No connection should be made to this pin.
32	Z600	<b>Loop Impedance 600</b> $\Omega$ <b>Node.</b> Connects to Z1 when selecting an Input Impedance of $600\Omega$ .
33	NS	Network Balance Setting (Input). Used to select the Network Balance impedance.
34	TG	<b>Tip Lead Ground Detect (Output).</b> A logic 0 output indicates that the Tip lead is at ground (AGND) potential.
35	RL	Reverse Loop Detect (Output). In the on-hook state, a logic 0 output indicates that reverse loop battery is present. In the off-hook state, a logic 0 output indicates that reverse loop current is present.
36	RV	Ringing Voltage Detect (Output). A logic low indicates that ringing voltage is across the Tip and Ring leads.
37	FL	Forward Loop Detect (Output). In the on-hook state, a logic 0 output indicates that forward loop battery is present. In the off-hook state, a logic 0 output indicates that forward loop current is present.
38	RG	Ring Lead Ground Detect (Output). A logic 0 output indicates that the Ring lead is at ground (AGND) potential.
39	VEE	Negative Supply Voltage5V DC
40	VCC	Positive Supply Voltage. +5V DC
70	100	1 contro cuppiy voltage. 10 v 20

#### **Functional Description**

The MH88632B is a Central Office Interface Circuit (COIC). It is used to correctly terminate a Central Office 2-Wire telephone line. The device provides a signalling link and a 2-4 Wire line interface between the telephone line and subscriber equipment. The subscriber equipment can include Private Branch Exchanges (PBX's), Key Telephone Systems, Terminal Equipment, Digital Loop Carriers and Wireless Local Loops.

All descriptions assume that the device is connected as in the application circuit shown in Figure 3.

#### **Isolation Barrier**

The MH88632B provides an isolation barrier which is designed to meet FCC Part 68 (November 1987) Leakage Current Requirements.

#### **External Protection**

An external protection circuit may be required to assist in preventing overvoltage damage to the device and the subscriber equipment in which it is incorporated. The type of protection required is dependant on the application and the regulatory standards. Please contact the governing regulatory body and local approvals testing houses for more assistance.

This protection is shown in block form in Figure 3.

#### **Suitable Markets**

The programmability offered by the MH88632B enhances its suitability for use throughout the world. However, care should be taken that all regulatory requirements, e.g. isolation and DC termination, are being fulfilled for the particular application in which the device is intended to be used.

#### **Line Termination**

When LRC is at a logic 1,  $\overline{LRD}$  is taken to a logic 0 which energizes the Loop Relay (K1), connecting XLA to XLB and XLC to XLD. This places a line termination across Tip and Ring. The device can be considered to be in an off-hook state and DC loop current will flow. The line termination consists of a DC resistance and an AC impedance. When LRC is

at a logic 0, the Line Termination is removed from across Tip and Ring.

An internal Dummy Ringer is permanently connected across Tip and Ring which is a series AC load of  $(17k\Omega+330nF)$ . This represents a mechanical telephone ringer and allows ringing voltages to be sensed. This load can be considered negligible when the line has been terminated.

Depending on the Network Protocol being used the line termination can seize the line for an outgoing call, terminate an incoming call, or if applied and disconnected at the correct rate can be used to generate dial pulse signals.

The DC line termination circuitry provides the line with an active DC load which is equivalent to a DC resistance of between  $190\Omega$  and  $290\Omega$  dependant on the loop current.

#### **AC Input Impedance**


The Input Impedance (Zin) is the AC impedance that the MH88632B places across Tip and Ring in order to terminate the telephone line. It can be user defined, set to  $600\Omega$  or set to  $900\Omega$ .

To select a  $600\Omega$  Input Impedance, Z1 should be connected directly to Z600. No connection should be made to Z2 or Z900.

To select a  $900\Omega$  Input Impedance, Z1 should be connected directly to Z900. No connection should be made to Z2 or Z600.

In order to user define the Input Impedance an impedance network should be placed between Z1 and Z2. This should be equivalent to 10 times the required Input Impedance and must be greater than  $100\Omega$  at 3.4kHz. No connection should be made to Z600 or Z900.

For example, to implement an Input Impedance of  $220\Omega+(820\Omega//115nF)$  an impedance network of  $2200\Omega+(8200\Omega//11.5nF)$  should be connected between Z1 and Z2 as shown below.

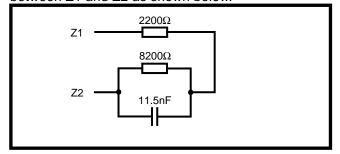

User defined Input Impedances can be used to satisfy most national requirements. See Table 1.

All connections should be kept as short as possible.

#### **Network Balance Impedance**

The MH88632B's Network Balance Impedance can be selected to mirror the Input Impedance, to be AT&T compromise or set to a user defined value. Thus, the Network Balance Impedance can comply with most national requirements.

With NS at logic 0, the Network Balance Impedance is selected to mirror the Input Impedance of the device. No connection should be made to NATT, N1 and N2.

To select a Network Balance Impedance equal to AT&T Compromise (i.e.  $350\Omega + (1k\Omega//210nF)$ ), NS should be set to a logic 1 and a direct connection made between NATT and N1. No connection should be made to N2.

To set a user defined Network Balance Impedance NS is set to a logic 1. An impedance network which is 10 times the required Network Balance Impedance must be placed between N1 and AGND. Another impedance network must be placed between N1 and N2 which is 10 times the selected input impedance of the device.

For example, to implement a Network Balance Impedance of  $220\Omega + (820\Omega //115 nF)$ , an impedance network of  $2200\Omega + (8200\Omega //11.5 nF)$  must be connected between N1 and AGND. An impedance network equal to 10 times the selected Input Impedance must be connected between N1 and N2. See Table 2.

All connections should be kept as short as possible.

#### 2-4 Wire Conversion

The device converts the balanced 2-Wire input, presented by the line at Tip and Ring, to a ground referenced signal at TX. This circuit operates with or without loop current; signal reception with no loop current is required for on-hook reception enabling the detection of Caller Line Identification signals.

Conversely the device converts the ground referenced signal input at RX, to a balanced 2-Wire signal across Tip and Ring.

The 4-Wire side (TX and RX) can be interfaced to a filter/codec, such as the Mitel MT896X, for use in digital voice switched systems.

During full duplex transmission, the signal at Tip and Ring consists of both the signal from the device to the line and the signal from the line to the device. The signal input at RX, being sent to the line, must not appear at the output TX. In order to prevent this, the device has an internal cancellation circuit. The measure of attenuation is Transhybrid Loss (THL).

#### **Programmable Transmit and Receive Gain**

The Transmit Gain (GTX) of the MH88632B is the gain from the balanced signal across Tip and Ring to the ground referenced signal at TX. It is programmed by making a connection to GTX1. A direct connection from GTX1 to GTX0 selects a gain of 0dB. A direct connection from GTX1 to AGND selects a gain of +6dB. Other gains can be programmed by connecting a resistor (R<sub>TX</sub>) between GTX1 and AGND. The value of resistor is selected using the following formulae.

$$R_{TX} = \frac{5000}{10^{(-GTX/20)} - 0.5}$$

$$GTX = -20 \log(0.5 + \frac{5000}{R_{TX}})$$

The Receive Gain (GRX) of the MH88632B is the gain from the ground referenced signal at RX to the balanced signal across Tip and Ring. It is programmed by making a connection to GRX1. A direct connection from GRX1 to GRX0 selects a gain of 0dB. A direct connection from GRX1 to AGND selects a gain of +6dB. Other gains can be programmed by connecting a resistor (R<sub>RX</sub>) between GRX1 and AGND. The value of resistor is selected using the following formulae.

$$R_{RX} = \frac{5000}{10^{(-GRX/20)} - 0.5}$$

$$GRX = -20 \log(0.5 + \frac{5000}{R_{RX}})$$

For the correct programming of Transmit and Receive Gains the selected Input Impedance must match the specified telephone line characteristic impedance.

Both Gains are programmable in the range -12dB to +6dB. This wide range is capable of accommodating most system loss plans. See Tables 3 and 4.

#### Caller Line Identification

Caller Line Identification (CLI) provides the called party with the calling party telephone number. The Central Office will utilise the voice path of a regular loop-start telephone line when the MH88632B is in the on-hook state. The CLI information is typically a Frequency Shift Keyed (FSK) data signal which is output at TX.

#### **Supervisory Features**

#### **Line Status Detection Outputs**

The MH88632B supervisory circuitry provides the signalling status outputs which are monitored by the system controller. The supervisory circuitry is capable of detecting: ringing voltage; forward and reverse loop battery; forward and reverse loop current; grounded tip lead; and grounded ring lead.

If these Supervisory Features and the Control Features are used as indicated in Figure 3 they can implement common Network Protocols such as Loop-Start Signalling and Ground-Start Signalling.

#### 1. Ringing Voltage Detect Output (RV)

The  $\overline{RV}$  output provides a logic 0 when ringing voltage is detected across Tip and Ring. This detector includes a filter which ensures that the output toggles at the ringing cadence and not at the ringing frequency. Typically this output switches to a logic 0 after 50ms of applied ringing voltage and remains at a logic 0 for 50ms after ringing voltage is removed.

# 2. Forward Loop and Reverse Loop Detect Outputs (FL & RL)

The FL output provides a logic 0 when either forward loop battery or forward loop current is detected, that is the Ring pin voltage is negative with respect to Tip pin voltage.

The  $\overline{\text{RL}}$  output provides a logic 0 when either reverse loop battery or reverse loop current is detected, that is the Tip pin voltage is negative with respect to Ring pin voltage.

# 3. Tip Ground and Ring Ground Detect Outputs (TG & RG)

The  $\overline{TG}$  output provides a logic 0 when the Tip pin is at ground (AGND) potential.

The  $\overline{RG}$  output provides a logic 0 when the Ring pin is at ground (AGND) potential.

#### **Control Inputs**

The MH88632B accepts control signals from the system controller at the inputs Loop Relay Control (LRC), Bias Relay Control (BRC) and Ground Ring Relay Control ( $\overline{GRC}$ ). These energize the relay drive outputs Loop Relay Drive ( $\overline{LRD}$ ), Bias Relay Drive ( $\overline{BRD}$ ) and Ground Ring Relay Drive ( $\overline{GRD}$ ) respectively. Each output is active low and has an internal clamp diode to VRLY.

The intended use of each of these relay drivers is shown in Figure 3. LRC is being used to add and remove the Line Termination from across Tip and Ring. BRC is used to connect Tip and Ring to -48V via external bias resistors. GRC is controlling the connection of Ring to AGND via an external bias resistor.

If these Control Features and the Supervisory Features are used as intended they can be used to implement common Network Protocols such as Loop-Start Signalling and Ground-Start Signalling.

#### **Mechanical Information**

See Figure 9 for mechanical specifications for the MH88632B and Figure 10 for mechanical specifications for the MH88632BT.

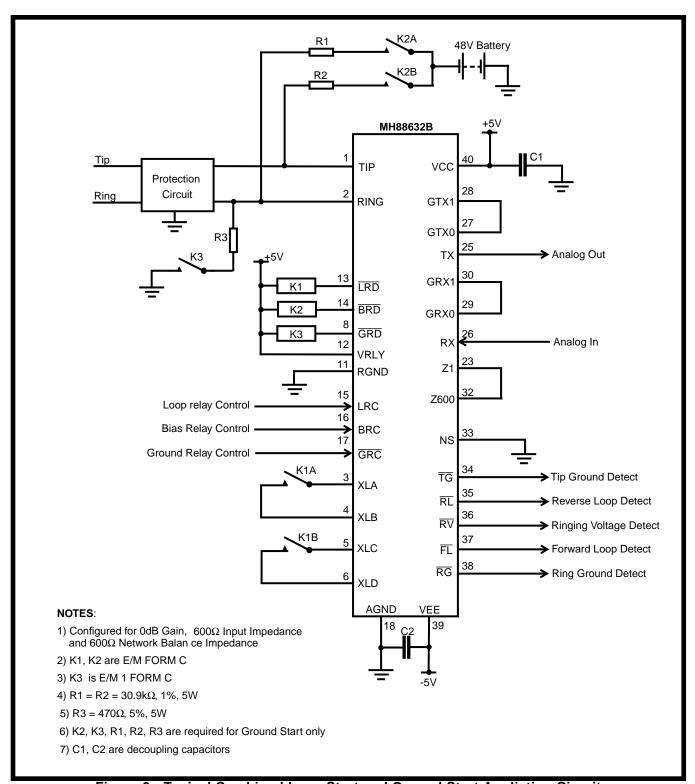


Figure 3 - Typical Combined Loop Start and Ground Start Appliation Circuit

### **Input Impedance Settings**

Z2	Z1	Z600	Z900	Resulting input impedance (Zin)
NA	Connect Z1 to Z600		NA	600Ω
NA	Connect Z1 to Z900	NA	Connect Z1 to Z900	900Ω
Connect netwo	rk from Z1 to Z2	NA	NA	0.1 x impedance between Z1 & Z2

Note: NA indicates high impedance ( $10k\Omega$ ) connection to this pin does not effect the resulting Input Impedance

#### **Network Balance Settings**

NS (Input)	N2	N1	NATT	Resulting input impedance (Zin)		
Low	NA	NA	NA	Equivalent to Zin		
High	NA	Connect N	I1 to NATT	AT&T compromise (350 $\Omega$ + 1k $\Omega$ // 210nF) Zin must be 600 $\Omega$		
High	Connect networ AGND equivaler NETBAL. Conne from N1 to N2 e x Zin.	nt to 10 x ect network	NA	0.1 x impedance between N1 & N2		

Notes: NA indicates high impedance (10kΩ) connection to this pin does not effect the resulting Network Balance Impedance. Low indicates Logic 0.

High indicates Logic 1.

## **Transmit Gain Programming**

Transmit Gain (dB)	R <sub>TX</sub> Resistor Value (Ω)	Notes
+6.0	No Resistor	
+4.0	38.3k	Results in 0dB overall gain when used with Mitel A-law codec (i.e. MT8967)
+3.7	32.4k	Results in 0dB overall gain when used with Mitel $\mu$ -law codec (i.e. MT8966)
0.0	GTX0 to GTX1	
-3.0	5.49k	
-6.0	3.32k	
-12.0	1.43k	

Note: Overall gain refers to the receive path of PCM to 2-Wire.

## **Receive Gain Programming**

Receive Gain (dB)	R <sub>RX</sub> Resistor Value (Ω)	Notes
+6.0	No Resistor	
0.0	GRX0 to GRX1	
-3.0	5.49k	
-3.7	4.87k	Results in 0dB overall gain when used with Mitel A-law codec (i.e. MT8967)
-4.0	4.64k	Results in 0dB overall gain when used with Mitel $\mu$ -law codec (i.e. MT8966)
-6.0	3.32k	
-12.0	1.43k	

Note: Overall gain refers to the transmit path of 2-wire to PCM.

## **Absolute Maximum Ratings\***

	Parameter	Sym	Min	Max	Units	Comments
1	DC Supply Voltage	V <sub>CC</sub>	-0.3	7	V	
		V <sub>EE</sub>	0.3	-7	V	
2	DC Relay Voltage	$V_{RLY}$	-0.3	20	V	
3	Storage Temperature	T <sub>s</sub>	-55	+125	°C	
4	Ring Trip Current	I <sub>TRIP</sub>		180	mArms	250ms 10% duty cycle or
						500ms single shot

<sup>\*</sup>Exceeding these values may cause permanent damage. Functional operation under these conditions is not implied.

## **Recommended Operating Conditions**

	Parameter	Sym	Min	Typ <sup>‡</sup>	Max	Units	Comments
1	DC Supply Voltage	V <sub>CC</sub>	4.75	5	5.25	V	
		$V_{EE}$	-4.75	-5	-5.25	V	
2	DC Relay Voltage	$V_{RLY}$		5	15	V	
3	Operating Temperature	T <sub>OP</sub>	0	25	70	°C	

<sup>‡</sup>Typical figures are at 25° C with nominal 5V supplies and areor design aid only.

## DC Electrical Characteristics<sup>†</sup>

		Characteristics	Sym	Min	Typ <sup>‡</sup>	Max	Units	Test Conditions
1		Supply Current	I <sub>DD</sub> I <sub>EE</sub>		14 10	15 13	mA mA	
2		Power Consumption	PC		120	147	mW	
3	FL RL RG TG RV	Low Level Output Voltage High Level Output Voltage	V <sub>OL</sub> V <sub>OH</sub>	2.4		0.5	V V	I <sub>OL</sub> = 4mA I <sub>OH</sub> = 0.4mA
4	ERD BRD GRD	Sink Current, Relay to V <sub>CC</sub> Clamp Diode Current	I <sub>OL</sub> I <sub>CD</sub>	100 150			mA mA	V <sub>OL</sub> = 0.35V
5	NS LRC BRC GRC	Low Level Input Voltage High Level Input Voltage	V <sub>IL</sub> V <sub>IH</sub>	2		0.8	V V	
6	NS LRC BRC GRC	High Level Input Current Low Level Input Current	I <sub>IH</sub> I <sub>IL</sub>			1 1	μA μA	

T Electrical Characteristics are over recommended operating conditions unless otherwise stated. ‡ Typical figures are at 25°C with nominal 5V supplies and are for design aid only.

# Loop Electrical Characteristics<sup>†</sup>

	Characteristics	Sym	Min	Typ <sup>‡</sup>	Max	Units	Test Conditions
1	Ringing Voltage	V <sub>R</sub>	20	90	130	Vrms	
2	Ringing Frequency		17	20	68	Hz	
4	Operating Loop Current		15		90	mA	
5	Off-Hook DC Resistance		190	275	290	Ω	
6	Leakage Current (Tip-Ring to AGND)				7	mArms	@1000VAC
7	FL Threshold Tip-Ring Voltage Detect (On-hook) Tip-Ring Current Detect (Off-hook)		12 6		21 12	V mA	LRC = 0V LRC = 5V
8	RL Threshold Tip-Ring Voltage Detect (On-hook) Tip-Ring Current Detect (Off-hook)		-12 -6		-21 -12	V mA	LRC = 0V LRC = 5V
9	TG and RG Detect Threshold		-12		-14	V	

<sup>†</sup>Electrical Characteristics are over recommended operating conditions unless otherwise stated. ‡Typical figures are at 25°C with nominal 5V supplies and are 6r design aid only.

## **AC Electrical Characteristics**<sup>†</sup>

	Characteristics		Sym	Min	Typ <sup>‡</sup>	Max	Units	Test Conditions
1	2-wire Input Impedance	Note 1	Zin		600 900 Ext.		Ω Ω Ω	
2	Return Loss at 2-Wire (Zin = $600\Omega$ )		RL	20 26 20	40 48 46		dB dB dB	Test Circuit Fig. 6 200-500 Hz 500-1000 Hz 1000-3400 Hz
3	Return Loss at 2-Wire ( $Zin = 900\Omega$ )		RL	22 26 24			dB dB dB	200-500 Hz 500-1000 Hz 1000-3400 Hz
4	Longitudinal to Metallic Balanc	e Note 2		58 58 55 53 51	64 63 61 57 54		dB dB dB dB	Test Circuit Fig. 8 200 Hz 1000 Hz 2000 Hz 3000 Hz 4000 Hz
5	Metallic to Longitudinal Balanc	e Note 2		60 40	62 62		dB dB	Test Circuit Fig. 7 200-1000 Hz 1000 -4000 Hz
6	Transhybrid Loss (Zin = Net = $600\Omega$ )	lote 2 & 3	THL	18 21	25 33		dB dB	200-3400 Hz 500-2500 Hz
7	Transhybrid Loss (Zin = Net = $900\Omega$ )	lote 2 & 3	THL	18 21			dB dB	200-3400 Hz 500 -2500 Hz
8	Transhybrid Loss (Zin =600 $\Omega$ , Net = AT&T) N	ote 2 & 3	THL	18 21	30		dB dB	200-3400 Hz 500-2500 Hz
9	Input Impedance At RX				10		kΩ	
10	Output Impedance at TX					5	Ω	
11	Transmit Gain, (2-Wire/TX): Default Gain(0dB) Programmable Range			-0.2 -12	0	0.2 6	dB dB	Test Circuit Fig. 5 Input 0.5V 1000Hz 1000Hz

## **AC Electrical Characteristics**<sup>†</sup> (continued)

	Characteristics	Sym	Min	Typ <sup>‡</sup>	Max	Units	Test Conditions
12	Frequency response gain (relative to gain at 1kHz)  Note 2		-1.3 -0.3 -0.3	0 0 0	0.1 0.1 0.1	dB dB dB	Test Circuit Fig. 5 Input 0.5V 200 Hz 300 Hz 3000 Hz
			-0.7	0	0.1	dB	3400 Hz
13	Receive Gain, (RX/2-Wire):  Default Gain (0dB)		-0.2	0	0.2	dB	Test Circuit Fig. 4 Input 0.5V 1000Hz
	Programmable Range		-12		6	dB	1000Hz
14	Frequency response gain (relative to gain at 1kHz)  Note 2		-1.3 -0.3 -0.3 -0.7	0 0 0 0	0.1 0.1 0.1 0.1	dB dB dB dB	Test Circuit Fig. 4 Input 0.5V 200 Hz 300 Hz 3000 Hz 3400 Hz
15	Signal Output Overload Level at 2-wire at TX		4 4			dBm dBm	THD < 5% Ref. $600\Omega$ Ref. $600\Omega$
16	Total Harmonic Distortion at 2-Wire at TX	THD		0.2 0.4	1	% %	Input 0.5V, 1kHz
17	Idle Channel Noise at 2-Wire at TX	Nc		10 11	13 13	dBrn C dBrn C	
18	Common Mode Rejection Ratio	CMRR	48	65		dB	540Hz Test Circuit Fig. 8
19	Power Supply Rejection Ratio at 2-Wire and TX $_{\rm Vcc}$ $_{\rm V_{EE}}$	PSRR	20 20	42 28		dB dB	Ripple 0.1V, 1kHz
20	On-Hook Transmit Gain (2-Wire/TX) Default Gain 0dB		-1	0	1	dB	1000Hz
	Programmable Range		-12	_	6	dB	1000Hz
21	On-Hook frequency Response Gain (relative to off-hook gain)		-1	0	1	dB	Input 0.5V, 1kHz

Electrical Characteristics are over recommended operating conditions unless otherwise stated  $\ddagger$ Typical figure are at 25°C with nominal 5V supplies and are for design aid only \*All test conditions use a test source impedance which matches the device's input impedance dBm is referenced to  $600\Omega$  unless otherwise stated

"Net" indicates network balance impedance

Notes: Impedance set by external network equal to 10 times the required input impedance
Test conditions use a transmit and receive gain set to 0dB default

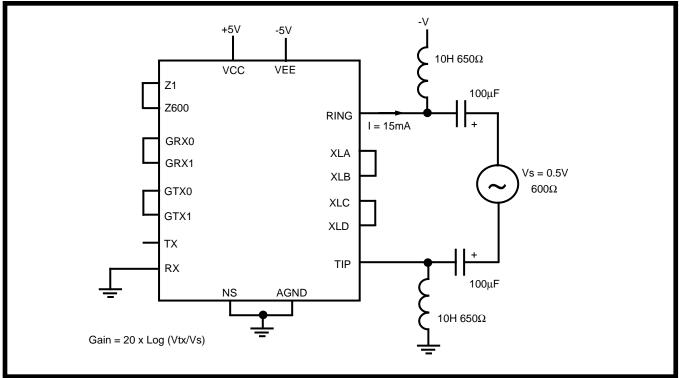


Figure 4 - 2-4 Wire Gain Test Circuit

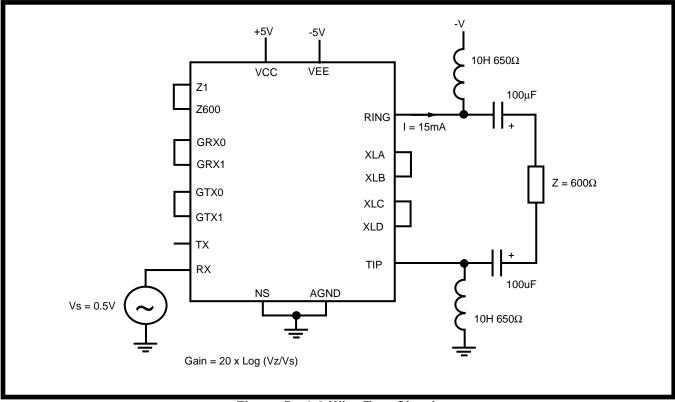


Figure 5 - 4-2 Wire Test Circuit

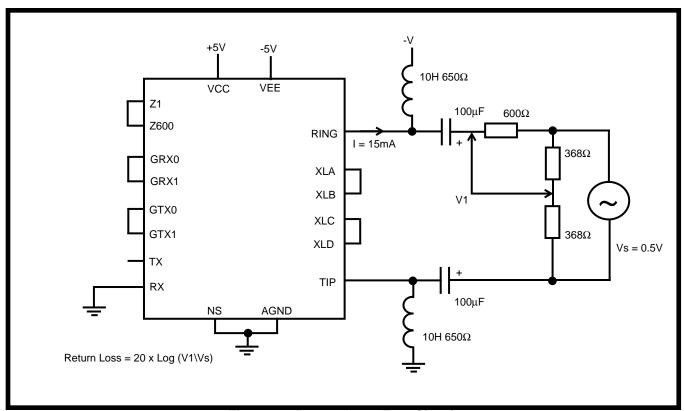


Figure 6 - Return Loss Test Circuit

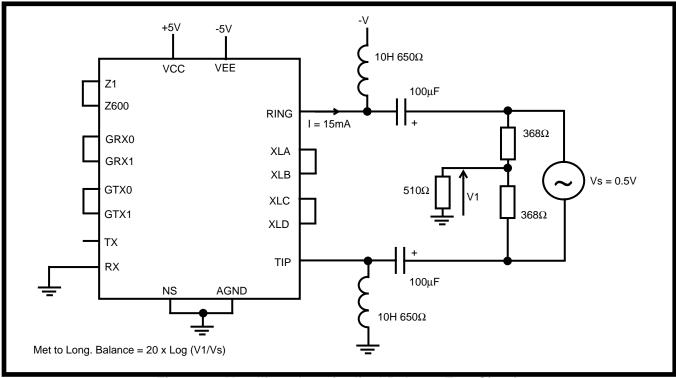


Figure 7 - Metallic to Longitudinal Balance Test Circuit

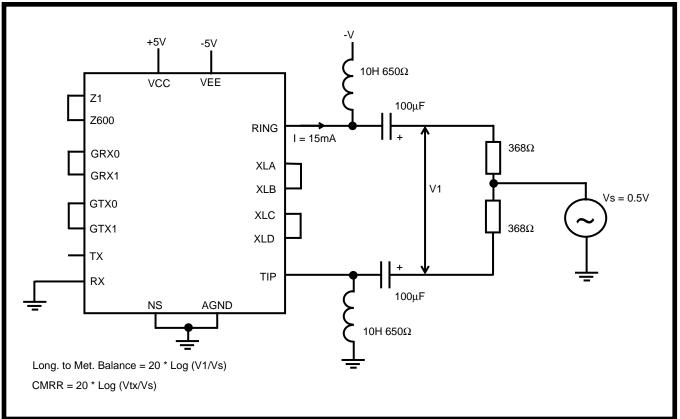


Figure 8 - Longitudinal to Metallic Balance and CMRR Test Circuit

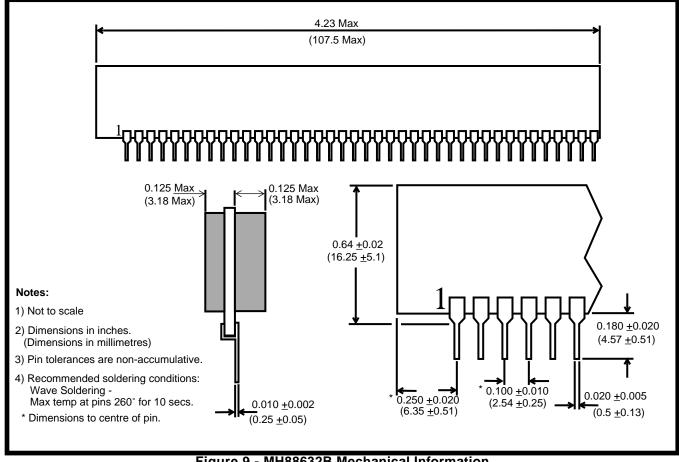


Figure 9 - MH88632B Mechanical Information

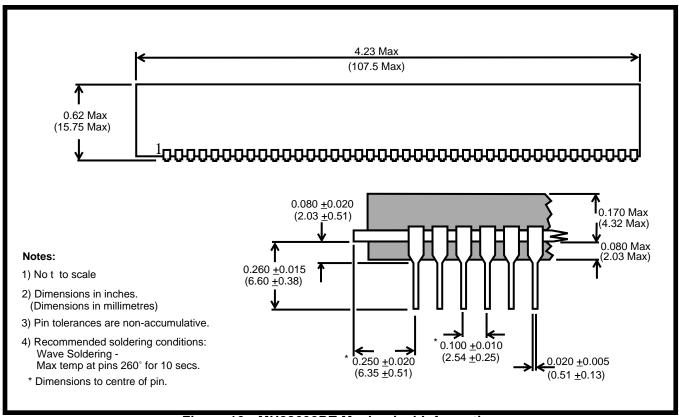


Figure 10 - MH88632BT Mechanical Information

Notes:



http://www.mitelsemi.com

World Headquarters - Canada

Tel: +1 (613) 592 2122 Fax: +1 (613) 592 6909

Asia/Pacific

Tel: +65 333 6193 Fax: +65 333 6192 Europe, Middle East, and Africa (EMEA)

Tel: +44 (0) 1793 518528 Fax: +44 (0) 1793 518581

Information relating to products and services furnished herein by Mitel Corporation or its subsidiaries (collectively "Mitel") is believed to be reliable. However, Mitel assumes no liability for errors that may appear in this publication, or for liability otherwise arising from the application or use of any such information, product or service or for any infringement of patents or other intellectual property rights owned by third parties which may result from such application or use. Neither the supply of such information or purchase of product or service conveys any license, either express or implied, under patents or other intellectual property rights owned by Mitel or licensed from third parties by Mitel, whatsoever. Purchasers of products are also hereby notified that the use of product in certain ways or in combination with Mitel, or non-Mitel furnished goods or services may infringe patents or other intellectual property rights owned by Mitel.

This publication is issued to provide information only and (unless agreed by Mitel in writing) may not be used, applied or reproduced for any purpose nor form part of any order or contract nor to be regarded as a representation relating to the products or services concerned. The products, their specifications, services and other information appearing in this publication are subject to change by Mitel without notice. No warranty or guarantee express or implied is made regarding the capability, performance or suitability of any product or service. Information concerning possible methods of use is provided as a guide only and does not constitute any guarantee that such methods of use will be satisfactory in a specific piece of equipment. It is the user's responsibility to fully determine the performance and suitability of any equipment using such information and to ensure that any publication or data used is up to date and has not been superseded. Manufacturing does not necessarily include testing of all functions or parameters. These products are not suitable for use in any medical products whose failure to perform may result in significant injury or death to the user. All products and materials are sold and services provided subject to Mitel's conditions of sale which are available on request.

M Mitel (design) and ST-BUS are registered trademarks of MITEL Corporation Mitel Semiconductor is an ISO 9001 Registered Company Copyright 1999 MITEL Corporation All Rights Reserved Printed in CANADA

**North America** 

Tel: +1 (770) 486 0194

Fax: +1 (770) 631 8213